

Nighat Yasmin Ph.D.

Introduction to **AutoCAD® 2021 for Civil Engineering Applications**

Learning to use AutoCAD® for Civil Engineering Projects



Visit the following websites to learn more about this book:



TABLE OF CONTENTS

| | |
|--|-----------|
| 1. INTRODUCTION TO ENGINEERING GRAPHICS..... | 1 |
| 1.1. LEARNING OBJECTIVES | 1 |
| 1.2. ENGINEERING PROBLEM..... | 2 |
| 1.3. TECHNICAL DRAWING..... | 2 |
| 1.4. DRAWING METHODS | 2 |
| 1.5. DRAWING STANDARDS..... | 4 |
| 1.6. SCALE | 4 |
| 1.6.1. <i>Type of scale</i> | 4 |
| 1.6.1.1. Representative Fraction..... | 4 |
| 1.6.1.2. Equivalence relation..... | 5 |
| 1.6.1.3. Converting RF to ER..... | 5 |
| 1.6.1.4. Graphical representation | 6 |
| 1.7. SCALE OF A DRAWING..... | 7 |
| 1.7.1. <i>Full-scale</i> | 7 |
| 1.7.2. <i>Large scale</i> | 7 |
| 1.7.3. <i>Small scale</i> | 7 |
| 1.8. COMPUTER AIDED GRAPHICS..... | 8 |
| 1.8.1. <i>AutoCAD 2021</i> | 8 |
| 1.8.2. <i>AutoCAD and drawing scale</i> | 8 |
| 2. GETTING STARTED WITH AUTOCAD 2021 | 11 |
| 2.1. LEARNING OBJECTIVES | 11 |
| 2.2. INTRODUCTION..... | 12 |
| 2.3. FOCUS OF THE BOOK | 16 |
| 2.4. INITIAL SETUP | 17 |
| 2.5. TYPICAL WINDOW SCREEN | 18 |
| 2.6. DRAWING AREA | 19 |
| 2.6.1. <i>Model space</i> | 21 |
| 2.6.2. <i>Layout</i> | 22 |
| 2.6.3. <i>Display/hide Model and Layout tabs</i> | 23 |
| 2.7. STATUS BAR..... | 24 |
| 2.8. THE CURSOR | 26 |
| 2.8.1. <i>Location of the cursor</i> | 27 |
| 2.8.2. <i>Size of the intersecting lines</i> | 27 |
| 2.8.3. <i>Size of the aperture</i> | 28 |
| 2.8.4. <i>Color of the cursor</i> | 28 |
| 2.9. WORLD COORDINATE SYSTEM (WCS)..... | 29 |
| 2.10. SCROLL BARS..... | 30 |
| 2.11. VIEWCUBE  | 30 |
| 2.11.1. <i>ViewCube settings</i> | 31 |
| 2.11.2. <i>View switching</i> | 32 |
| 2.12. DRAWING DISPLAY FORMAT..... | 33 |
| 2.13. COMMAND LINE WINDOW | 35 |
| 2.13.1. <i>Move the CLW</i> | 35 |
| 2.13.2. <i>Display/hide the CLW</i> | 36 |
| 2.13.3. <i>Resize the CLW</i> | 36 |
| 2.13.4. <i>Change the color of the CLW</i> | 37 |
| 2.13.5. <i>Change the font of the CLW</i> | 38 |

| | | |
|-----------|--|----|
| 2.14. | RIBBON..... | 39 |
| 2.14.1. | <i>Color scheme</i> | 40 |
| 2.14.2. | <i>Relocate</i> | 40 |
| 2.14.3. | <i>Hide/Display a ribbon</i> | 42 |
| 2.14.4. | <i>States</i> | 45 |
| 2.14.5. | <i>Ribbon's Tab</i> | 46 |
| 2.14.5.1. | Display/Hide Tabs | 46 |
| 2.14.5.2. | Tab relocation..... | 47 |
| 2.14.5.3. | New tab | 47 |
| 2.14.6. | <i>Ribbon's panel</i> | 52 |
| 2.14.6.1. | Panel components | 52 |
| 2.14.6.2. | Display/Hide panel..... | 54 |
| 2.14.6.3. | Panel relocation..... | 55 |
| 2.14.6.4. | Floating panel | 56 |
| 2.14.6.5. | Create new panel..... | 57 |
| 2.14.6.6. | Add panel to a tab | 59 |
| 2.14.6.7. | Add commands to a panel..... | 60 |
| 2.15. | WORKSPACE..... | 66 |
| 2.15.1. | <i>Save a workspace</i> | 66 |
| 2.15.2. | <i>Rename a workspace</i> | 67 |
| 2.15.3. | <i>Switch a workspace</i> | 68 |
| 2.15.4. | <i>Delete a workspace</i> | 69 |
| 2.16. | BASICS OF A DRAWING FILE..... | 69 |
| 2.17. | NEW DRAWING  | 70 |
| 2.18. | DRAWING'S NAME | 74 |
| 2.19. | DRAWING UNITS..... | 74 |
| 2.19.1. | <i>Length</i> | 76 |
| 2.19.2. | <i>Angle</i> | 77 |
| 2.19.3. | <i>Insertion scale</i> | 78 |
| 2.19.4. | <i>Convert measurements from ISO to ANSI (and vice versa)</i> | 79 |
| 2.20. | DRAWING LIMITS | 81 |
| 2.21. | GRID () AND SNAP () COMMANDS | 83 |
| 2.21.1. | <i>Toggle Grid and Snap in the model space</i> | 84 |
| 2.21.2. | <i>Toggle the Grid and Snap in the layout</i> | 85 |
| 2.21.3. | <i>Grid properties</i> | 86 |
| 2.21.3.1. | Grid style | 86 |
| 2.21.3.2. | Grid spacing..... | 86 |
| 2.21.3.3. | Grid behavior | 87 |
| 2.21.3.4. | Grid color..... | 88 |
| 2.21.4. | <i>Snap properties</i> | 88 |
| 2.21.4.1. | Snap spacing | 88 |
| 2.21.4.2. | Polar spacing..... | 88 |
| 2.21.4.3. | Snap type | 88 |
| 2.22. | SAVE A FILE..... | 90 |
| 2.22.1. | <i>Save As</i>  | 90 |
| 2.22.2. | <i>Save</i>  | 91 |
| 2.23. | OPEN A PRE-EXISTING FILE  | 92 |
| 2.24. | CLOSE A FILE | 94 |
| 2.25. | EXIT AUTOCAD | 95 |

| | |
|--|-----------|
| 3. BASICS OF 2-DIMENSIONAL DRAWINGS..... | 99 |
| 3.1. LEARNING OBJECTIVES | 99 |
| 3.2. INTRODUCTION..... | 100 |
| 3.3. DYNAMIC INPUT  | 100 |
| 3.3.1. <i>Toggle dynamic input</i> | 101 |
| 3.3.2. <i>Components of a dynamic input</i> | 101 |
| 3.3.2.1. Pointer input..... | 102 |
| 3.3.2.2. Dimension input..... | 103 |
| 3.3.2.3. Dynamic prompts..... | 105 |
| 3.3.3. <i>Drafting tooltip appearance</i> | 106 |
| 3.4. INPUT DATA | 107 |
| 3.4.1.1. Tab key | 107 |
| 3.4.1.2. Comma key | 108 |
| 3.4.1.3. Less than key..... | 109 |
| 3.4.1.4. Remove typing errors from the dynamic input tooltips..... | 109 |
| 3.5. REFERENCE SYSTEM | 109 |
| 3.5.1. <i>Cartesian coordinates</i> | 110 |
| 3.5.2. <i>Polar coordinates</i> | 110 |
| 3.5.3. <i>AutoCAD and the coordinate systems</i> | 111 |
| 3.5.3.1. Absolute Cartesian coordinates | 111 |
| 3.5.3.2. Relative Cartesian coordinates..... | 112 |
| 3.5.3.3. Absolute Polar coordinates..... | 113 |
| 3.5.3.4. Relative Polar coordinates..... | 113 |
| 3.6. POINT  | 114 |
| 3.6.1. <i>Change style and size of a point</i> | 115 |
| 3.6.1.1. Style..... | 115 |
| 3.6.1.2. Point size..... | 115 |
| 3.7. LINE  | 116 |
| 3.7.1. <i>Points selection</i> | 117 |
| 3.7.2. <i>Snap points</i> | 118 |
| 3.7.3. <i>Cartesian coordinates</i> | 119 |
| 3.7.4. <i>Polar coordinates</i> | 120 |
| 3.7.5. <i>Orthogonal command</i>  | 120 |
| 3.8. CIRCLE  | 122 |
| 3.9. POLYGON  | 132 |
| 3.10. POLYLINE  | 135 |
| 3.11. ELLIPSE  | 141 |
| 3.12. ELLIPTICAL ARC  | 146 |
| 3.13. CIRCULAR ARC  | 146 |
| 3.14. RECTANGLE  | 147 |
| 3.15. OBJECT APPEARANCE | 152 |
| 3.15.1. <i>Color Control</i> | 153 |
| 3.15.1.1. Set color of an object before it is drawn..... | 153 |
| 3.15.1.2. Change color of an object after it is drawn..... | 154 |
| 3.15.2. <i>Lineweight Control</i> | 155 |
| 3.15.2.1. Change thickness of a line before it is drawn..... | 155 |
| 3.15.2.2. Change thickness of a line after it is drawn..... | 156 |
| 3.15.3. <i>Linetype Control</i> | 156 |
| 3.15.3.1. Load a linetype..... | 157 |
| 3.15.3.2. Change linetype before an object is drawn..... | 158 |

| | | |
|--------------|---|------------|
| 3.15.3.3. | Change linetype after an object is drawn | 159 |
| 3.15.3.4. | Linetype scale | 160 |
| 3.16. | TEXT  | 161 |
| 3.16.1. | <i>Create multiline text</i> | 162 |
| 3.16.2. | <i>Text Editor</i> | 163 |
| 3.16.2.1. | Style | 164 |
| 3.16.2.1.1. | Font height | 164 |
| 3.16.2.1.2. | Background mask | 164 |
| 3.16.2.2. | Formatting | 165 |
| 3.16.2.2.1. | Stacked characters | 166 |
| 3.16.2.3. | Paragraph | 167 |
| 3.16.2.3.1. | Justification | 168 |
| 3.16.2.3.2. | List | 168 |
| 3.16.2.3.3. | Line spacing | 169 |
| 3.16.2.3.4. | Paragraph dialog box | 170 |
| 3.16.2.4. | Insert | 171 |
| 3.16.2.4.1. | Column | 171 |
| 3.16.2.4.2. | Symbol | 171 |
| 3.16.2.5. | Spell check | 172 |
| 3.16.2.6. | Tools | 173 |
| 3.16.2.7. | Options | 174 |
| 3.16.2.8. | Close | 174 |
| 3.16.3. | <i>Annotate tab and Text panel</i> | 174 |
| 3.16.4. | <i>Express Tools tab and Text panel</i> | 175 |
| 3.16.4.1.1. | Arc Aligned | 176 |
| 3.16.4.1.2. | Enclose in object | 177 |
| 3.17. | HATCH  | 179 |
| 3.17.1. | <i>Hatch creation tab</i> | 180 |
| 3.17.1.1.1. | Boundaries | 180 |
| 3.17.1.1.2. | Pattern | 181 |
| 3.17.1.1.3. | Properties | 181 |
| 3.17.1.1.4. | Options | 183 |
| 3.17.1.1.5. | Origin | 184 |
| 3.17.1.1.6. | Close | 184 |
| 3.17.2. | <i>Hatch an area</i> | 184 |
| 3.18. | TABLE  | 187 |
| 3.18.1. | <i>Create a table</i> | 188 |
| 3.18.2. | <i>Table resize</i> | 189 |
| 3.18.3. | <i>Modify table's shape</i> | 191 |
| 3.18.4. | <i>The cursor movement</i> | 193 |
| 3.18.5. | <i>Insert a multiline text in a cell</i> | 194 |
| 3.18.6. | <i>The data type</i> | 194 |
| 3.18.7. | <i>Populate the table</i> | 196 |
| 3.18.8. | <i>Modify the contents of a table</i>  | 197 |
| 3.18.8.1. | Table Style dialog box | 197 |
| 3.18.8.2. | Table update using the property palette | 203 |

4. BASICS OF 2-DIMENSIONAL EDITING..... **207**

| | | |
|----------|---|-----|
| 4.1. | LEARNING OBJECTIVES | 207 |
| 4.2. | INTRODUCTION | 208 |
| 4.3. | GRIPS..... | 208 |
| 4.3.1. | <i>Grips toggle</i> | 208 |
| 4.3.2. | <i>Change the size and color of the grips</i> | 209 |
| 4.4. | OBJECT SELECTION | 210 |
| 4.4.1. | <i>Method #1: Green Method</i> | 210 |
| 4.4.1.1. | Version #1..... | 210 |

| | | |
|------------|--|-----|
| 4.4.1.2. | Version #2..... | 211 |
| 4.4.2. | <i>Method #2: Blue Method</i> | 211 |
| 4.4.2.1. | Version #1..... | 211 |
| 4.4.2.2. | Version #2..... | 211 |
| 4.4.3. | <i>Method #3</i> | 212 |
| 4.5. | OBJECT SIMILAR SELECTION..... | 212 |
| 4.6. | OBJECT DE-SELECTION..... | 213 |
| 4.7. | ZOOM CAPABILITIES | 213 |
| 4.7.1. | <i>Zoom window</i>  | 213 |
| 4.7.2. | <i>Zoom scale</i>  | 215 |
| 4.7.3. | <i>Zoom center</i>  | 215 |
| 4.7.4. | <i>Zoom object</i>  | 215 |
| 4.7.5. | <i>Zoom in</i>  | 216 |
| 4.7.6. | <i>Zoom out</i>  | 216 |
| 4.7.7. | <i>Zoom-wheel</i> | 216 |
| 4.7.8. | <i>Zoom all</i>  | 216 |
| 4.8. | PAN  | 217 |
| 4.9. | DRAW ORDER  | 217 |
| 4.9.1. | <i>Bring to front</i>  | 218 |
| 4.9.2. | <i>Send to back</i>  | 219 |
| 4.10. | OBJECT SNAP  | 219 |
| 4.10.1. | <i>Toggle object snap</i> | 219 |
| 4.10.2. | <i>Size and color of the object snap cursor</i> | 220 |
| 4.10.3. | <i>Object snap commands</i> | 221 |
| 4.10.3.1. | <i>Endpoint</i>  | 222 |
| 4.10.3.2. | <i>Midpoint</i>  | 222 |
| 4.10.3.3. | <i>Node</i>  | 223 |
| 4.10.3.4. | <i>Intersection</i>  | 223 |
| 4.10.3.5. | <i>Extension</i>  | 224 |
| 4.10.3.6. | <i>Apparent intersection</i>  | 225 |
| 4.10.3.7. | <i>Center</i>  | 225 |
| 4.10.3.8. | <i>Quadrant</i>  | 226 |
| 4.10.3.9. | <i>Geometric center</i>  | 226 |
| 4.10.3.10. | <i>Tangent</i>  | 227 |
| 4.10.3.11. | <i>Perpendicular</i>  | 228 |
| 4.11. | THE EDITING COMMANDS..... | 229 |
| 4.12. | CANCEL..... | 230 |
| 4.13. | ERASE  | 231 |
| 4.13.1. | <i>Erase one object</i> | 231 |
| 4.13.1.1. | <i>Using delete key</i> | 231 |
| 4.13.1.2. | <i>Using Erase tool</i> | 231 |
| 4.13.2. | <i>Erase multiple objects simultaneously</i> | 231 |
| 4.14. | UNDO  | 232 |
| 4.14.1. | <i>Undo one command</i> | 232 |

| | | |
|-----------|--|-----|
| 4.14.2. | <i>Undo several commands</i> | 232 |
| 4.15. | REDO  | 232 |
| 4.15.1. | <i>Redo one command</i> | 233 |
| 4.15.2. | <i>Redo several commands</i> | 233 |
| 4.16. | OOPS | 233 |
| 4.17. | DELETE DUPLICATE OBJECTS  | 234 |
| 4.18. | COPY  | 235 |
| 4.19. | ARRAY | 238 |
| 4.19.1. | <i>Rectangular Array</i>  | 239 |
| 4.19.1.1. | <i>Rectangular array's grip points</i> | 242 |
| 4.19.2. | <i>Polar array</i>  | 244 |
| 4.19.2.1. | <i>Fill angle</i> | 247 |
| 4.19.2.2. | <i>Angle between</i> | 248 |
| 4.19.2.3. | <i>Polar array and grip points</i> | 249 |
| 4.19.3. | <i>Path array</i>  | 249 |
| 4.19.3.1. | <i>Path array and grip points</i> | 253 |
| 4.19.4. | <i>Edit array</i> | 253 |
| 4.20. | MIRROR  | 254 |
| 4.21. | OFFSET  | 256 |
| 4.22. | MOVE  | 259 |
| 4.22.1. | <i>Move in xy-plane</i> | 261 |
| 4.22.2. | <i>Move in z-direction</i> | 261 |
| 4.23. | ROTATE  | 262 |
| 4.24. | SCALE  | 264 |
| 4.25. | STRETCH  | 266 |
| 4.26. | BREAK | 269 |
| 4.27. | BREAK AT A POINT  | 270 |
| 4.28. | EXPLODE  | 270 |
| 4.29. | JOIN  | 271 |
| 4.29.1. | <i>Lines</i> | 273 |
| 4.29.2. | <i>Circular arc</i> | 273 |
| 4.29.3. | <i>Polyline</i> | 275 |
| 4.29.4. | <i>Spline</i> | 275 |
| 4.29.5. | <i>Combination of objects</i> | 275 |
| 4.30. | FILLET  | 276 |
| 4.31. | CHAMFER  | 278 |
| 4.32. | TRIM  | 282 |
| 4.32.1. | <i>Trim: FAQ</i> | 284 |
| 4.33. | EXTEND  | 285 |
| 4.34. | POLYLINE EDIT  | 287 |
| 4.35. | GRIPS AND OBJECT EDITING | 292 |
| 4.35.1. | <i>Select a point</i> | 293 |
| 4.35.2. | <i>Stretch/shrink</i> | 293 |
| 4.35.3. | <i>Erase</i> | 293 |

| | |
|--|---|
| 4.35.4. Move | 294 |
| 4.35.5. Scale..... | 294 |
| 4.35.6. Rotate..... | 294 |
| |  |
| 4.36. THE PROPERTIES PALETTE AND OBJECT EDITING | 295 |
| 5. LAYERS | 299 |
| 5.1. LEARNING OBJECTIVES | 299 |
| 5.2. INTRODUCTION..... | 300 |
| 5.3. LAYERS IN AUTOCAD | 301 |
| |  |
| 5.4. LAYER COMMAND | 302 |
| 5.5. LAYER PROPERTIES MANAGER | 302 |
| 5.5.1. <i>Characteristics of a layer</i> | 303 |
| 5.5.2. <i>Create a new layer</i>  | 307 |
| 5.5.3. <i>Delete an existing layer</i>  | 308 |
| 5.5.4. <i>Make a layer a current layer</i>  | 308 |
| 5.6. DRAWING AND LAYERS | 309 |
| 5.7. THE DEFPOINTS LAYER | 309 |
| 5.8. MOVE OBJECTS BETWEEN LAYERS..... | 310 |
| 5.9. UPDATE LAYER PROPERTIES..... | 310 |
| 5.10. LAYERS: FAQ | 311 |
| 5.11. ILLUSTRATIVE EXAMPLE..... | 312 |
| 6. BLOCKS..... | 315 |
| 6.1. LEARNING OBJECTIVES | 315 |
| 6.2. INTRODUCTION..... | 316 |
| 6.3. BASIC BLOCK | 316 |
| |  |
| 6.3.1. <i>Create a basic block</i>  | 317 |
| 6.3.2. <i>Block definition dialog box</i> | 317 |
| 6.4. WBLOCK | 320 |
| 6.4.1. <i>Create a Wblock</i> | 320 |
| 6.4.2. <i>Write block dialog box</i> | 320 |
| |  |
| 6.5. BLOCK WITH ATTRIBUTES | 322 |
| 6.5.1. <i>The initial setup</i> | 322 |
| 6.5.2. <i>Attribute definition dialog box</i> | 323 |
| 6.5.3. <i>Create attributes</i> | 325 |
| 6.5.4. <i>Create block with attributes</i> | 326 |
| 6.5.5. <i>Convert to Wblock</i> | 328 |
| 6.6. BLOCK WITH TEXT BOXES..... | 328 |
| |  |
| 6.7. BASIC BLOCK INSERTION | 329 |
| 6.7.1. <i>Insert dialog box</i> | 330 |
| |  |
| 6.7.2. <i>Insert a block with default values</i>  | 331 |
| 6.7.3. <i>Change the scale of the block at the insertion</i> | 332 |
| 6.7.4. <i>Rotate the block at the insertion</i> | 334 |
| 6.7.5. <i>Insert a Wblock</i> | 335 |
| 6.7.6. <i>Insert a block with attributes</i> | 335 |
| 6.7.7. <i>Insert a block with text boxes</i> | 336 |
| 6.8. COMBINE BLOCKS..... | 336 |
| 6.9. MODIFY BLOCK..... | 336 |
| |  |
| 6.10. DESIGN CENTER | 337 |

| | | | |
|-----------|--|--|------------|
| 6.10.1. | <i>Insert a block (known dimension)</i> | | 339 |
| 6.10.2. | <i>Insert a block (unknown dimension)</i> | | 340 |
| 7. | LAYOUTS AND TEMPLATE FILES | | 343 |
| 7.1. | LEARNING OBJECTIVES | | 343 |
| 7.2. | INTRODUCTION..... | | 344 |
| 7.3. | LAYOUT..... | | 344 |
| 7.3.1. | <i>Paper background and shadow</i> | | 345 |
| 7.3.2. | <i>Printable area</i> | | 345 |
| 7.3.3. | <i>Viewport</i> | | 350 |
| 7.3.3.1. | Viewport resizing..... | | 350 |
| 7.3.3.2. | Multiple viewports..... | | 350 |
| 7.3.3.3. | Non-rectangular viewports..... | | 352 |
| 7.3.3.4. | Viewport scaling..... | | 354 |
| 7.3.3.5. | Rescale a viewport | | 354 |
| 7.3.3.6. | Lock the scale of a viewport | | 355 |
| 7.4. | ADD AN ENTRY IN THE SCALE LIST..... | | 357 |
| 7.5. | LAYOUT MANIPULATION..... | | 358 |
| 7.5.1. | <i>Delete a layout</i> | | 359 |
| 7.5.2. | <i>Move a layout</i> | | 360 |
| 7.5.3. | <i>Copy a layout</i> | | 361 |
| 7.5.4. | <i>Rename a layout</i> | | 362 |
| 7.5.5. | <i>Insert a layout</i> | | 362 |
| 7.5.5.1. | Default layout | | 362 |
| 7.5.5.2. | Layout from template..... | | 362 |
| 7.5.6. | <i>Grid and Snap commands</i> | | 364 |
| 7.5.7. | <i>An Example</i> | | 364 |
| 7.6. | LAYERS FREEZING AND LAYOUTS | | 365 |
| 7.7. | OBJECT APPEARANCE AND LAYOUTS | | 366 |
| 7.8. | TEMPLATE FILE | | 368 |
| 7.8.1. | <i>Landscape template for ISO units</i> | | 368 |
| 7.8.2. | <i>Portrait template for ISO units</i> | | 373 |
| 7.8.3. | <i>Template for ANSI units</i> | | 375 |
| 7.9. | MODIFY ATTRIBUTE OF A BLOCK IN A TEMPLATE FILE | | 376 |
| 8. | DIMENSIONING TECHNIQUES | | 377 |
| 8.1. | LEARNING OBJECTIVES | | 377 |
| 8.2. | INTRODUCTION | | 378 |
| 8.3. | DIMENSIONING IN GENERAL..... | | 378 |
| 8.4. | TERMINOLOGY | | 379 |
| 8.5. | IMPORTANT POINTS TO REMEMBER | | 380 |
| 8.6. | DIMENSION STYLES | | 381 |
| 8.7. | MODIFY DIMENSION STYLE DIALOG BOX | | 382 |
| 8.7.1. | <i>Lines</i> | | 383 |
| 8.7.2. | <i>Symbols and arrows</i> | | 384 |
| 8.7.3. | <i>Text</i> | | 385 |
| 8.7.4. | <i>Fit</i> | | 386 |
| 8.7.5. | <i>Primary units</i> | | 386 |
| 8.7.6. | <i>Alternate units</i> | | 387 |
| 8.7.7. | <i>Tolerance</i> | | 387 |
| 8.8. | MODIFY DIMENSION STYLE | | 387 |
| 8.8.1. | <i>Modify dimension style using the dialog box</i> | | 387 |
| 8.8.2. | <i>Modify dimension style using the properties palette</i> | | 387 |
| 8.9. | DIMENSIONING TECHNIQUES..... | | 389 |

| | |
|--|------------|
| 8.9.1. <i>Linear dimensions</i>  | 389 |
| 8.9.1.1. Extension lines | 389 |
| 8.9.1.2. Object selection | 390 |
| 8.9.1.3. Text relocation | 391 |
| 8.9.1.4. Space adjustment  | 392 |
| 8.9.2. <i>Aligned dimensions</i>  | 394 |
| 8.9.3. <i>Angular dimensions</i>  | 394 |
| 8.9.3.1. Angles < 180° | 395 |
| 8.9.3.2. Angles > 180° | 396 |
| 8.9.4. <i>Dimensioning radii</i>  | 397 |
| 8.9.5. <i>Dimensioning circles</i>  | 398 |
| 8.10. <i>CENTER MARK</i>  | 400 |
| 8.10.1. <i>Command line method</i> | 400 |
| 8.10.2. <i>Panel method</i>  | 402 |
| 8.11. <i>LEADER LINES</i>  | 402 |
| 8.11.1. Arrow | 404 |
| 8.11.2. Arrowhead size | 404 |
| 8.12. <i>SMART DIMENSION</i>  | 405 |
| 8.13. <i>TYPES OF DIMENSIONS</i>  | 408 |
| 8.13.1. <i>Continue dimension</i>  | 408 |
| 8.13.2. <i>Baseline dimensions</i>  | 409 |
| 8.13.3. <i>Ordinate dimensions</i>  | 411 |
| 8.13.4. <i>Tabular dimensions</i> | 413 |
| 8.13.5. <i>Combined dimensions</i> | 413 |
| 8.14. <i>QUICK DIMENSION</i>  | 413 |
| 8.15. <i>DIMENSIONING FILLETS AND ROUNDS</i> | 414 |
| 8.16. <i>CENTERLINE</i> | 415 |
| 8.17. <i>LINE OF SYMMETRY</i> | 415 |
| 9. TOLERANCE | 417 |
| 9.1. <i>LEARNING OBJECTIVES</i> | 417 |
| 9.2. <i>INTRODUCTION</i> | 418 |
| 9.3. <i>TERMINOLOGY</i> | 419 |
| 9.4. <i>TOLERANCE METHODS</i> | 419 |
| 9.4.1. <i>Plus-minus method</i> | 419 |
| 9.4.1.1. Unilateral..... | 420 |
| 9.4.1.2. Bilateral..... | 420 |
| 9.4.1.3. Tolerance expression..... | 420 |
| 9.4.1.4. Unilateral values | 420 |
| 9.4.1.5. Bilateral values..... | 421 |
| 9.4.1.6. Usage of Plus-minus tolerance..... | 422 |
| 9.4.2. <i>Limits tolerance</i> | 422 |
| 9.5. <i>STANDARD TOLERANCE</i> | 422 |
| 9.6. <i>DOUBLE DIMENSIONING</i> | 423 |
| 9.6.1. <i>Double dimensioning: an error</i> | 423 |
| 9.6.2. <i>Solution #1</i> | 424 |
| 9.6.3. <i>Solution #2</i> | 424 |

| | | |
|------------|--|------------|
| 9.7. | CHAIN AND BASELINE DIMENSION | 424 |
| 9.8. | TOLERANCE STUDY | 425 |
| 9.9. | TOLERANCE IN AUTOCAD | 426 |
| 9.9.1. | <i>Tolerance tab</i> | 427 |
| 9.9.1.1. | Tolerance format | 427 |
| 9.9.1.2. | Tolerance Alignment | 429 |
| 9.9.1.3. | Zero Suppression | 429 |
| 9.9.2. | <i>Add or modify tolerance</i> | 430 |
| 9.9.2.1. | Add or modify tolerance using the dialog box | 430 |
| 9.9.2.2. | Add or modify tolerance using the property palette | 430 |
| 10. | LAND SURVEY..... | 433 |
| 10.1. | LEARNING OBJECTIVES | 433 |
| 10.2. | INTRODUCTION | 434 |
| 10.3. | LOCATION | 434 |
| 10.3.1. | <i>Longitudes</i> | 434 |
| 10.3.2. | <i>Latitudes</i> | 434 |
| 10.3.3. | <i>Location on a map</i> | 435 |
| 10.4. | ANGULAR MEASUREMENT | 435 |
| 10.4.1. | <i>Units of measurement</i> | 435 |
| 10.4.2. | <i>Direction</i> | 436 |
| 10.4.2.1. | Azimuth | 436 |
| 10.4.2.2. | Bearing | 436 |
| 10.4.2.3. | Relationship between azimuth and bearing | 436 |
| 10.5. | TRAVERSE | 437 |
| 10.5.1. | <i>Open traverse</i> | 437 |
| 10.5.2. | <i>Closed traverse</i> | 438 |
| 10.5.2.1. | Connecting traverse | 438 |
| 10.5.2.2. | Loop traverse | 438 |
| 10.6. | DRAWING A TRAVERSE USING AUTOCAD | 439 |
| 10.6.1. | <i>Traverse for the given azimuths</i> | 439 |
| 10.6.2. | <i>Traverse for the given bearings</i> | 441 |
| 10.7. | ADD DIMENSIONS TO A TRAVERSE | 443 |
| 10.7.1. | <i>Length</i> | 443 |
| 10.7.2. | <i>Add reference line to a traverse</i> | 443 |
| 10.7.3. | <i>Azimuth angle</i> | 445 |
| 10.7.4. | <i>Bearing angle</i> | 445 |
| 10.7.5. | <i>Save the file</i> | 445 |
| 10.8. | PARCEL..... | 445 |
| 10.9. | DEED | 446 |
| 10.10. | LAND SURVEY | 446 |
| 10.11. | RECTANGULAR SYSTEM | 446 |
| 10.11.1. | <i>Reference lines</i> | 446 |
| 10.11.2. | <i>Township and range</i> | 447 |
| 10.12. | METES AND BOUNDS | 450 |
| 10.12.1. | <i>Land description using metes and bounds</i> | 450 |
| 10.12.2. | <i>AutoCAD and Metes and Bounds</i> | 451 |
| 10.13. | LOTS AND BLOCKS..... | 453 |
| 10.13.1. | <i>Terminology</i> | 453 |
| 10.13.2. | <i>Lots and Blocks</i> | 454 |
| 10.13.3. | <i>AutoCAD And Lot And Block</i> | 454 |
| 10.13.4. | <i>Area of a lot</i> | 460 |
| 10.13.4.1. | Closed boundary method | 460 |
| 10.13.4.2. | Hatch method | 461 |
| 10.13.4.3. | Area command method | 462 |

| | |
|---|------------|
| 11. CONTOURS..... | 465 |
| 11.1. LEARNING OBJECTIVES | 465 |
| 11.2. INTRODUCTION..... | 466 |
| 11.3. CHARACTERISTICS OF A CONTOUR LINE | 467 |
| 11.4. TERMINOLOGY | 467 |
| 11.5. AUTOCAD AND CONTOUR MAP..... | 471 |
| 11.5.1. <i>Create Script file</i> | 472 |
| 11.5.2. <i>Create layers</i> | 472 |
| 11.5.3. <i>Change point style</i> | 472 |
| 11.5.4. <i>Read the script files</i> | 472 |
| 11.5.5. <i>Create the contour map</i> | 473 |
| 11.5.6. <i>Curve fitting</i> | 474 |
| 11.5.7. <i>Add the labels to the index contours</i> | 475 |
| 12. DRAINAGE BASIN | 477 |
| 12.1. LEARNING OBJECTIVES | 477 |
| 12.2. INTRODUCTION..... | 478 |
| 12.3. HYDROLOGIC CYCLE..... | 478 |
| 12.4. TERMINOLOGY | 478 |
| 12.5. DRAINAGE BASIN OR WATERSHED..... | 480 |
| 12.6. DRAINAGE BASIN CHARACTERISTICS..... | 480 |
| 12.6.1. <i>Drainage area</i> | 480 |
| 12.6.2. <i>Drainage basin length</i> | 481 |
| 12.6.3. <i>Drainage basin slope</i> | 481 |
| 12.6.4. <i>Miscellaneous</i> | 481 |
| 12.7. MAJOR STEPS IN A DRAINAGE BASIN DELINEATION | 481 |
| 12.8. DRAINAGE BASIN DELINEATION USING AUTOCAD..... | 482 |
| 13. FLOODPLAINS..... | 491 |
| 13.1. LEARNING OBJECTIVES | 491 |
| 13.2. INTRODUCTION..... | 492 |
| 13.3. TERMINOLOGY | 492 |
| 13.4. MAJOR STEPS IN A FLOODPLAIN DELINEATION | 495 |
| 13.5. FLOODPLAIN DELINEATION USING AUTOCAD | 495 |
| 14. ROAD DESIGN | 511 |
| 14.1. LEARNING OBJECTIVES | 511 |
| 14.2. INTRODUCTION..... | 512 |
| 14.3. PLAN AND PROFILE..... | 512 |
| 14.3.1. <i>Plan</i> | 513 |
| 14.3.2. <i>Profile</i> | 513 |
| 14.4. DRAW ROAD PLAN USING AUTOCAD | 513 |
| 14.5. PLOT A ROAD PROFILE USING AUTOCAD | 516 |
| 14.6. CROSS-SECTION | 522 |
| 14.7. DRAW A CROSS-SECTION USING AUTOCAD | 522 |
| 15. EARTHWORK | 531 |
| 15.1. LEARNING OBJECTIVES | 531 |
| 15.2. INTRODUCTION..... | 532 |
| 15.3. EARTHWORK | 532 |
| 15.3.1. <i>Cut</i> | 532 |
| 15.3.2. <i>Fill</i> | 532 |
| 15.3.3. <i>Location of a road</i> | 532 |
| 15.4. SLOPE..... | 532 |

| | | |
|-------------|---|------------|
| 15.5. | ANGLE OF REPOSE | 533 |
| 15.6. | PLAN AN EXISTING PROFILE OF A ROAD | 534 |
| 15.7. | PROPOSED PROFILE OF A ROAD | 534 |
| 15.8. | DELINEATE THE EARTHWORK USING AUTOCAD | 536 |
| 16. | FLOOR PLAN | 543 |
| 16.1. | LEARNING OBJECTIVES | 543 |
| 16.2. | INTRODUCTION | 544 |
| 16.3. | FLOOR PLAN | 546 |
| 16.4. | WINDOWS | 546 |
| 16.4.1. | <i>Types of windows</i> | 547 |
| 16.4.2. | <i>Window sizes</i> | 548 |
| 16.4.3. | <i>Window selection</i> | 548 |
| 16.5. | DOORS | 548 |
| 16.5.1. | <i>Types of Door</i> | 548 |
| 16.5.2. | <i>Door sizes</i> | 550 |
| 16.5.3. | <i>Door selection</i> | 551 |
| 16.5.4. | <i>Door appearance in floor plan</i> | 551 |
| 16.6. | WALL | 552 |
| 16.6.1. | <i>Exterior</i> | 552 |
| 16.6.2. | <i>Interior</i> | 552 |
| 16.6.3. | <i>Non-load bearing</i> | 552 |
| 16.6.4. | <i>Load bearing</i> | 552 |
| 16.6.5. | <i>Wall thickness</i> | 552 |
| 16.7. | STAIR | 553 |
| 16.7.1. | <i>Terminology</i> | 553 |
| 16.7.2. | <i>Important points to remember</i> | 554 |
| 16.7.3. | <i>Types of stairs</i> | 555 |
| 16.8. | BASICS OF FLOOR PLAN DESIGN | 555 |
| 16.9. | DESIGN TECHNIQUE | 557 |
| 16.10. | AUTOCAD AND FLOOR PLAN | 557 |
| 16.10.1. | <i>New file</i> | 558 |
| 16.10.2. | <i>The input units</i> | 558 |
| 16.10.2.1. | <i>Architectural</i> | 558 |
| 16.10.2.2. | <i>Precision</i> | 558 |
| 16.10.3. | <i>Load linetypes</i> | 558 |
| 16.10.4. | <i>Orthogonal lines</i> | 559 |
| 16.10.5. | <i>Layers</i> | 559 |
| 16.10.6. | <i>The floor plan</i> | 559 |
| 16.10.6.1. | <i>Exterior wall</i> | 559 |
| 16.10.6.2. | <i>Interior walls</i> | 561 |
| 16.10.6.3. | <i>Label</i> | 561 |
| 16.10.6.4. | <i>Doors</i> | 563 |
| 16.10.6.5. | <i>Walls cleanup</i> | 567 |
| 16.10.6.6. | <i>Windows</i> | 567 |
| 16.10.6.7. | <i>Roofline</i> | 568 |
| 16.10.6.8. | <i>Wall hatch</i> | 568 |
| 16.10.6.9. | <i>Front porch</i> | 569 |
| 16.10.6.10. | <i>Back porch</i> | 569 |
| 16.10.6.11. | <i>Kitchen</i> | 571 |
| 16.10.6.12. | <i>Master bathroom</i> | 574 |
| 16.10.6.13. | <i>North direction</i> | 576 |
| 16.10.6.14. | <i>Other bathroom</i> | 577 |
| 16.10.6.15. | <i>The complete floorplan</i> | 577 |
| 16.11. | DIMENSIONING AN ARCHITECTURAL DRAWING | 577 |
| 16.11.1. | <i>Create Layers</i> | 578 |
| 16.11.2. | <i>Set Dimension Style dialog box</i> | 578 |

| | | |
|-----------------------------|---|-----|
| 16.11.3. | <i>Add dimensions to the floor plan</i> | 579 |
| 17. ELEVATIONS | 589 | |
| 17.1. | LEARNING OBJECTIVES | 589 |
| 17.2. | INTRODUCTION..... | 590 |
| 17.3. | ROOF | 591 |
| 17.3.1. | <i>Terminology.....</i> | 591 |
| 17.3.2. | <i>Types of roof.....</i> | 592 |
| 17.3.3. | <i>Important points.....</i> | 592 |
| 17.4. | AUTOCAD AND ROOF PLAN..... | 593 |
| 17.4.1. | <i>Open file</i> | 593 |
| 17.4.2. | <i>Load linetypes.....</i> | 593 |
| 17.4.3. | <i>Layers</i> | 593 |
| 17.4.4. | <i>The roof plan</i> | 593 |
| 17.5. | THE FRONT ELEVATION | 597 |
| 17.5.1. | <i>Open file</i> | 597 |
| 17.5.2. | <i>Load linetypes.....</i> | 597 |
| 17.5.3. | <i>Orthogonal lines</i> | 597 |
| 17.5.4. | <i>Layers</i> | 598 |
| 17.5.5. | <i>Draw the front elevation</i> | 598 |
| 17.5.5.1. | <i>Ground level.....</i> | 598 |
| 17.5.5.2. | <i>Slab level.....</i> | 599 |
| 17.5.5.3. | <i>Doors.....</i> | 600 |
| 17.5.5.4. | <i>Windows</i> | 602 |
| 17.5.5.5. | <i>Front wall</i> | 605 |
| 17.5.5.6. | <i>Roof</i> | 606 |
| 17.5.5.7. | <i>Front porch</i> | 608 |
| 17.5.5.8. | <i>Landscaping</i> | 610 |
| 17.5.5.9. | <i>Complete front elevation.....</i> | 610 |
| 17.6. | THE RIGHT SIDE ELEVATION..... | 611 |
| 17.6.1. | <i>Open file</i> | 611 |
| 17.6.2. | <i>Load linetypes.....</i> | 611 |
| 17.6.3. | <i>Orthogonal lines</i> | 612 |
| 17.6.4. | <i>Layers</i> | 612 |
| 17.6.5. | <i>The right side elevation</i> | 612 |
| 17.6.5.1. | <i>Miter line.....</i> | 612 |
| 17.6.5.2. | <i>Ground and slab level.....</i> | 613 |
| 17.6.5.3. | <i>Doors.....</i> | 613 |
| 17.6.5.4. | <i>Windows</i> | 613 |
| 17.6.5.5. | <i>Wall</i> | 616 |
| 17.6.5.6. | <i>Roof</i> | 617 |
| 17.6.5.7. | <i>Complete right side elevation</i> | 622 |
| 17.6.5.8. | <i>Front and right side elevations</i> | 623 |
| 18. SITE PLAN | 625 | |
| 18.1. | LEARNING OBJECTIVES | 625 |
| 18.2. | INTRODUCTION..... | 626 |
| 18.3. | TERMINOLOGY | 626 |
| 18.4. | COMPONENTS OF A SITE PLAN | 626 |
| 18.5. | AUTOCAD AND SITE PLAN | 627 |
| 18.5.1. | <i>Open file</i> | 627 |
| 18.5.2. | <i>Layers</i> | 628 |
| 18.5.3. | <i>Units</i> | 629 |
| 18.5.4. | <i>Load linetypes</i> | 629 |
| 18.5.5. | <i>Property line</i> | 630 |
| 18.5.6. | <i>North</i> | 631 |
| 18.5.7. | <i>Ground slope</i> | 631 |

| | | |
|------------|---|------------|
| 18.5.8. | <i>Setbacks</i> | 631 |
| 18.5.9. | <i>Road</i> | 632 |
| 18.5.10. | <i>Adjacent properties</i> | 634 |
| 18.5.11. | <i>Building</i> | 634 |
| 18.5.12. | <i>Driveway</i> | 636 |
| 18.5.13. | <i>Walkway</i> | 637 |
| 18.5.14. | <i>Swimming pool</i> | 638 |
| 18.5.15. | <i>Utilities</i> | 641 |
| 18.5.16. | <i>Template file</i> | 642 |
| 19. | CONSTRUCTION DRAWINGS | 645 |
| 19.1. | LEARNING OBJECTIVES | 645 |
| 19.2. | INTRODUCTION | 646 |
| 19.3. | DRAWING FORMAT | 646 |
| 19.4. | BLOCKS USED | 646 |
| 19.5. | FAMILY OF CONSTRUCTION DRAWING | 648 |
| 19.5.1. | <i>Cover sheet</i> | 648 |
| 19.5.2. | <i>General information</i> | 648 |
| 19.5.3. | <i>Quantity sheet</i> | 648 |
| 19.5.4. | <i>Survey or mapping</i> | 649 |
| 19.5.5. | <i>Soil information</i> | 649 |
| 19.5.6. | <i>Erosion control</i> | 649 |
| 19.5.7. | <i>Landscape drawings</i> | 650 |
| 19.5.8. | <i>Structural drawings</i> | 650 |
| 19.5.9. | <i>Fire protection drawings</i> | 650 |
| 19.5.10. | <i>Architectural drawings</i> | 650 |
| 19.5.11. | <i>Plumbing drawings</i> | 650 |
| 19.5.12. | <i>Mechanical drawings</i> | 650 |
| 19.5.13. | <i>Electrical drawings</i> | 651 |
| 19.5.14. | <i>Telecommunication drawings</i> | 651 |
| 19.5.15. | <i>Plan and profile drawings</i> | 651 |
| 20. | PLOTTING FROM AUTOCAD 2021 | 653 |
| 20.1. | LEARNING OBJECTIVES | 653 |
| 20.2. | INTRODUCTION | 654 |
| 20.3. | PRINT  | 654 |
| 20.3.1. | <i>Plot dialog box</i> | 656 |
| 20.3.1.1. | <i>Page setup</i> | 657 |
| 20.3.1.2. | <i>Printer/plotter</i> | 657 |
| 20.3.1.3. | <i>Paper size</i> | 658 |
| 20.3.1.4. | <i>Plot area</i> | 658 |
| 20.3.1.5. | <i>Plot offset</i> | 662 |
| 20.3.1.6. | <i>Plot scale</i> | 663 |
| 20.3.1.7. | <i>Shaded viewport options</i> | 664 |
| 20.3.1.8. | <i>Plot options</i> | 665 |
| 20.3.1.9. | <i>Drawing orientation</i> | 666 |
| 20.3.1.10. | <i>Preview</i> | 666 |
| 20.3.1.11. | <i>Plot to layout</i> | 667 |
| 20.3.1.12. | <i>OK and cancel</i> | 667 |
| 20.4. | PLOT FROM LAYOUTS | 667 |
| 20.5. | CHANGE LAYOUT'S ORIENTATION | 669 |
| 20.6. | PAGE SETUP FROM LAYOUTS | 672 |
| 20.7. | LAYOUT PLOTTING: FAQ | 675 |
| 20.8. | EMAIL DWG FILE | 675 |
| 20.9. | PORTABLE DOCUMENT FORMAT (PDF) | 676 |
| 20.9.1. | <i>Create a PDF file</i> | 676 |

| | |
|--|------------|
| 20.9.2. Import a PDF file into AutoCAD | 678 |
| 20.10. OPTION DIALOG BOX | 680 |
| 21. EXTERNAL REFERENCE FILES (XREF) | 681 |
| 21.1. LEARNING OBJECTIVES | 681 |
| 21.2. INTRODUCTION | 682 |
| 21.3. AUTOCAD AND REFERENCING AN EXTERNAL FILE  | 682 |
| 21.3.1. Attach command | 682 |
| 21.3.2. Attach external reference dialog box | 683 |
| 21.3.2.1. Name | 684 |
| 21.3.2.2. Preview | 684 |
| 21.3.2.3. Reference type | 684 |
| 21.3.2.4. Scale | 685 |
| 21.3.2.5. Insertion point | 685 |
| 21.3.2.6. Path type | 685 |
| 21.3.2.7. Rotation | 685 |
| 21.3.2.8. Block unit | 685 |
| 21.3.3. File attachment | 685 |
| 21.3.4. Unreconciled layers | 687 |
| 21.4. REFERENCE AN IMAGE FILE | 689 |
| 21.5. REFERENCE A PDF FILE | 690 |
| 21.6. CLIP  | 691 |
| 21.7. REMOVE CLIP  | 693 |
| 21.8. FILE UPDATE | 693 |
| 21.9. VIEW REFERENCE FILES | 695 |
| 21.9.1. External Reference Palette  | 695 |
| 21.9.1.1. Attach  | 696 |
| 21.9.1.2. Refresh  | 696 |
| 21.9.1.3. Change path  | 696 |
| 21.9.1.4. Help  | 697 |
| 21.9.1.5. Details  | 697 |
| 21.9.1.6. Preview  | 697 |
| 21.10. OPEN A REFERENCED FILE | 697 |
| 21.11. DETACH A REFERENCED FILE | 697 |
| 22. SUGGESTED IN-CLASS ACTIVITIES | 701 |
| 22.1. INTRODUCTION | 701 |
| 22.2. DOWNLOAD AUTOCAD 2021 | 702 |
| 22.3. CUSTOMIZE A WORKSPACE | 703 |
| 22.4. GRID AND SNAP CAPABILITIES | 704 |
| 22.5. ERASE, LINE, POLYLINE AND POLYLINE EDIT | 706 |
| 22.6. POINT, CIRCLE, POLYGON, OFFSET, MOVE, TRIM, EXTEND, AND ZOOM | 707 |
| 22.7. OBJECT APPEARANCE | 711 |
| 22.8. OBJECT APPEARANCE, HATCH, COPY, MIRROR, AND SCALE | 713 |
| 22.9. ARRAY, TEXT, HATCH, ELLIPSE, QLEADER, AND DRAW ORDER | 716 |
| 22.10. LAYERS | 718 |
| 22.11. MAKE & INSERT BLOCK, AND TEMPLATE FILES | 721 |
| 22.12. CREATE LAYOUTS AND CREATE VIEWS BY FREEZING LAYERS | 723 |
| 22.13. DIMENSION | 727 |
| 22.14. AZIMUTHS, BEARING, AND CLOSED TRAVERS | 729 |

| | | |
|------------|--|------------|
| 22.15. | RSS, LOTS AND BLOCKS | 732 |
| 22.16. | ROTATE, TEXT, BACKGROUND MASK COMMANDS AND CONTOUR MAP | 735 |
| 22.17. | DRAINAGE BASIN DELINEATION | 736 |
| 22.18. | FLOODPLAIN DELINEATION | 737 |
| 22.19. | ROAD DESIGN: PLAN AND PROFILE | 738 |
| 22.20. | ROAD DESIGN: CROSS-SECTION | 739 |
| 22.21. | ROAD DESIGN: EARTHWORK | 740 |
| 22.22. | FLOOR PLAN | 741 |
| 22.23. | FLOOR PLAN (CONT.) | 742 |
| 22.24. | FLOOR PLAN (CONT.) | 743 |
| 22.25. | DIMENSIONS (ARCHITECTURAL DRAWING) | 744 |
| 22.26. | ROOF PLAN | 746 |
| 22.27. | FRONT ELEVATION | 747 |
| 22.28. | RIGHT SIDE ELEVATION | 748 |
| 22.29. | SITE PLAN | 749 |
| 23. | HOMEWORK DRAWINGS | 751 |
| 23.1. | GRID-1 (UNITS: INCHES)..... | 751 |
| 23.2. | GRID-2 (UNITS: MILLIMETERS) | 752 |
| 23.3. | CIRCLES (UNITS: INCHES)..... | 752 |
| 23.4. | LIGHT SIGNAL (UNITS: INCHES) | 753 |
| 23.5. | PLATE WITH HOLES (UNITS: INCHES)..... | 754 |
| 23.6. | CIRCLE-TTR (UNITS: MILLIMETERS) | 754 |
| 23.7. | PIER (UNITS: MILLIMETERS)..... | 755 |
| 23.8. | SIMPLE SHAPE (UNITS: INCHES)..... | 755 |
| 23.9. | PIPE CUTTER (UNITS: MILLIMETERS) | 756 |
| 23.10. | POLYGONS (UNITS: INCHES)..... | 756 |
| 23.11. | RECTANGULAR ARRAY (UNITS: INCHES)..... | 757 |
| 23.12. | ZOOM POLAR ARRAY (UNITS: INCHES) | 757 |
| 23.13. | MIRROR, COPY, AND SCALE (UNITS: INCHES) | 758 |
| 23.14. | SPIRAL OF ARCHIMEDES (UNITS: MILLIMETERS)..... | 760 |
| 23.15. | ELEVATOR SYSTEM (UNITS: MILLIMETERS) | 762 |
| 23.16. | FERRIS WHEEL (UNITS: MILLIMETERS)..... | 766 |
| 24. | BIBLIOGRAPHY | 769 |
| 25. | INDEX..... | 773 |