
Designing with SOLIDWORKS 2024



Michael J. Rider Ph.D.

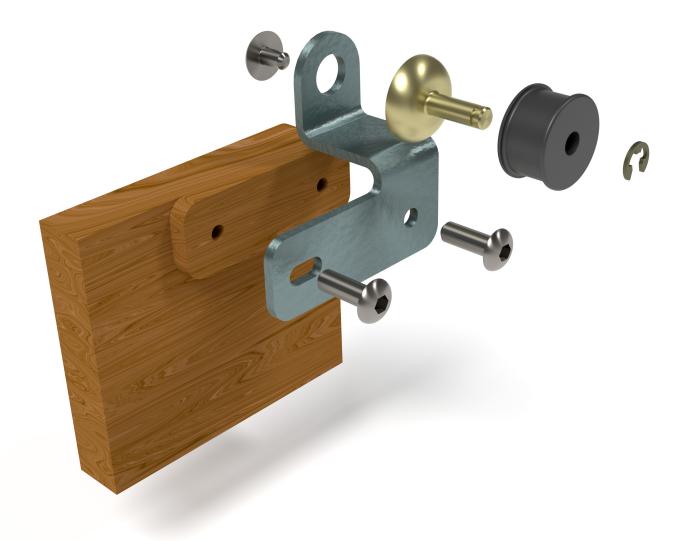

Visit the following websites to learn more about this book:





Googlebooks



Chapter 1. Getting Started

Introduction

This book will concentrate on the modeling application used to create solid models of parts, engineering design and drawings, and assemblies.

The tutorials in this book assume you are using the default settings of SOLIDWORKS in a university setting.

SOLIDWORKS uses the mouse and its three buttons extensively. Therefore, it is essential to understand the mouse button's basic functions listed below.



LMB—(LEFT MOUSE BUTTON)

Used for most operations such as selecting icons, picking graphic entities, and selecting menu items.

MMB—(MIDDLE MOUSE WHEEL)

Used to maneuver the entities in the window. To **Rotate** hold down the wheel button then move the mouse. To **Pan** hold down the wheel button along with the <Ctrl> key and move the mouse. To **Zoom** hold down the wheel button along with the <Shift> key and move the mouse. Spinning the wheel causes the entities to zoom in or out relative to the position of the mouse cursor.

RMB—(RIGHT MOUSE BUTTON)

Hold down the button to bring up additional available options in a context-sensitive popup menu. The **<Esc>** key is used to cancel a command. Sometimes it may be necessary to press the **<Esc>** key twice to cancel a command.

The $\langle F \rangle$ key resizes the entities in the window to fit in the window. Entities typically go off-screen when they are being resized or moved.

The <G> key activates the magnifying glass feature so you can zoom in on an area.

<Z> key and Shift+<Z> key

Pressing the <Z> key zooms out. Holding down the <Shift> key and pressing the <Z> key zooms in.

Using just the Arrow keys



Pressing the arrow key rotates the entities on the screen left, up, down, or right.

Holding down the <Shift> key and pressing the arrow keys rotate the entities on the screen 90 degrees left, up, down, or right.

Holding down the <Alt> key and pressing the left arrow key rotates the entities counterclockwise. <Alt> key and right arrow key rotate the entities clockwise and normal to the screen.

Below is a list of oth	ner keystrokes used in SOLIDWORKS and their meaning.
<ctrl>+<1></ctrl>	makes the Front View normal to the screen
<ctrl>+<2></ctrl>	makes the Back View normal to the screen
<ctrl>+<3></ctrl>	makes the Left View normal to the screen
<ctrl>+<4></ctrl>	makes the Right View normal to the screen
<ctrl>+<5></ctrl>	makes the Top View normal to the screen
<ctrl> + <6></ctrl>	makes the Bottom View normal to the screen
<ctrl>+<7></ctrl>	makes the Isometric View normal to the screen
<ctrl>+<8></ctrl>	makes the current selected surface normal to the screen

Note: It is good practice to create a **SOLIDWORKS Template** folder to store your templates in and a **SOLIDWORKS Parts** folder to store your data files in before starting SOLIDWORKS. When saving files in SOLIDWORKS, you should always verify that you are saving them in the proper folder before picking the Save button.

When working with SOLIDWORKS, it is strongly advised to <u>save your work often</u> in case of a power failure or an unexpected program crash.

Note that SOLIDWORKS 2024 is now backward compatible with SOLIDWORKS 2023 and 2022. SOLIDWORKS 2023 and 2022 were not backward compatible with older versions.


1. Before starting SOLIDWORKS, create a **SOLIDWORKS Part** folder and a **SOLIDWORKS Template** folder on the desktop.



- 2. Double-click the left mouse button (LMB) on the SOLIDWORKS 2024 icon on the desktop to start SOLIDWORKS.
- 3. If SOLIDWORKS is in Novice mode, the following screen will appear.

Part	Assembly	Drawing
a 3D representation of a single design component	a 3D arrangement of parts and/or other assemblies	a 2D engineering drawing, typically of part or assembly
component	assemblies SOLIDWORKS Tutoria	part or assembly


4. Pick the Part icon, then pick the OK button. The following screen will appear.

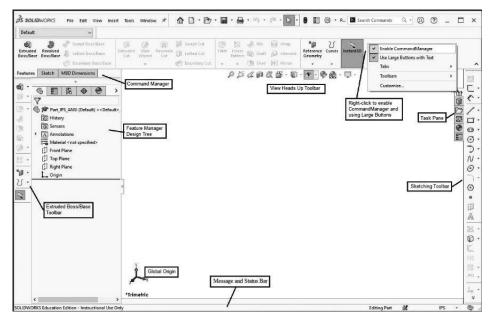

- (ĝ.
- 5. Pick the Options icon at the top of the window. When the System Options window appears, pick Color. Then select Viewport Background in the Color Scheme settings area. Pick the Edit button, then select White from the color menu. Change the Top Gradient Color and the Bottom Gradient Color to white as well.
- 6. Select the **Plain (Viewport Background color above)** option. Pick the OK button. This will produce a white background while you are in SOLIDWORKS, which is my preferred background color.

MBD					
Display Style	Plain (Viewport	d or 00 3 point fader nce: scene background Background color Background color Background color	(recommended) above)	Edit Edit Cator Her some Catorsen	
L Dismissed Messages Import Export	Use specified color Use specified color	r for Shaded With E rs when editing pa	dges mode ts in assemblies	in sheet backgroundj	2411 H ≠ 248 D #Smither

7. In the lower right corner of the screen, pick the unit's area (either IPS or MMGS), then pick Edit Document Units... Most of the exercises in this textbook use the IPS system so make sure IPS is selected.

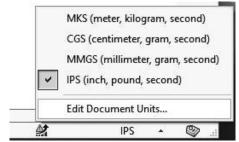

8. Pick the Document Properties tab. Set Drafting Standards to ANSI and Length Units to 3-decimal places for inches, then pick **OK**.

ystem Options Docume	nt Properties					ලි Se	arch Options		
		12.				1			
Drafting Standard	Overall drafting standa	ra			~	Rename	Сору	Delete	
Dimensions	Λ					-	1 15	-	
Virtual Sharps	42					Loa	d From Externa	l File	
⊕ Tables						Sa	ve to External F	ile	1
≟- DimXpert Detailing	Uppercase								
Grid/Snap	All uppercase for no	star							
Inits									
1odel Display	All uppercase for ta								
laterial Properties	All uppercase for di	mensions and ho	le callouts						
nage Quality heet Metal MBD	Exclusion list								
heet Metal	m;mm;cm;km;um;µm;r	1m;s;Hz;Pa;		~					
Veldments				4					
lane Display	<u>L</u>			7.4					
onfigurations	2								
						ОК	Cancel	Help	
						UK	currer	Theip	:
									-
No. 10 Webs									
ument Properties - Units				× 1					_
						ធិន	rch Options		
	nt Properties			* 1		@ Sea	rch Options		
	Unit system			× 1 1		(C) Sea	rch Options		3
stem Options Documer	Unit system O MKS (meter, kilogram			× 1 1		🔞 Sea	rch Options		
stem Options Documer rafting Standard Annotations	Unit system O MKS (meter, kilograd O CGS (centimeter, gra	im, second)		× 1 1		(Sea	rch Options		
stem Options Documer rafting Standard g- Annotations g- Dimensions Virtual Sharps	Unit system OMKS (meter, kilograd CGS (centimeter, gra OMMGS (millimeter, gu	am, second) ram, second)		*		(Sea	rch Options		
stem Options Documer rafting Standard g- Annotations g- Dimensions Virtual Sharps g- Tables	Unit system O MKS (meter, kilograd O CGS (centimeter, gra	am, second) ram, second)		•		💮 Sea	rch Options		
stem Options Documer rafting Standard - Annotations - Dimensions - Virtual Sharps - Tables - DimXpert	Unit system MKS (meter, kilograf CGS (centimeter, gra MMGS (millimeter, gr IPS (inch, pound, se	am, second) ram, second)	,	× 1		(Sea	rch Options		
stem Options Documer rafting Standard - Annotations - Dimensions - Virtual Sharps - Tables - DimXpert etailing	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) IPS (inch, pound, second) Custom	im, second) ram, second) cond)	Derimale		ractions		rch Options		3
stem Options Documer rafting Standard - Annotations - Dimensions - Virtual Sharps - Tables - DimXpert etailing rid/Snap	Unit system MKS (meter, kilograf CGS (centimeter, gra MMGS (millimeter, gr IPS (inch, pound, se	am, second) ram, second)	Decimals	F	ractions	Open More	rch Options		
stem Options Documer rafting Standard - Annotations - Dimensions - Tables - DimXpert etailing rid/Snap nits	Unit system MKS (meter, kilogram CGS (centimeter, gra MMGS (millimeter, gra) IPS (inch, pound, se) Custom Type Basic Units	am, second) ram, second) cond) Unit		F	ractions	More	rch Options		
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Tables DimXpert etailing rid/Snap nits Market todel Display	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) (PS (inch, pound, second) Custom Type Basic Units Length	am, second) ram, second) cond) Unit	.123	~	ractions	More	rch Options		
stem Options Documer	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) (PS (inch, pound, second) Custom Type Basic Units Length Dual Dimension Length	inn, second) aram, second) cond) Unit inches millimeters	.123 .12 .123	F	ractions	More	rch Options		
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Tables DimXpert etailing rid/Snap nits todel Display laterial Properties nage Quality heet Metal MBD	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) (PS (inch, pound, se Custom Type Basic Units Length Dual Dimension Length Angle	m, second) ram, second) cond) Unit inches millimeters degrees	.123 .12 .123 .123 .1234	~	ractions	More	rch Options		
stem Options Documer rafting Standard - Annotations - Dimensions - Tables - DimXpert etailing rid/Snap nits Display haterial Properties nage Quality heet Metal MBD heet Metal	Unit system MKS (meter, kilogram CGS (centimeter, gra MMGS (millimeter, gr CGS (centimeter, gra CGS (centimeter, gram) Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties	m, second) ram, second) cond) Unit inches millimeters degrees	.123 .12 .123 .1234 .12345 .12345 .123456	~	ractions	More	rch Options		3
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Dates DimXpert etailing rid/Snap nits Cold Display haterial Properties nage Quality heet Metal MBD heet Metal MBD heet Metal MBD	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) (PS (inch, pound, se Custom Type Basic Units Length Dual Dimension Length Angle	m, second) ram, second) cond) Unit inches millimeters degrees	.123 .12 .123 .1234 .12345 .123456 .1234567	~	ractions	More	rch Options		3)
International Standard Annotations Dimensions Virtual Sharps DimApert etailing rid/Snap nits Model Display laterial Properties mage Quality heet Metal MBD heet Metal lane Display	Unit system MKS (meter, kilogram CGS (centimeter, gra MMGS (millimeter, gr CGS (centimeter, gra CGS (centimeter, gram) Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties	m, second) ram, second) cond) Unit inches millimeters degrees	.123 .12 .123 .1234 .12345 .12345 .123456	×	ractions	More	rch Options		
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Dables DimXpert etailing rid/Snap nits todel Display laterial Properties nage Quality heet Metal MBD heet Metal lane Display	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) CGS (centimeter, gram) CGS (centimeter, gram) Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties Length	m, second) ram, second) cond) Unit inches degrees inches	.123 .12 .123 .1234 .12345 .123456 .1234567	×	ractions	More	rch Options		
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Dables DimXpert etailing rid/Snap nits todel Display laterial Properties nage Quality heet Metal MBD heet Metal lane Display	Unit system MKS (meter, kilogram CGS (centimeter, gram MMGS (millimeter, gram) CGS (centimeter, gram) CGS (centimeter, gram) Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties Length Mass	m, second) ram, second) Unit inches degrees inches pounds	.123 .12 .123 .1234 .12345 .123456 .1234567	×	ractions	More	rch Options		
Internet of the second	Unit system MKS (meter, kilogram CGS (centimeter, gra MMGS (millimeter, gra CGS (centimeter, gra CGS (centimeter, gra Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties Length Mass Per Unit Volume	m, second) ram, second) Unit inches degrees inches pounds	.123 .12 .123 .1234 .12345 .123456 .1234567	×	ractions	More	rch Options		
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Dables DimXpert etailing rid/Snap nits todel Display laterial Properties nage Quality heet Metal MBD heet Metal lane Display	Unit system MKS (meter, kilogram CGS (centimeter, gra MMGS (millimeter, gra CGS (centimeter, gra CGS (centimeter, gra Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties Length Mass Per Unit Volume	m, second) ram, second) Unit inches degrees inches pounds	.123 .12 .123 .1234 .12345 .123456 .1234567	×	ractions	More	rch Options		
Istem Options Documer rafting Standard Annotations Dimensions Virtual Sharps Dables DimXpert etailing rid/Snap nits todel Display laterial Properties nage Quality heet Metal MBD heet Metal lane Display	Unit system MKS (meter, kilogram CGS (centimeter, gra MMGS (millimeter, gra CGS (centimeter, gra CGS (centimeter, gra Custom Custom Type Basic Units Length Dual Dimension Length Angle Mass/Section Properties Length Mass Per Unit Volume	m, second) ram, second) Unit inches degrees inches pounds	.123 .12 .123 .1234 .12345 .123456 .1234567	×	ractions	More	rch Options	Help	

- 9. Under File at the top of the screen, pick Save As...
- 10. For the Save as type: select "Part Template (*.prtdot) from the pulldown menu. Enter "Part_IPS_ANSI" as the filename. At the top of the window navigate to the SOLIDWORKS Template folder you created previously, and pick the Save button. If a file called "Part.PRTDOT" is in the same directory, you can delete it.

\leftarrow \rightarrow \checkmark \bigstar \blacksquare \Rightarrow Thi	s PC > Desktop > SolidWorks Templa	ites 🗸 🗸	ට Search Solid	Works Templates	۶
Organize 👻 New folde	r			-	(
Personal's share ^	Name	Date modified	Туре	Size	
💻 This PC	Part_IPS_ANSI.PRTDOT	11/15/2023 1:55 PM	PRTDOT File	25 KB	
Desktop					
Documents					
🖶 Downloads					
👌 Music					
2					
Pictures					
 Pictures Videos 					
the second s					
Videos	PS_ANSI.PRTDOT	1			
Videos		<u> </u>			
Videos	emplates (*.prtdot)				
Videos Local Disk (C:) File name: Part_II Save as type: Part To Description: Add a	emplates (*.prtdot)	ed components			
Videos Local Disk (C:) File name: Part_II Save as type: Part To Description: Add a	emplates (*.prtdot)		Д		
Videos Local Disk (C:) File name: Part_I Save as type: Part Te	emplates (*.prtdot)	ed components Advanced	Û		

11. Under File, pick Close.

Now we need to add this folder to file locations that SOLIDWORKS can look into.

12. Under the Tools menu, pick **Options**. Select **File Locations** under System Options. Make sure **Document Templates** is selected as the **Show folders for:** option. Pick the **Add...** button to add the user-define template to the list of folders containing document templates. Locate the SOLIDWORKS Template folder on the Desktop, then pick the **Select Folder** button.

- → → ↑ 🔳 → This PC → Desktop →	ٽ ~	Search Desktop	م
Organize 🔻 New folder			0
 Quick access Dropbox Biodiesel Wiring BioDiesel_DL105, Personal's sharei This PC 	SolidWorks Templates	Unused	
Deskton Y A			

13. Pick the **OK** button. If a pop-up window appears with the question, "Would you like to make the following changes to your search paths?" Pick **Yes**.

System Options		😳 Search Options	C
General MBD Drawings Display Style Performance Colors Sketch Relations/Snaps Display Selection Performance Assemblies	Show folders for: Document Templates Folders: C:\Users:\Mike\Desktop\SolidWorks Templates C:\ProgramData\SolidWorks\SOLIDWORKS 2024\templates	Edit All Add Delete Move Up Move Down	
External References Default Templates File Locations FeatureManager Spin Box Increments View Reset	~		

We will use this template for each new part we create so that we don't have to set these parameters each time we create a new part.


14. Under File, pick **New...** Pick the **Advanced** button in the lower-left corner of the window if SOLIDWORKS comes up in Novice mode.

New SOLIDWORKS Document		>
Part	Assembly	Drawing
a 3D representation of a single design component	a 3D arrangement of parts and/or other assemblies	a 2D engineering drawing, typically of a part or assembly
	SOLIDWORKS Tutoria	ls
Advanced	OK	Cancel Help

15. Pick the SOLIDWORKS Templates tab, then pick the **Part_IPS_ANSI** icon. Pick OK.

ew SOLIDWORKS Document		
emplates MBD SolidWorks Templates		
Part_IPS_ANSI	Preview	
Novice Tutorials	OK Cancel Help	

We are back in SOLIDWORKS with all desired parameters already set. If the left Extruded Boss/Base Toolbar and the right Sketching Toolbar are not present, don't worry; they will be added shortly.

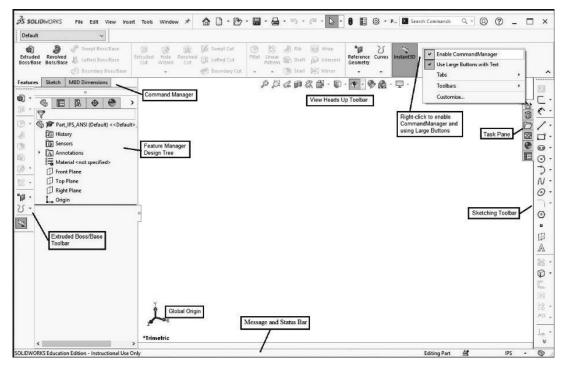

Note that I only have 3 tabs (Features, Sketch, and MBD Dimensions) listed in my working window because I have turned off the other tabs. Right-click at the top and select the **Tab** option to turn off the tabs you do not want to see or use.



With Use Large Buttons with Text selected, the three tabs appear as follows.

The Sketch tab.


Exit Sketch	Smart Dimension	2.0.N 2.7.0		htties Entities	Entities O	fset BB Line	ror Entities ear Sketch Pattern		⊥ Display/Delete Relations	Repair Sketch	Quick Snaps	Rapid Sketch	Instant2D	Shaded Sketch
•		<u>ه ه</u>	* 8	<u> </u>	Sun	face 🗖 Mo	017-00 0018-0-00 ⁻	٠	、 2		÷		a - 🖵	Contou

35 SOLII	WORKS	File	e Edit	View Inse	ert Tools	Windo	w 🖈		• 🗅 • 🖻	- 🗐	• 🔒	- 12) •	@ • 🔓 •	0 🗉	@ •	P 📐 Se
Default			~														
Extruded Boss/Base	Revolved Boss/Base	-	Swept Bos Lofted Bos		Extruded Cut	Hole Wizard	Revolved Cut		Swept Cut Lofted Cut) Fillet	0-0-	0		🗑 Wrap 🖗 Intersect	Reference Geometry	び Curves	Instant3D
		Ø	Boundary I	Boss/Base		÷		B	Boundary Cut		-		Shell	Mirror			

The MBD Dimensions tab.

35 SOLID	WORKS	File Edit	View In	sert Tools V	/indow	*	a C	• 🖄 •		- 5 · @ · ▷	• 🟮 📰 😳 • P 🗵
Default			~								
Auto Dimension Scheme	Location Dimension	Size Dimension	Angle Dimension	। Basic Location Dimension	A Pattern Feature	A Datum	🔊 Datum Target	Geometric Tolerance	Show Tolerance Status	ET TolAnalyst Study	
Features	Sketch N	1BD Dimensi	ons						P	C∢@&&⊕~€] - 💽 - 🧼 🎡 - 🖵 -

You can also add the Sketch and Features tools along the side of the window. The Sketch tools will appear along the right side of the window. The Extruded Boss/Base Toolbar will appear along the left side of the window. These are added by **Toolbars** from the same popup menu.

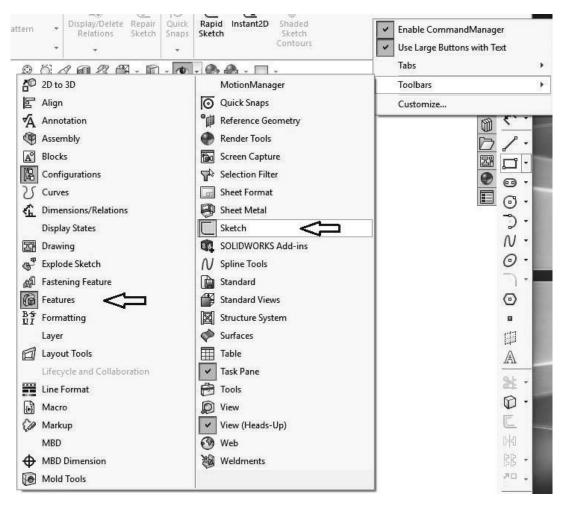


Selecting the **CommandManager** from the pop-up menu disables it. Picking it again enables it. Disabling the **Use Large Buttons with Text** option gives you more room to work so do this now.

16. To start a sketch, first select one of the three principle planes (Front Plane, Top Plane, or Right Plane), then pick the Sketch icon at the top of the window or along the right side of the window using the LMB. Pick the **Front Plane** for this exercise.


If you forget to pick the plane first, the three orthogonal planes will appear on the screen so you can select the desired sketching plane such as the **Front Plane**.

Before sketching it is a good idea to turn on **View Sketch Relations** so you can tell when a line is horizontal, vertical, parallel to another line, perpendicular to another line, tangent to a curve, etc.

17. Pick the eyeball icon in the View Heads Up Toolbar. Urify that the View Sketch Relations icon is highlighted, otherwise select it.

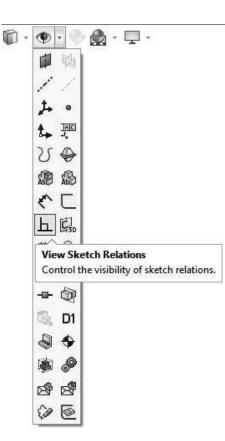


18. Select the **Line** tool, then draw a few lines similar to what is shown below. The exact locations or lengths of the lines don't matter. Typically, you want to start at the plane's origin. If you create a closed area, the area will be shaded as shown below and the line command will be paused for one mouse click. To stop a chain of connected lines, double-click the left mouse button (LMB). The line command is still active so you can continue to draw additional lines. To stop drawing lines, press the <ESC> key, or Right-click (RMB) and pick **Select** from the pop-up menu.

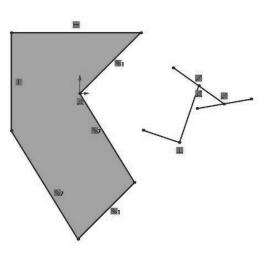

If the sketch relations do not show up on your sketch, see step 17.


In the figure above, the **Coincident** Sketch Relations icon indicates that the first point is coincident with the Front Plane's origin. There are two sets of parallel lines. There is a vertical and a horizontal line, and two lines that are perpendicular to each other. On the right, one line connects at the midpoint of another line and is coincident with that line. This information can be very helpful when sketching a given shape. A list of Sketch Relations is shown below.

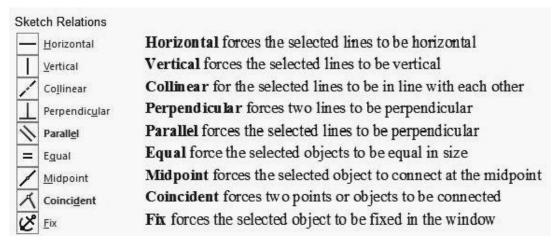

If your sketched lines do not reflect the desired Sketch Relations, you can select the appropriate lines by picking the first line, then holding down the *CTRL>* key and picking the second line. A list of possible sketch relations will appear on the left side of the window. Pick the appropriate sketch relation from the list.


- 19. Move to the upper portion of the sketching window and hold the LMB down. Move the mouse to the lower right area of the window, which will highlight all of the lines previously drawn. Release the LMB, then press the <Delete> key to delete all of the selected lines.
- 20. Select the Circle icon from the sketch toolbar. Pick a point in the window, then move the mouse to a new location. A Circle's center will be located at the first point selected and the size will be dictated by the second mouse pick. Draw several circles similar to what is shown below.
- 21. Pick the center of the circle at the origin, hold down the <Ctrl> key, and pick the center of the smaller circle below it. In the Add Relations window, pick the Vertical icon. Pick the green checkmark.
- 22. Pick the center of the left circle, then hold down the <Ctrl> key, and pick the center of the right circle. In the Add Relations window, pick the Horizontal icon. Pick the green checkmark.
- 23. Pick the edge of the left circle, then hold down the <Ctrl> key, and pick the edge of the right circle. In the Add Relations window, pick the Equal icon. Pick the green checkmark.

24. Pick the edge of the left circle, then hold down the <Ctrl> key, and pick the edge of the circle centered at the origin. In the Add Relations window, pick the Tangent icon. Pick the green checkmark.

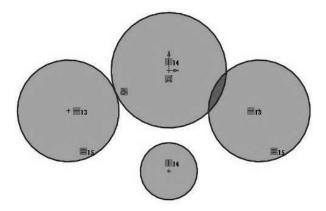


The first circle was drawn at the origin of the sketch window. The smaller circle is directly below the first circle as indicated by the Vertical relation. The left and right circles are equal in size and their centers are along the same horizontal axes.

25. Select the Line tool again, then add four lines that are tangent to the four circles as shown. If any of the lines are not tangent to the given circle, select the circle near the endpoint of the line, then pick Tangent from the Sketch Relations window on the left. If another relation is present other than the coincident relation at the end of a given line, pick the relation with the LMB, then press the <Delete> key to remove it. Each line segment should have a Tangent and Coincident relation attached. See the figure below.

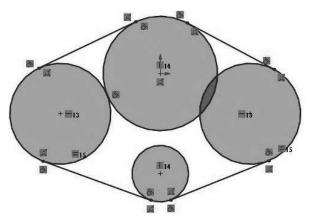


Use the Trim Entities tool to remove unwanted portions of your sketch.

26. Select the **Trim Entities** icon. Move the mouse inside the four tangent lines, then press down and hold the LMB, and drag the mouse cursor around without touching any of the four lines or the outside region of the four circles. Your sketch should look similar to the figure below. If you accidentally touch a line or the outer portion of a circle, undo the changes by pressing <Ctrl>+Z and try again.

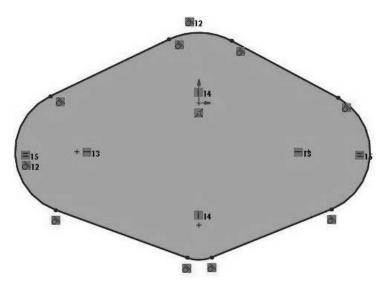

At the bottom of the window, the phrase Under Defined is visible. This is because we haven't sized any of the circles or located the centers of any of the circles. We will do this now. Also, note that the sketch is not currently symmetrical.

27. Pick the **Smart Dimension** icon. Pick the left circle, then move away from it and pick the location for the size dimension. Type 1.5 for the value, then press the <Enter> key or pick the green checkmark in the pop-up window.

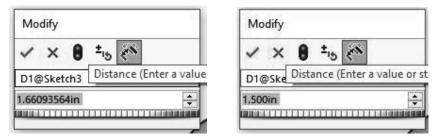

The radius of the left arc will be resized to 1.50 inches. Note that the right arc will also be 1.50 inches since the two arcs were set equal in size previously.

- 28. Pick the top arc and set its size to 1.75 inches.
- 29. Pick the bottom arc and set its size to 1.00 inches.
- 30. Pick the center of the left arc, then the center of the right arc. Move the mouse cursor down and note that a dimension appears between the centers of the two arcs. Set its value to 5.50 inches.
- 31. Set the distance between the top arc's center and the bottom arc's center equal to 3.00 inches.


At the bottom of the window, the phrase Under Defined is still showing so there is at least one more dimension or sketch relation missing. Let's make the object symmetrical. To do this, we need to add a centerline, and then add a symmetric relation.

32. Pick the down arrow to the right of the Line icon to bring up a pop-up menu. Pick Centerline from this menu, then draw a vertical centerline through the origin.

1	Line	
der a de	Centerline	
×	Midpoint Line	


33. Pick the center of the left arc. Hold down the <Ctrl> key and pick the center of the right arc, then pick the centerline. Select Symmetric from the Add Relation window. (You can pick these three entities in any order.)

At the bottom of the window, the phrase **Fully Defined** appears, and your sketch should look exactly like the sketch below.

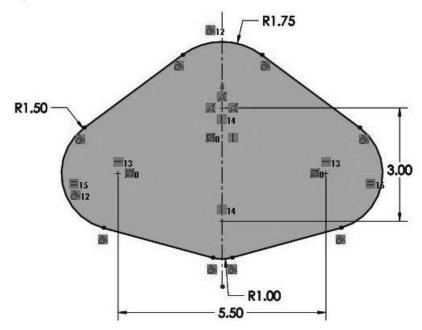


Let's exit from the sketch, and extrude this shape to make our first 3D part with a depth of 2.00 inches.


- 34. Pick the shaded Sketch icon on the right or the Exit Sketch icon at the top of the screen if the Use Large Buttons with Text feature is enabled.
- 35. With the sketch highlighted in the Feature Manager Design Tree, pick the Extruded Boss/Base icon. Leave the direction as Blind. Set the depth in Direction 1 to 2.00 inches. Pick the green checkmark to complete the extrusion.

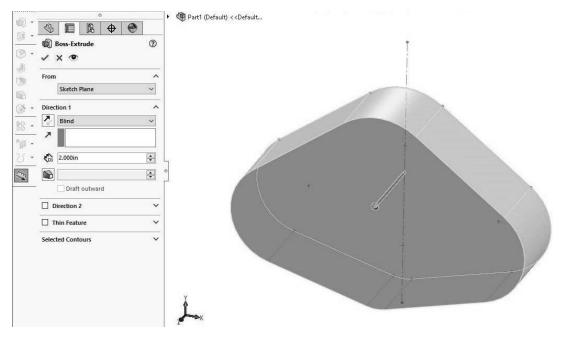

And the final extruded part appears on the screen.

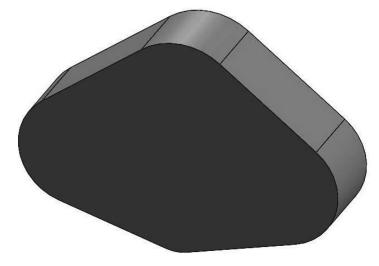

- 36. If necessary, press the $\langle F \rangle$ key to fit the part on the screen.
- 37. Right-click on the **Material** icon in the **FeatureManager Design Tree** and select **Plain Carbon Steel** using the LMB. Notice that the selected material now appears in the **FeatureManager Design Tree**.

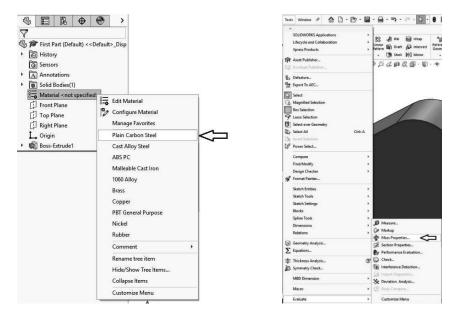

- 38. Under the File menu, pick Save. Name the part as "First Part". Make sure you are saving the part file in the SOLIDWORKS Parts folder you created previously. Pick Save.
- 39. Under **Tools**, select **Evaluate**, then select **Mass properties...** The following window appears. The mass should be 18.88 pounds and the volume should be 67.01 cubic inches if you properly dimensioned the part and added the appropriate sketch relations. If not, go back and check your construction procedure.

First Part.SLDPRT		
THAT BEST AT		0.1
		Options.
Override Mass Propertie	s Recal	culate
Include hidden bodies/co	mponents	
Create Center of Mass feat	hure	
Show weld bead mass		
Report coordinate values rela	tive to: default	«
Mass properties of First Part		
Configuration: Default		
Coordinate system: defa	iult	
Density = 0.28 pounds per cu	ubic inch	
Mass = 18.88 pounds		
Volume = 67.01 cubic inches		
Surface area = 110.87 square	inches	
Center of mass: (inches)		
X = 0.00		
Y = -1.35		
Z = 1.00		
Principal axes of inertia and p	principal moments of	inertia: (pounds * square
Taken at the center of mass.		
ix = (1.00, 0.00, 0.00) iy = (0.00, 1.00, 0.00)	Px = 39.59 Pv = 86.04	
lz = (0.00, 0.00, 1.00) lz = (0.00, 0.00, 1.00)	Pz = 113.04	
Moments of inertia: (pounds	s * square inches)	
Taken at the center of mass a	ind aligned with the	
Lxx = 39.59	Lxy = 0.00	Lxz = 0.00
Lyx = 0.00	Lyy = 86.04	Lyz = 0.00
Lzx = 0.00	Lzy = 0.00	Lzz = 113.04
Moments of inertia: (pounds		
Taken at the output coordina		sitive tensor notation.)
	lxy = 0.00	hz = 0.00
lxx = 92.90		
lxx = 92.90 lyx = 0.00	lyy = 104.92	lyz = -25.50 lzz = 147.47
lxx = 92.90		iyz = -25.50 izz = 147.47

40. Pick the X in the upper right corner of the window to close the Mass Properties window.

1VIa	ass Properties		-	
)	First Part.SLDPRT		()ptions
	Override Mass Properties	Recalculate		

41. If your mass or volume is different, right-click on **Boss-Extrude1** and select **Edit Sketch**, then check over your sketch for this part. Maybe you are missing a sketch relation. After correcting your sketch, exit your sketch, and check **Mass properties...** again.

and the second sec	Feature (Boss-Extrude1)		
 Top Plane Right Plane Origin Boss-Extrude 	Image: Constraint of the second se	-	

- 42. Pick Save.
- 43. Under the File menu again, pick Close.
- 44. Under the File menu, pick Exit to exit from SOLIDWORKS.

