

# Commercial Design

Using

# Revit® Architecture 2009



**Daniel John Stine**

**SDC**  
PUBLICATIONS

Schroff Development Corporation  
[www.schroff.com](http://www.schroff.com)

---

Better Textbooks. Lower Prices.

**INSIDE:**



## Lesson 3

### Office Building: FLOOR PLAN (First Floor)::

In this lesson you will draw the first floor plan of an office building. The office building will be further developed in subsequent chapters. It is recommended that you spend adequate time on this lesson as later lessons build on this one.

#### *Exercise 3-1:*

#### *Project Overview*

A program statement is created in the pre-design phase of a project. Working with the client (or user group), the architect gathers as much information as possible about the project before starting to design.

The information gathered includes:

- Rooms: What rooms are required?
- Size: How big the rooms need to be? (E.g., toilets for a convention center are much bigger than for a dentist's office.)
- Adjacencies: This room needs to be next to that room. (E.g., the public toilets need to be accessible from the public lobby.)

With the project statement in hand, the architect can begin the design process. Although modifications may (and will) need to be made to the program statement, it is used as a goal to meet the client's needs.

You will not have a program statement, per se, with this project. However, the same information will be provided via step-by-step instructions in this book.

#### **Project overview:**

You will model a three-story office building located in a rural setting. Just to the north of the building site is a medium-sized lake. For the sake of simplicity, the property is virtually flat.

The main entry and parking is from the south side of the building. You enter the building into a three-story atrium. Levels 2 and 3 have guard railings that look down into Level 1 in the atrium. The atrium is enclosed on three sides by full height curtain wall (glass walls). See the image on the front cover.

This building is not meant to meet any particular building code. It is strictly a tool to learn how to use Revit. Having said that, however, there are several general comments as to how codes may impact a particular part of the design.

The floor plans are mostly open office areas with a few smaller rooms for toilets, private offices, work and break rooms, etc. These areas have several "punched" window openings on the exterior walls (punched as opposed to ribbon windows).

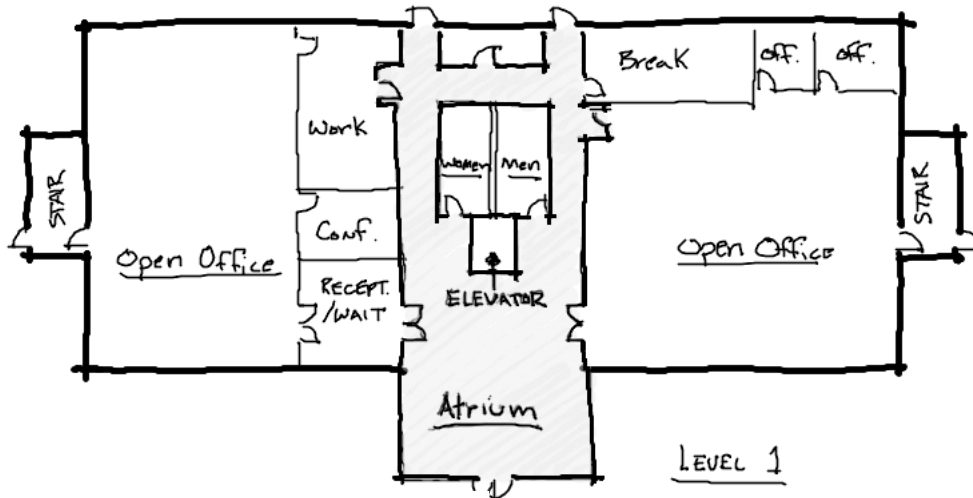


Figure 3-1.1 Level 1 floor plan sketch

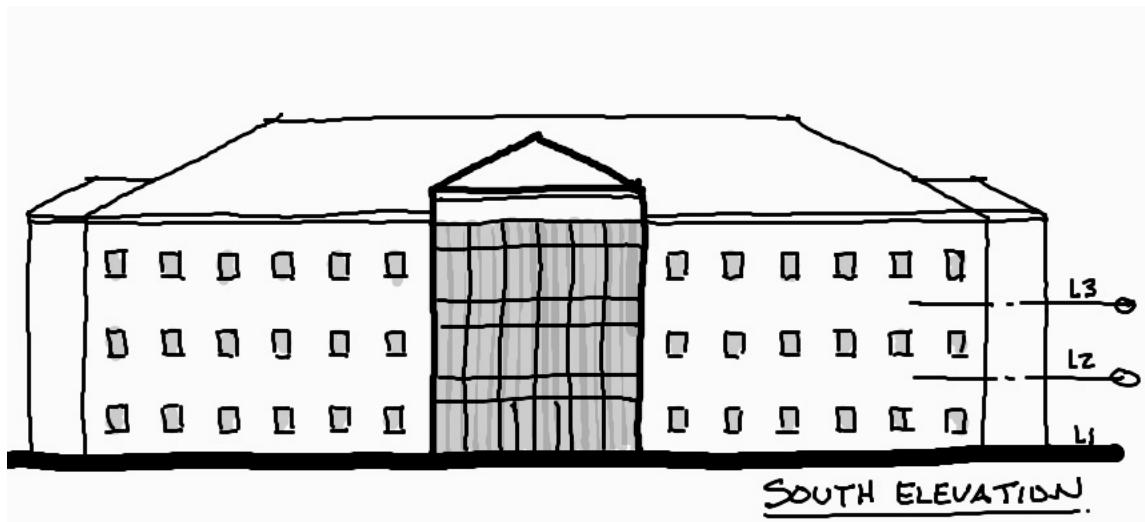


Figure 3-1.2 South elevation sketch

## Exercise 3-2: Exterior Walls

You will begin the first floor plan by drawing the exterior walls. Like many projects, early on you might not be certain what the exterior walls are going to be. So, we will start out using the generic wall styles. Then we will change them to a custom wall style (that you will create) once we have decided what the wall construction is.

### Adjust wall settings:

1. Start a new project using the **Default template**, and then select **Wall** from the *Design Bar*.
2. Make the following changes to the wall options in the *Options Bar* (Figure 3-2.1):
  - Wall style: **Basic Wall: Generic – 12"**
  - Height: **Unconnected**
  - Height: **36' 0"**
  - Loc Line: **Finish Face; Exterior**



Figure 3-2.1 Option bar: Walls

### Draw the exterior walls:

3. Draw the walls shown in Figure 3-2.2. Make sure your dimensions are correct. Use the *Tape Measure* tool if you need additional lengths listed.
 

**NOTE:** If you draw in a clockwise fashion, your walls will have the exterior side of the wall correctly positioned. You can also use the spacebar to toggle which side the exterior face is on.

#### **TIP:**

In the Options Bar, while you are in the Wall tool, you can click Chain to continuously draw walls. When Chain is not selected you have to pick the same point twice: once where the line ends and again where the next line begins.



The icons to the right of Chain allow you to specify what shape wall you wish to draw.

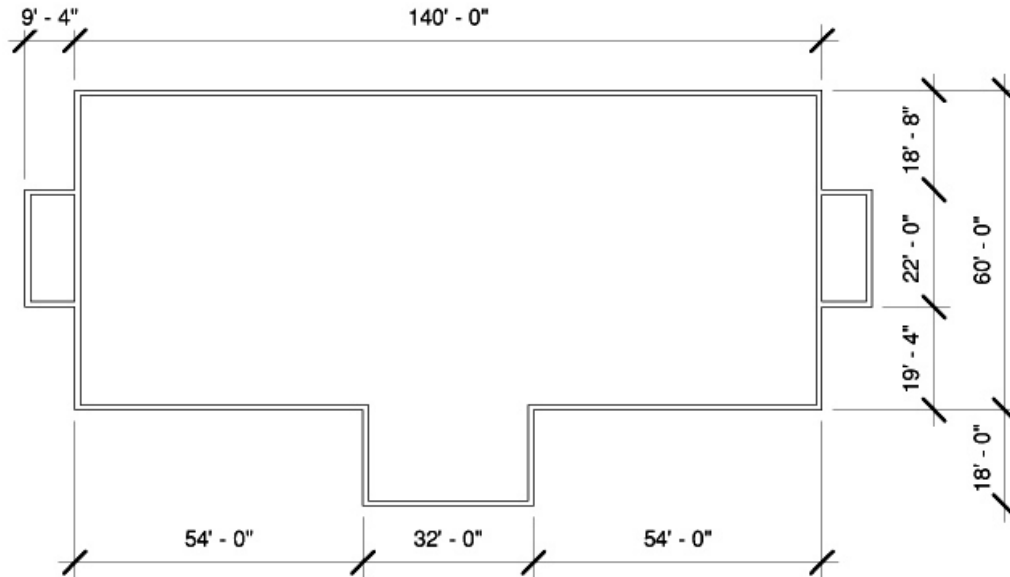



Figure 3-2.2 Exterior walls

## Create a custom wall style:

Revit provides several predefined wall styles, from metal studs with gypsum board to concrete block and brick cavity walls. However, you will occasionally need a wall style that has not yet been predefined by Revit. You will study this feature next.

First, you will take a quick look at a more complex wall type that Revit provides so you can see how they are set up.

4. With the *Wall* tool selected, pick the wall type: **Basic Wall: Exterior – Brick on CMU**, from the *Type Selector* drop-down list. (See image to the right.)
5. Click the **Properties** button to the right of the *Type Selector*.
6. You are now in the *Element Properties* dialog box. Click the **Edit/New** button (Figure 3-2.3).
7. You should be in the *Type Properties* dialog box. Click the **Edit** button next to the *Structure* parameter (Figure 3-2.4).

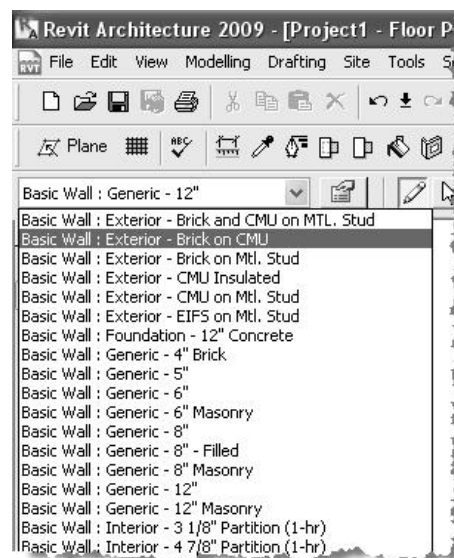

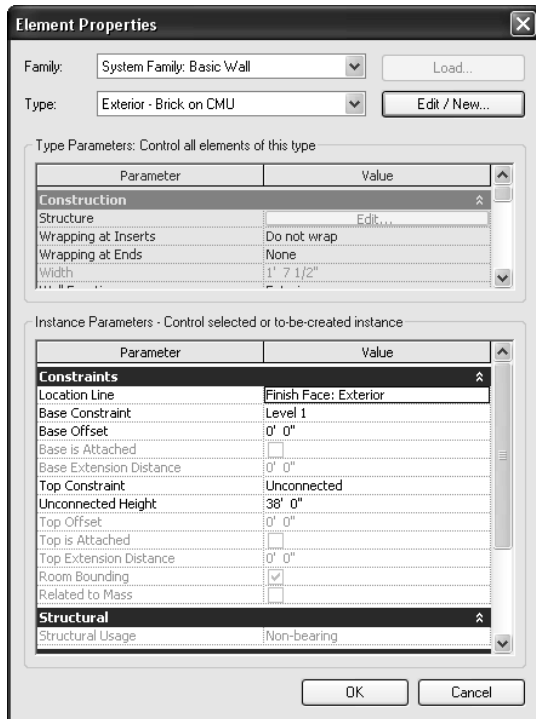


Figure 3-2.3 Element Properties

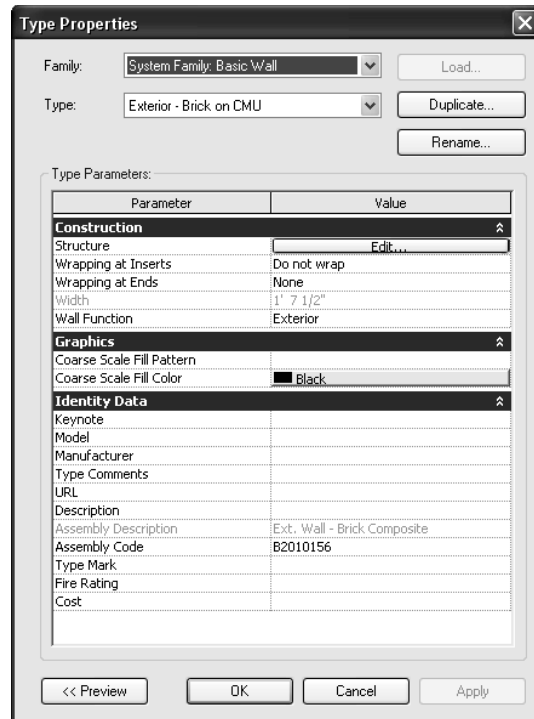


Figure 3-2.4 Type Properties

8. Finally, you are in the *Edit Assembly* dialog box. This is where you can modify existing wall types or create new ones. Click **<<Preview** to display a preview of the selected wall type. (Figure 3-2.5)

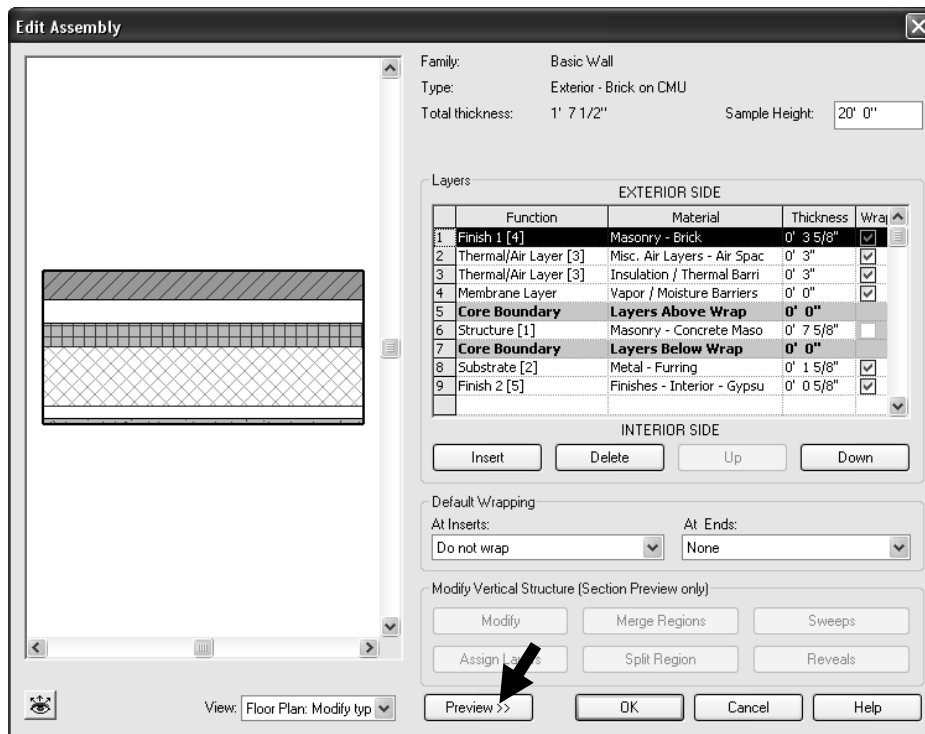


Figure 3-2.5 Edit Structure

Here, the *Edit Assembly* dialog box allows you to change the composition of an existing wall or (similar) to create a new wall.

Things to notice (Figure 3-2.5):

- The exterior side is labeled at the top and interior side at the bottom.
- You will see horizontal lines identifying the core material. The core material can be used to place walls and dimension walls. For example: the *Wall* tool will let you draw a wall with the interior or exterior core face as the reference line. On an interior wall you would typically dimension to the face of CMU rather than to the finished face of gypsum board. This is to work out coursing and give the contractor the information needed for the part of the wall he will build first.
- Each row is called a layer. By clicking on a layer and picking the **Up** or **Down** buttons, you can reposition materials within the wall assembly.



9. Click **Cancel** in each open dialog box to close them.
10. Set the Wall Style back to **Basic Wall: Generic – 12”** in the type selector.
11. Click the **Properties** button next to the type selector.
12. Click the **Edit/New** button.
13. Click **Duplicate**.
14. Enter **Brick & CMU cavity wall** for the new wall type name, and then click **OK** (Figure 3-2.6).

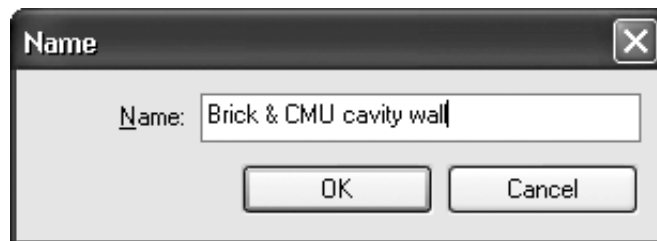


Figure 3-2.6 New wall type name

15. Click the **Edit** button next to the *Structure* parameter.

Using the **Insert** button and the **Up** and **Down** buttons, add the *layers* to your new wall style as shown below in **Figure 3-2.7**.


Function	Material	Thickness
Finish 1 [4]	Masonry -Brick	4"
Thermal/Air Layer	Misc. Air Layers – Air Space	2"
Thermal/Air Layer	Insulation / Thermal Barriers – Rigid Insulation	2"
<i>Core Boundary</i>	<i>Layers above wrap</i>	0"
Structure [1]	Masonry – Concrete Masonry Units	8"
<i>Core Boundary</i>	<i>Layers below wrap</i>	0"
Finish 1 [4]	Metal – Stud Layer	2½"
Finish 2 [5]	Finishes – Interior – Gypsum Wall Board	5⁄8"

**Figure 3-2.7** New wall layers

Masonry is typically drawn nominally in plans and smaller scaled details. This helps to figure out coursing for both drawing and dimensioning. For example, 8" concrete block is actually 7<sup>5</sup>/<sub>8</sub>".

Also, notice that the CMU, Rigid Insulation, Air Space and Brick add up to 16" in thickness. This portion of the wall would sit on a 16" concrete block (CMU) foundation wall directly below.

16. Your dialog should look like **Figure 3-2.8**. Click **OK** to close all dialog boxes.

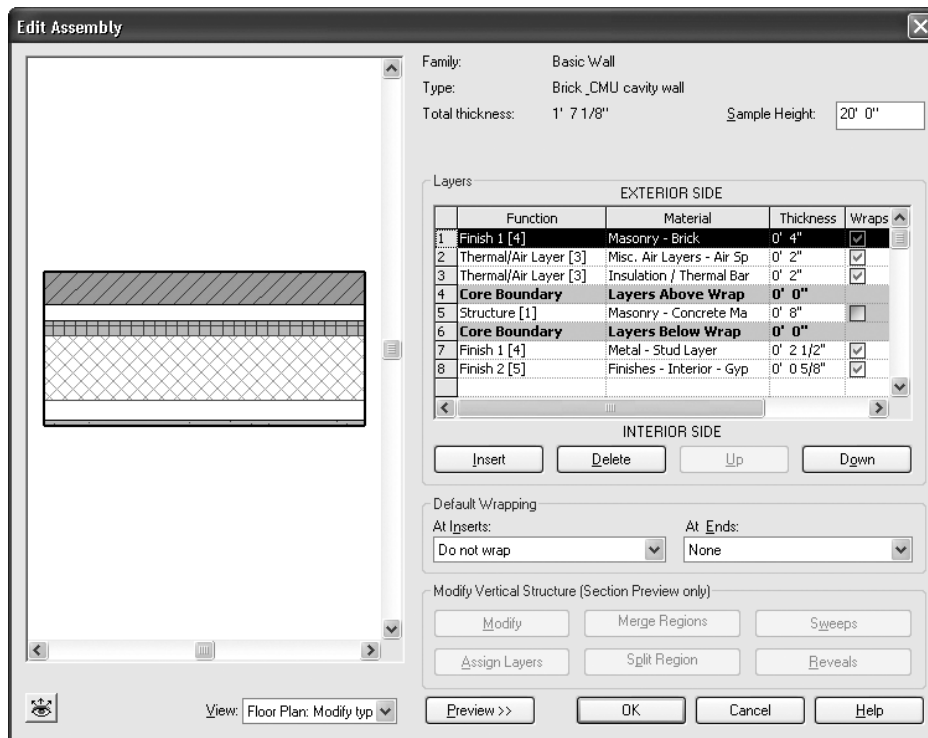

**Figure 3-2.8** Edit Structure for new wall type



The next step is to change the wall type for the walls previously drawn.

17. Select the **Modify** button from the *Design Bar*; this allows you to select objects in your drawing.
18. **Zoom out** so you can see the entire plan. Dragging your mouse from one corner to the other, make a window over the plan to select all the walls.
19. With the walls selected, pick **Basic Wall: Brick & CMU cavity wall** from the *Type Selector* drop down.


**TIP:**

If, after selecting all the walls, the *Type Selector* is not active and does not show any wall types, you probably have some other object selected like text or dimensions. Try to find those objects and delete them (except the elevation tags).

You can also click on the *Filter* button (located on the *Options Bar* when objects are selected) and uncheck the types of objects to exclude from the current selection.

You should notice the wall thickness change, but the wall cavity lines and hatch are not showing yet. This is controlled by the *Detail Level* option for each view.


20. Click on **Detail Level** icon in the lower-left corner of the Drawing Window.

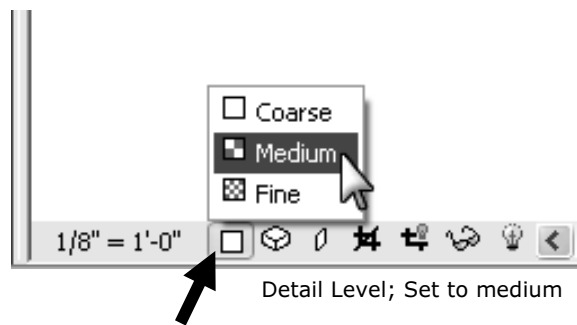

21. Select **Medium**.

You should now see the brick and CMU thicknesses with hatching. If you did not pay attention when drawing the walls originally, some of your walls may show the brick to the inside of the building.


22. Select **Modify** (or press **Esc**); select a wall. You will see a symbol appear that allows you to flip the wall orientation by clicking on that symbol (Figure 3-2.9).

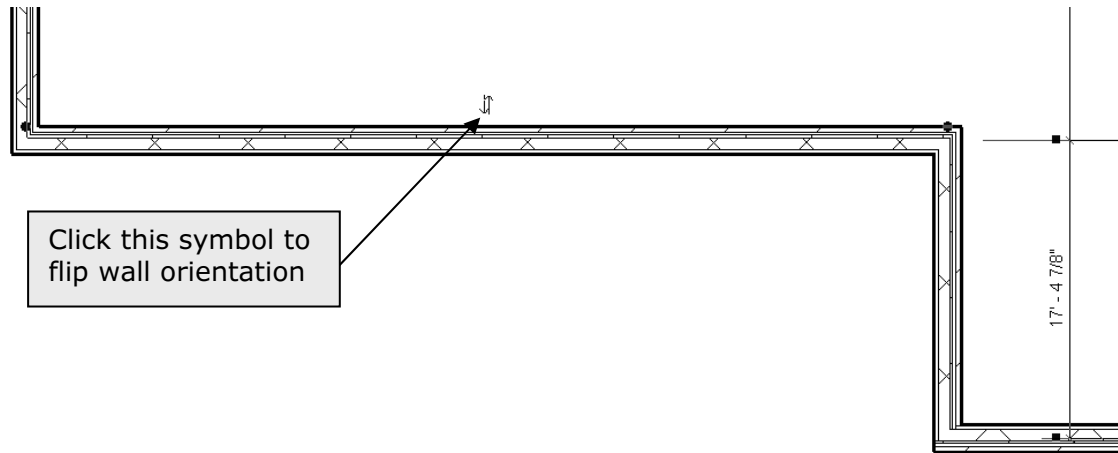

**Figure 3-2.9** Selected Wall; notice some walls have the brick on the interior

23. Whether you need to adjust walls or not, click on the flip symbol to experiment with its operation.  
**TIP:** *The Flip symbol is always on the exterior side (or what Revit thinks is the exterior side) of the wall.*
24. If some walls do need to be adjusted so the brick is to the exterior, do it now. You will probably have to select the wall(s) and use the *Move* tool to reposition the walls to match the required dimensions.
25. **Save** your Project as ex3-2.rvt.

**TIP:**

You can use the MOVE tool  Move on the menu bar to accurately move walls.

Follow these steps to move an object:

- Select the wall
- Click the Move icon
- Pick any point on the wall
- Start dragging the wall in the correct direction (don't click)
- Start typing the distance you want to move the wall and press Enter.

Finally, you will change the three walls at the atrium to be curtain wall (full glass). This will let lots of light into the atrium and better identify the main entry of the building.

26. Drag a window to select the three walls around the atrium.
27. With the walls highlighted, select **Curtain Wall: Curtain Wall 1** from the *Type Selector* drop-down.


Your atrium is now surrounded by curtain wall (Figure 3-2.10). In a later lesson we will add horizontal and vertical mullions to the curtain wall.

You can see your progress nicely with a 3D view. Click the **Default 3D View** button. Notice that Revit shows the curtain wall as transparent because it knows the curtain wall is glass. The other walls are shaded on the exterior side to make the image read better. You will add mullions to the curtain wall in a later lesson.



28. Save your project as **ex3-2.rvt**.

Revit automatically sets the hatch intensity and line weights.

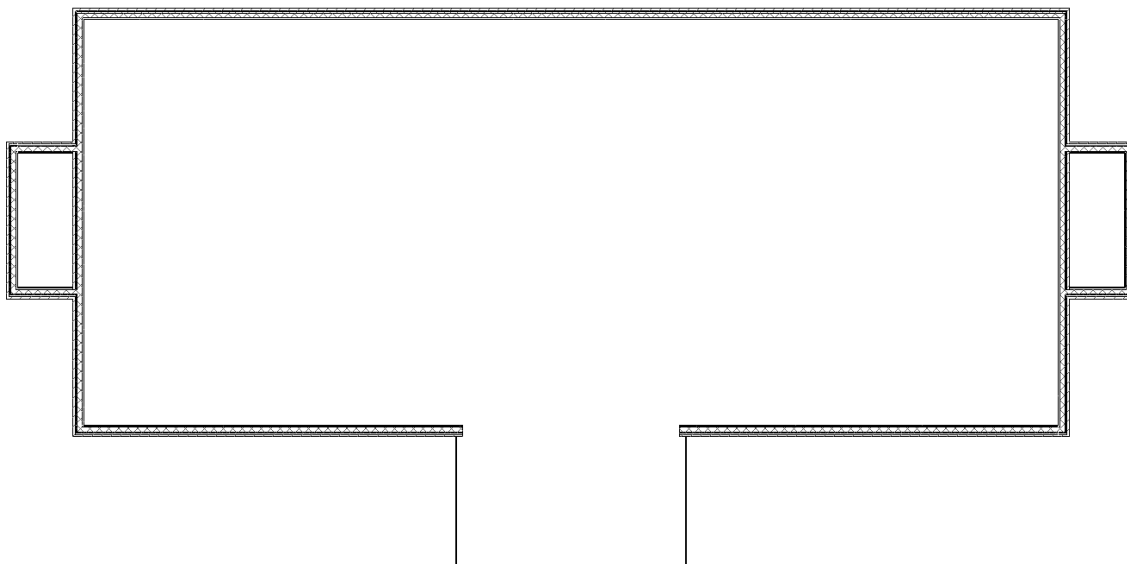

**Figure 3-2.10** Completed exercise

## Exercise 3-3: Interior walls

In this lesson you will draw the interior walls for the first floor.


### Adjust wall settings:



1. Select **Wall** from the *Design Bar*.
2. Make the following changes to the wall options in the *Options Bar* (Figure 3-2.1):
  - Wall style: **Basic Wall: Interior – 4 7/8" partition (1-hr)**
  - Height: **Level 2**
  - Loc Line: **Wall Centerline**

### Draw the interior walls:

3. Draw a vertical wall approximately as shown in Figure 3-3.1. We will adjust its exact position in the step #4.

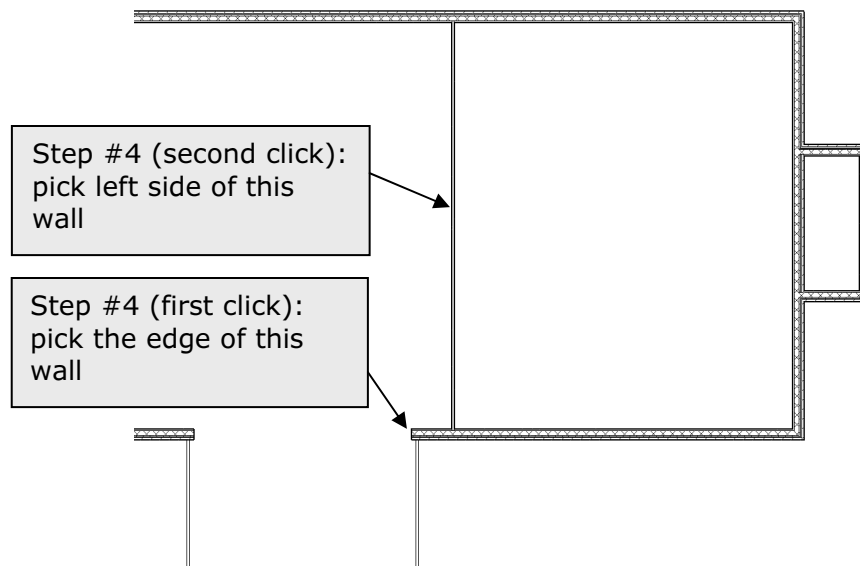

**Figure 3-3.1** First interior wall

4. Select the interior wall you just drew and use the **Align** tool to align it with the edge of the exterior wall in the atrium (Figure 3-3.1). When you are done, the wall should look like Figure 3-3.2.
5. Create the same wall for the west side of the atrium repeating the above steps.



### Modify an existing wall type:

Next you will add some additional interior walls. You will be drawing 8" CMU walls. Revit does have an 8" Masonry wall type available in the default template file that you started your project from. However, the thickness for this wall type is 7<sup>5</sup>/<sub>8</sub>", which is the actual size of a block. Floor plans are usually drawn nominally (i.e., 8") not actual (7<sup>5</sup>/<sub>8</sub>"). This is done so you can figure out coursing so minimal cutting is required. Therefore, rather than creating a new wall type you can simply modify the existing wall type.

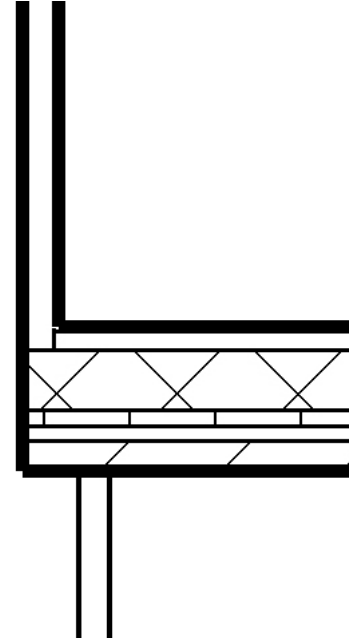


Figure 3-3.2 First interior wall

6. Select the wall style: **Basic Wall: Generic – 8" Masonry**.
7. Click on the **Properties** button, and then select the **Edit/New** button. Finally click **Edit** next to the *Structure* parameter.
8. Change the masonry thickness from 7<sup>5</sup>/<sub>8</sub>" to **8"** in the edit structure dialog box, and then select **OK** to close each dialog.

Occasionally Revit will not list dimensions, relative to the walls you want to draw new walls from, while in the create wall mode. One way to deal with this is to draw temporary walls to use as a reference. After using the temporary wall as a reference you can delete it.

9. With the '**Basic Wall: Generic – 8" Masonry**' wall as the current wall, set the location line (Loc. Line) to **Core Centerline**.

10. Draw the vertical wall shown in Figure 3-3.3; be sure to snap to the *Midpoint* of the atrium wall as your first point.

Next you will draw an elevator shaft, centered on the atrium and 35'-0" back (thus the temp. wall).


The inside dimensions of the elevator are:

**7'-4" x 6'-10"**.

Because you know the inside dimension you will want to adjust the location line to match the known info.

11. Set the *Loc. Line* to: **Finish Face: Interior.**

12. Draw the elevator shaft. Make sure the location line is to the inside so your shaft is the correct dimension. Draw the shaft anywhere in the drawing; you will adjust the exact position next.

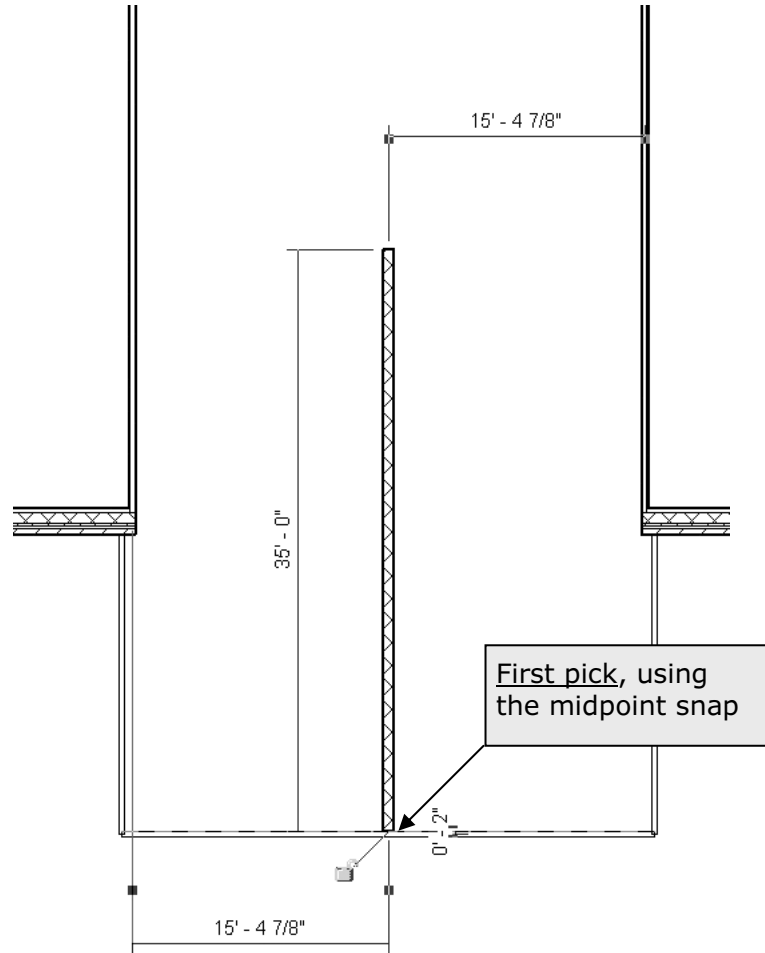

**Figure 3-3.3** Temp. wall

13. Select the 4 walls that represent the elevator shaft, and then pick the **Move** tool.

**TIP:**

Concrete blocks come in various widths, and most are 16" long and 8" high. When drawing plans there is a simple rule to keep in mind to make sure you are designing wall to coursing. This applies to wall lengths and openings within CMU walls.

Dimension rules for CMU coursing in floor plans:

- $e'-0''$  or  $e'-8''$  where  $e$  is any even number (e.g., 6'-0" or 24'-8")
- $o'-4''$  where  $o$  is any odd number (e.g., 5'-4")

14. Snap to the *Midpoint* of the shaft as your first point, and then snap to the *Middle Endpoint* of your temporary wall (Figure 3-3.4). You should zoom in to verify your snaps.

The elevator shaft is now perfectly centered in the atrium and exactly 35'-0" back from the south curtain wall.

15. At this point you can **delete** the temporary wall. Select the wall and then right-click and select delete (or press the Delete key on the keyboard).

A temporary wall can be useful for other tasks as well. One example is the *Mirror* tool requires (by default) a vertical line centered on the atrium to perfectly mirror objects from the east side to the west side of the building.

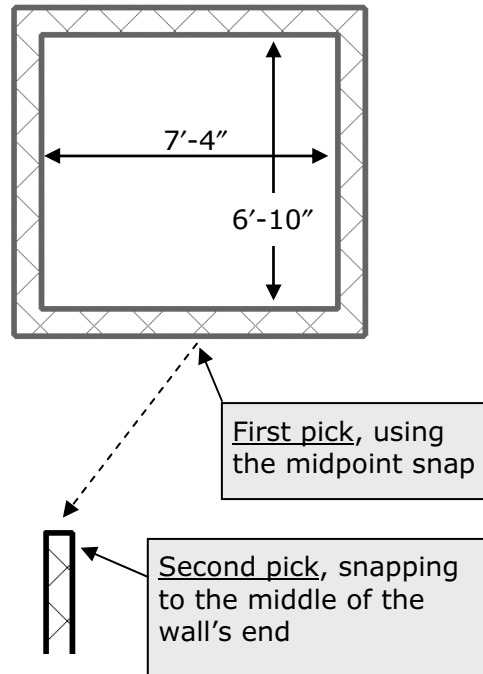


Figure 3-3.4 Move tool

### **FYI:**



When a wall is selected, you can click the Properties button on the Options Bar to see that wall's properties. Click on one of the elevator shaft walls and verify that they are 36'-0" tall.

## **Modify an existing wall:**

Next we want to change the portion of wall between the building and the east and west stair shafts. To do this you will need to split the current wall, trim the corners and then draw an 8" masonry wall.

16. **Zoom** in on the west stair shaft and select the **Split** tool.
17. Pick somewhere in the middle of the wall (Figure 3-3.5).
18. Use the **Trim** tool to trim the corners so the exterior wall only occurs at exterior conditions (Figure 3-3.6).  
**TIP:** Select the portion of wall you wish to retain.

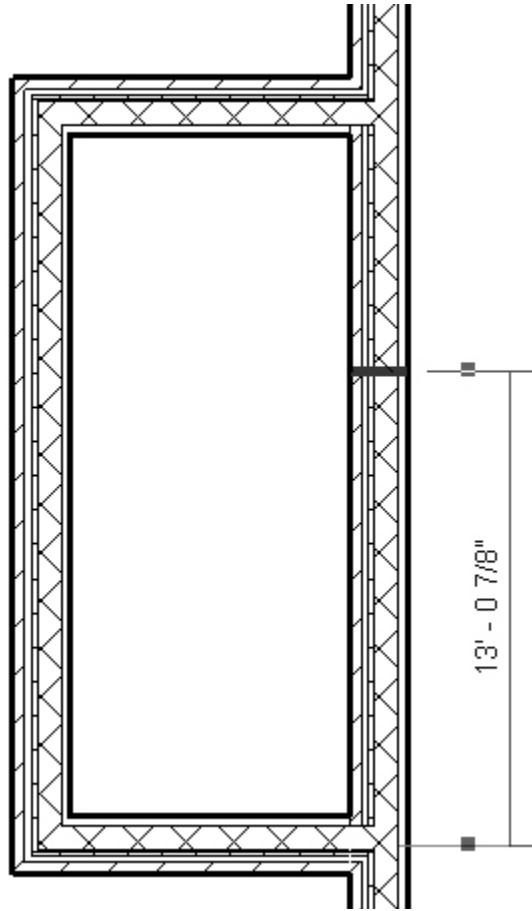


Figure 3-3.5 Split tool

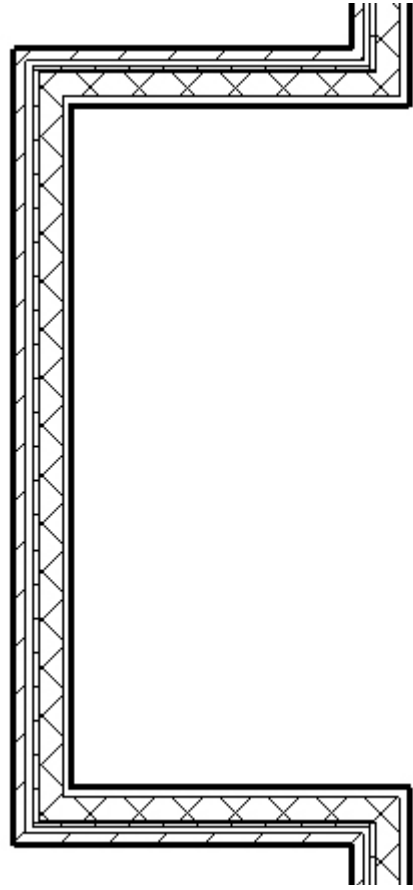


Figure 3-3.6 Trim tool

### Additional custom wall types:

We decide that the stair shafts are mostly utilitarian and do not require gypsum board on the walls. In the next steps you will create a new exterior wall type just like the one previously created less the gypsum board and metal studs. Also, you will create a custom wall type to close the open side we created in the previous steps. This wall type will have gypsum board and metal studs on one side.

19. Using wall type: *Basic Wall: Brick & CMU cavity wall* as a starting point, create a new wall type named **Brick & CMU cavity wall (no GWB)**. Remove the gypsum board and metal studs and save the new wall type. (*Remember to click Duplicate.*)
20. Change the three exterior walls around the west stair shaft to the new wall type created in the previous step.



- Using wall type: *Basic Wall: Brick & CMU cavity wall* as a starting point, create a new wall type named **8" Masonry with GWB 1S**. Remove the brick, air space and rigid insulation and save the new wall type (Figure 3-3.7).

**FYI:** It will be useful to come up with a standard naming system for your custom wall types. If the names get too long they are hard to read. The example above has:

- *GWB = Gypsum Wall Board (and would imply studs)*
- *1S = finish only occurs on one side of the wall.*

Function	Material	Thickness
<i>n/a</i>	<i>n/a</i>	<i>n/a</i>
<i>Core Boundary</i>	<i>Layers above wrap</i>	<i>0"</i>
Structure [1]	Masonry – Concrete Masonry Units	8"
<i>Core Boundary</i>	<i>Layers below wrap</i>	<i>0"</i>
Finish 1 [4]	Metal – Stud Layer	2½"
Finish 2 [5]	Finishes – Interior – Gypsum Wall Board	5⁄8"

Figure 3-3.7 New wall layers

- Draw a wall so the gypsum finish continues on the office side, using the *Align* tool if necessary (Figure 3-3.8). Use the *Measure* tool to make sure the stair shaft is the correct size; don't draw the dimensions.

Next you will use the *Mirror* tool to update the east stair.

- Erase the four walls of the east stair shaft; this will include the main east wall of the office building (Figure 3-3.9)
- Select the six walls at the west stair (Figure 3-3.9).

**TIP:** Make sure the count is correct on the *Status Bar*.

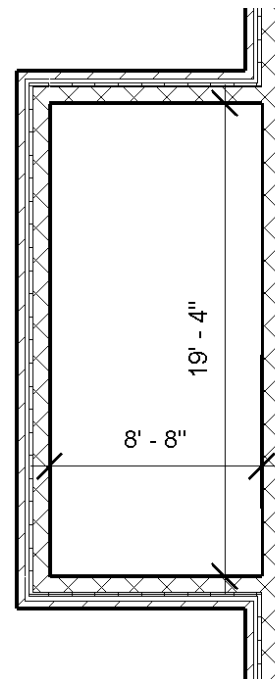


Figure 3-3.8 Revised west stair

- Select the **Mirror** tool and then select the atrium wall identified in Figure 3-3.9.

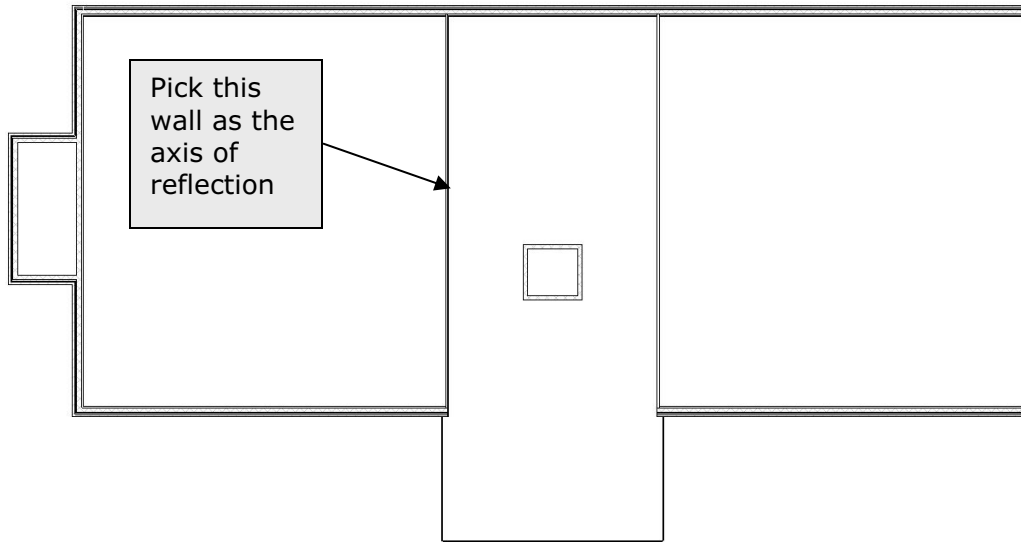


Figure 3-3.9 Mirror west stair – step 1

26. Use the **Move** tool to reposition the mirrored walls; they should be selected by default (Figure 3-3.10).
27. Use the **Measure** tool to verify the overall length of the building is 140'-0". Adjust as necessary.


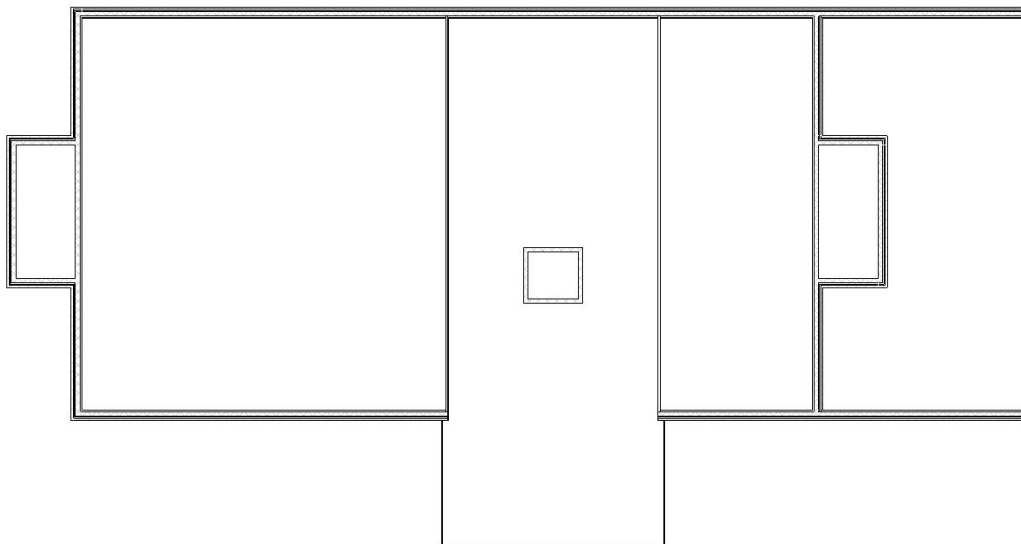


Figure 3-3.10 Mirror west stair – step 2

Finally, you will draw a few more interior walls to compete the first floor plan.

28. Set the Wall style to:  
**Basic Wall: Interior – 4 7/8" partition (1-hr)**
29. Draw the additional walls shown in Figure 3-3.11. Make sure to position the walls per the dimensions shown. Use the *Measure* tool to verify accuracy. Also, modify the *Loc Line* as required.

**Drawing Tips:** Copy the existing atrium wall 6'-4<sup>7</sup>/<sub>8</sub>" over (6'-0" plus one wall thickness), draw a wall from the midpoint of the elevator shaft with centerline reference (Loc Line), and use *Trim* and *Mirror* tools. Do not draw the dimensions. **SAVE YOUR PROJECT as ex3-3.rvt.**

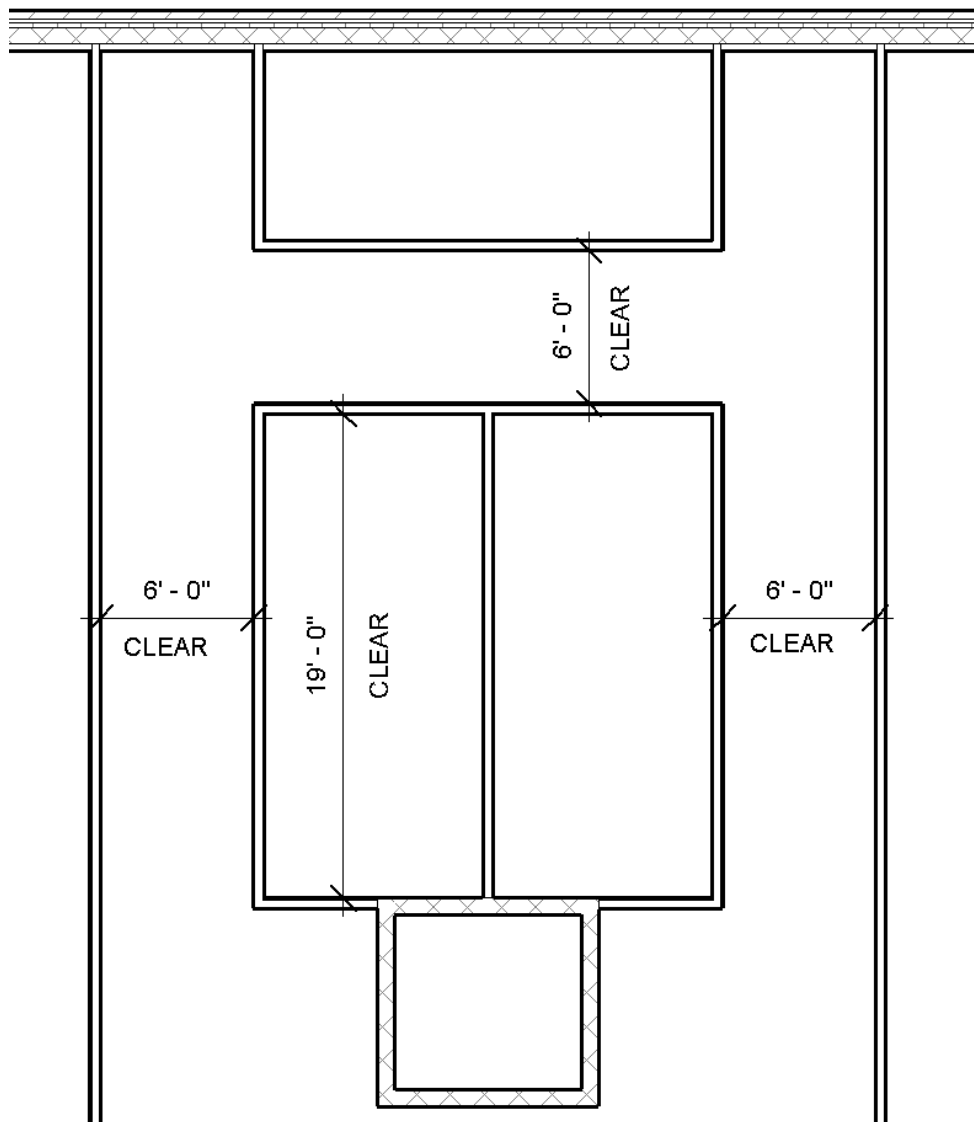

**Figure 3-3.11** Remaining interior walls

## Exercise 3-4: Elevator

This lesson will show you how to insert an elevator into your elevator shaft.

### Insert elevator:



Revit provides many *Families*, which are packages of predefined objects ready to insert into your project. However, many objects are not readily available, like elevators for example. Revit is continually adding content with each new release and to its online library. The online library is where you will acquire an elevator family for use in your project.

1. Open project ex3-3.rvt and **Save As ex3-4.rvt**.
2. Switch to the *Recent Files* view; if you closed this you will have to shut down Revit and reopen it.

You will have to download the elevator from the web. *Of course you will need to be connected to the Internet.*

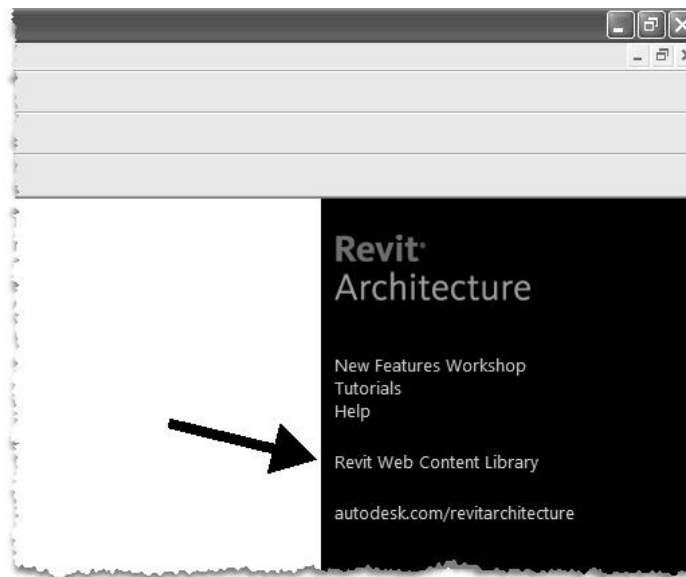


Figure 3-4.1 Recent Files

- Click the **Revit Web Content Library** button in the upper right of the *Recent Files* list (Figure 3-4.1).

Revit will open your web browser, and then you will be looking at the contents of Revit's Content Distribution Center (Figure 3-4.2).

- Click on "**Revit Architecture 2009 Library**".

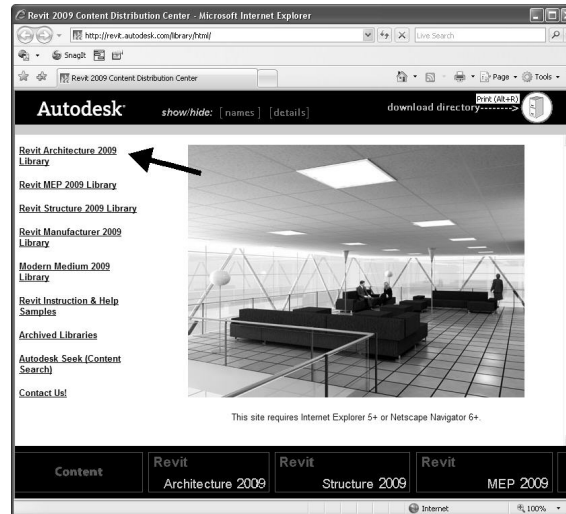


Figure 3-4.2 Web content via browser

**Revit Architecture 2009 Library**

- FRA Library
- UK Library
- US Library
  - Families
    - Annotations
    - Balusters
    - Casework
    - Columns
    - Curtain Wall Panels
    - Detail Components
    - Doors
    - Electrical Fixtures
    - Entourage
    - Furniture
    - Furniture System
    - Lighting Fixtures
    - Mass
    - Mechanical Equipment
    - Misc. Architectural
    - Planting
    - Plumbing Fixtures
    - Profiles
    - Site
    - Specialty Equipment
      - Church
      - Classroom-Library
      - Domestic**
      - Exercise Equipment
      - Fire Protection
      - Food Service
      - Lab
      - Loaders

Figure 3-4.3 Web content categories

- Click the plus next to **US Library, Families, Specialty Equipment**, and then select **Conveying Systems**. (Figure 3-4.3)

Within the web browser you should see a graphical representation of each family available for download (Figure 3-4.4).

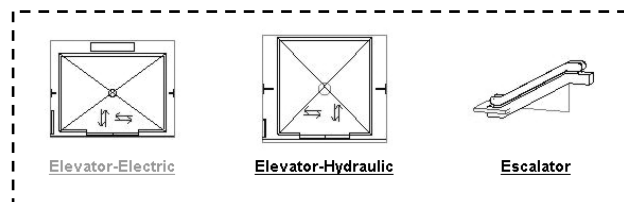


Figure 3-4.4 Web content visuals

- Click "**Elevator-Electric**" to download that family.
- Select **Save** (Figure 3-4.5a).

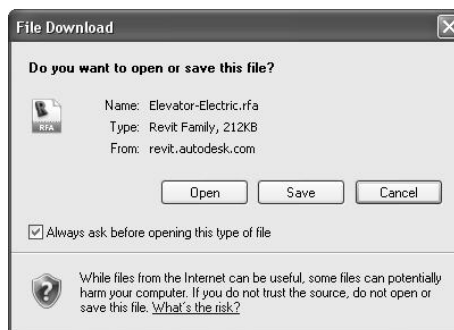


Figure 3-4.5a Web browser prompt

8. Save the file to the *Desktop* using the default name provided.

Now that you have saved the elevator family file to the hard drive, you need to load it into your current project.


9. Select **File** → **Load from Library** → **Load Family...** from the *Menu Bar*.
10. Browse to the *Desktop* and select the **Elevator-Electric.RFA**, and then click **Open**.

11. In the *Project Browser*, click the plus next to Families to expand the list (Figure 3-4.5b).
12. Expand the **Specialty Equipment** list, and then **Elevator-Electric**. (Figure 3-4.5b)

As you can see, four elevator types were loaded into your project. Similar to wall types, you can add one of these types as-is, or you can modify or create a new type. Next, you will add information in the *Type Properties* dialog to better document the elevator specified.

13. Right-click on the elevator type: **2000 lbs**, and then select **Properties** from the pop-up menu.

You will now see a listing of the properties for the selected elevator type.

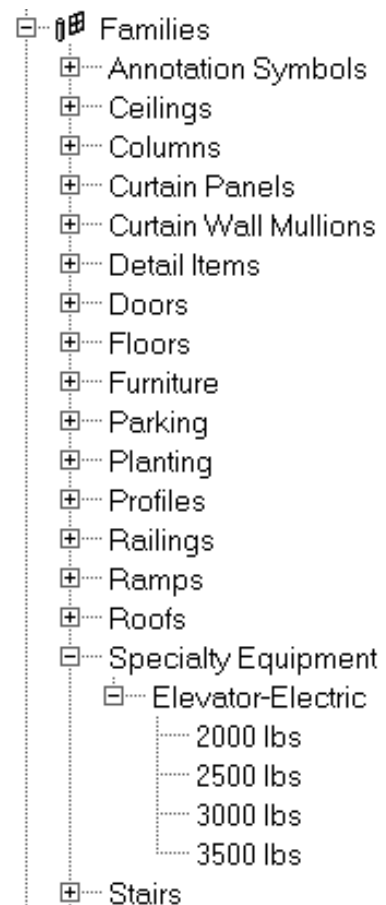

**Figure 3-4.5b** Elevator library:  
Project Browser

14. Click the **Preview** button (if necessary) to see the graphical review of the elevator type. Set the *View* to 3D View: View 1.

15. Add the following information (Figure 3-4.6):

- Model: **MadeUp 8864**
- Manufacturer: **ThyssenKrupp Elevator**
- URL: **www.thysselevator.com**

The three entries in step 15 are optional (although not for this exercise), but this is a great way to better document the project.

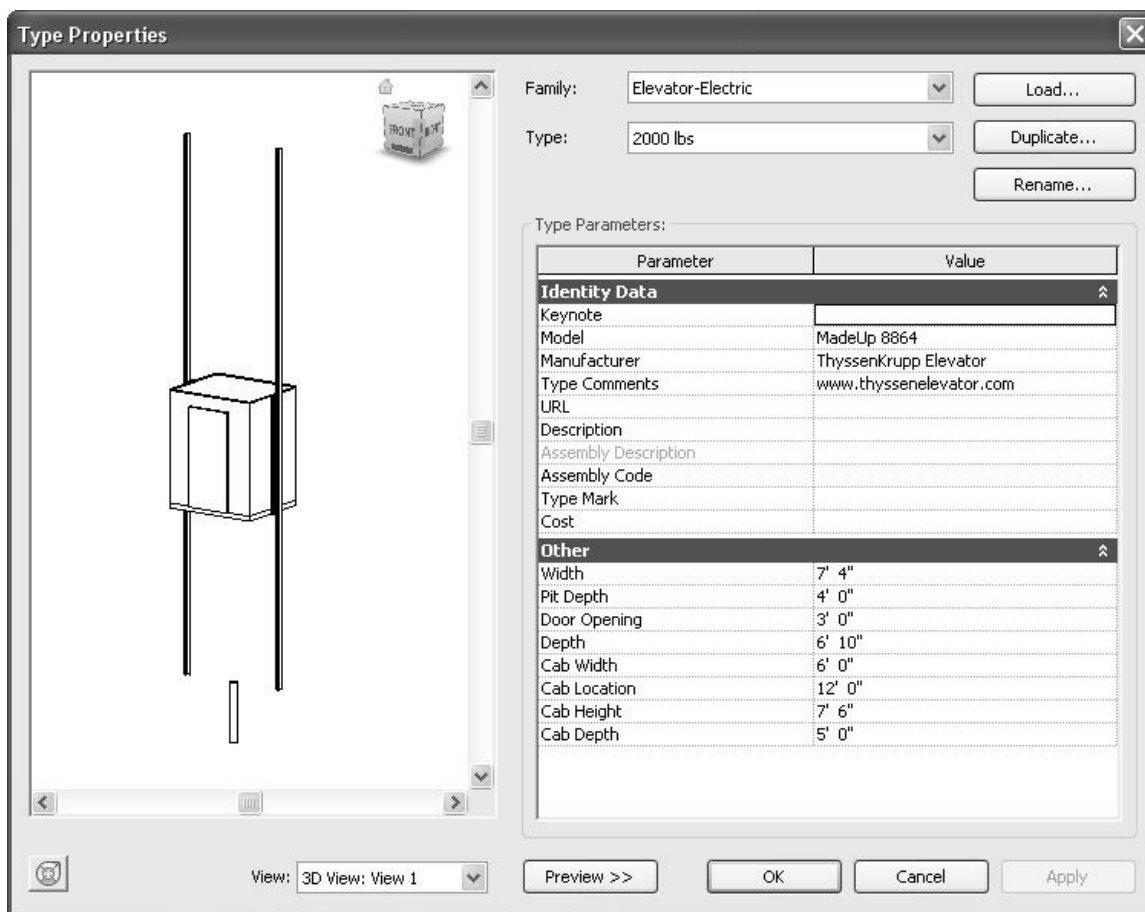


Figure 3-4.6 Elevator properties

16. Click **OK** to close the open dialog box.

17. Drag the **2000 lbs** elevator type from the project browser into the first floor plan.

The elevator type will be attached to you cursor, ready for insertion.

18. Move your cursor within the elevator shaft and adjust it until the elevator “snaps” in place; then click.

19. Press **Esc** twice to tell Revit you are finished placing elevators.

Now you have to add an elevator door in the shaft walls; this is similar to a regular door in a wall. Like the elevator, the elevator door has to be downloaded from the internet. You will do that next.

20. Similar to the steps previously covered, load the **Elevator Door – Center** family from the *Web Library* (Figure 3-4.7).


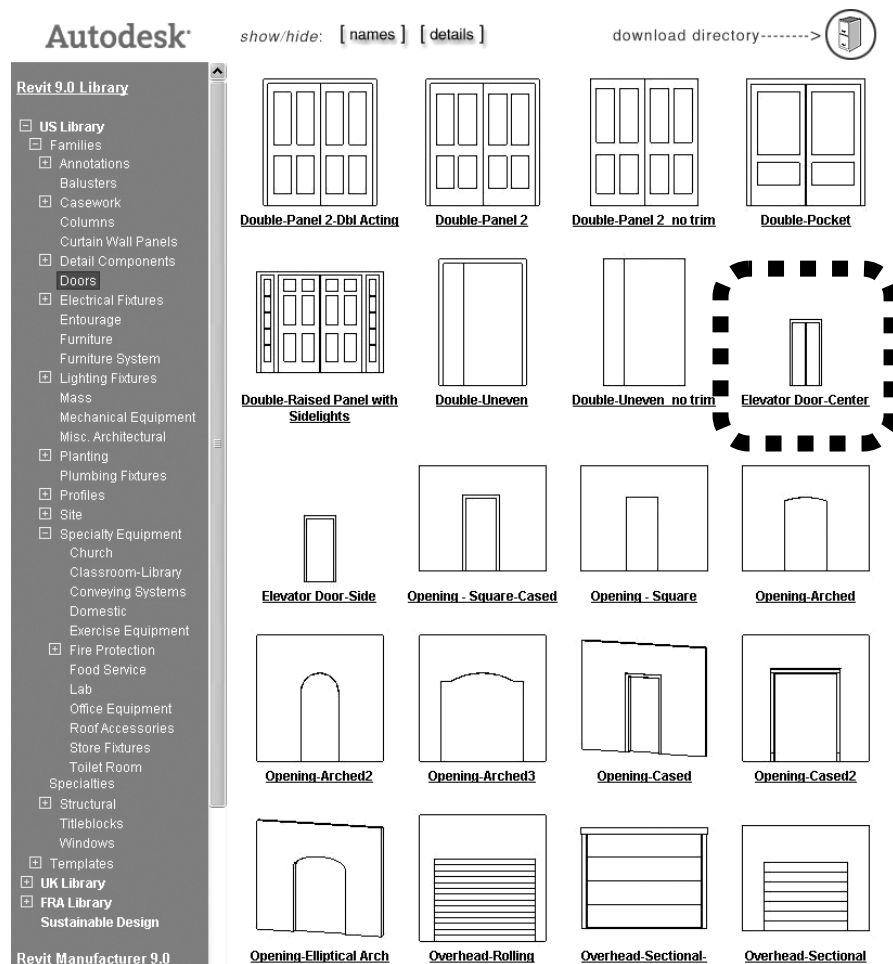


Figure 3-4.7 Elevator door in Revit Web Library




21. Drag the **36" x 84"** elevator door type from the project browser into the first floor plan (Figure 3-4.8a).
22. Place the elevator door at the center of the wall, aligned with the elevator door on the cab (Figure 3-4.8b).

**TIP:** If the door is inserted on the wrong side of the wall, select the wall and click the Control Arrows to flip it within the wall.

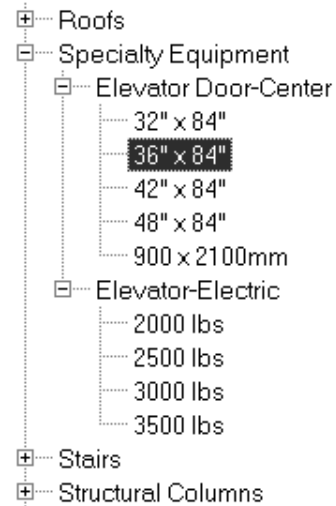

**Figure 3-4.8a** Elevator doors in Project Browser

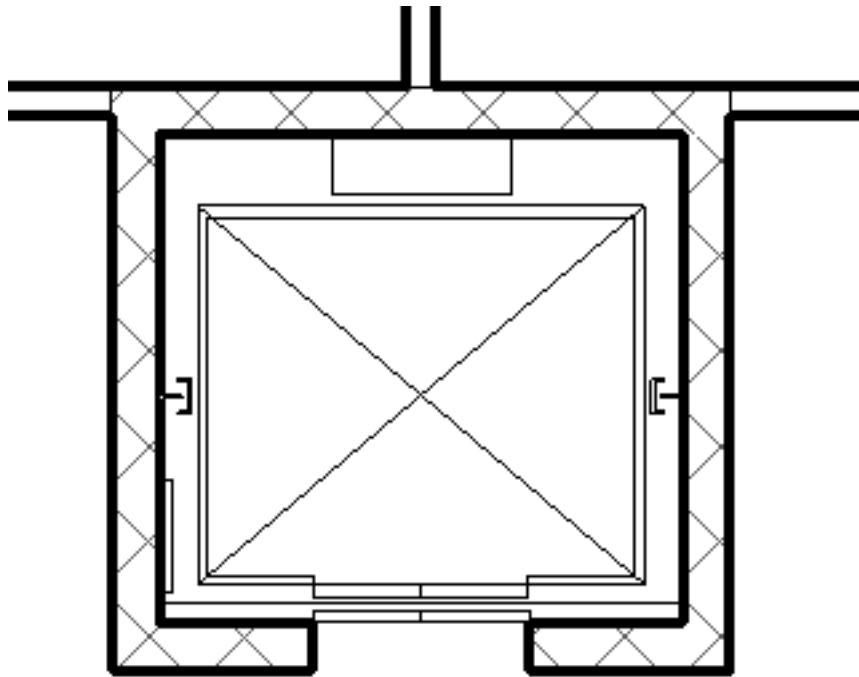

**Figure 3-4.8b** Elevator door added to plan

Notice when the elevator is selected, the Flip icon (control arrow) is displayed. Similar to the doors and walls, you can click this icon to flip the orientation of the elevator within the shaft.

23. Save your project as **ex3-4.rvt**.

## Exercise 3-5: Doors and Windows

This lesson will take a closer look at inserting doors and windows.

### Insert doors:



Revit has done an excellent job providing several different door libraries. This makes sense seeing as doors are an important part of an architectural project. Some of the provided libraries include bi-fold, double, pocket, sectional (garage), and vertical rolling, to name a few. In addition to the library groups found on your local hard drive, many more are available via the Web Library feature.

The default template you started with only provides the **Sgl Flush** (Single Flush) group in the Doors family. If you want to insert other styles you will need to load them from the library. The reason for this step is that, when you load a library, Revit actually copies the data into your project file. If every possible group was loaded into your project at the beginning, not only would it be hard to find what you want in a large list of doors, but also the files would be several megabytes in size before you even drew the first wall.

You will begin this section by loading a few additional groups into your project.

1. Open project ex3-4.rvt and **Save-As ex3-5.rvt**.
2. With the *Door* tool selected, select the **Load...** button on the *Options Bar* (Figure 3-5.1).
3. Browse through the **Imperial Library** folder for a moment.

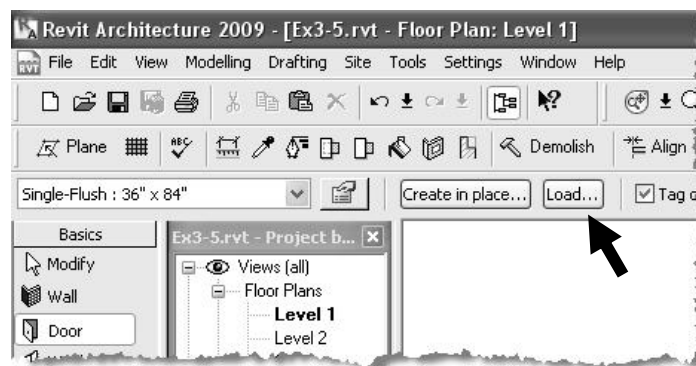


Figure 3-5.1 Load from Library

Each file represents a Family; next you will load four door Families into your project (Figure 3-5.2).

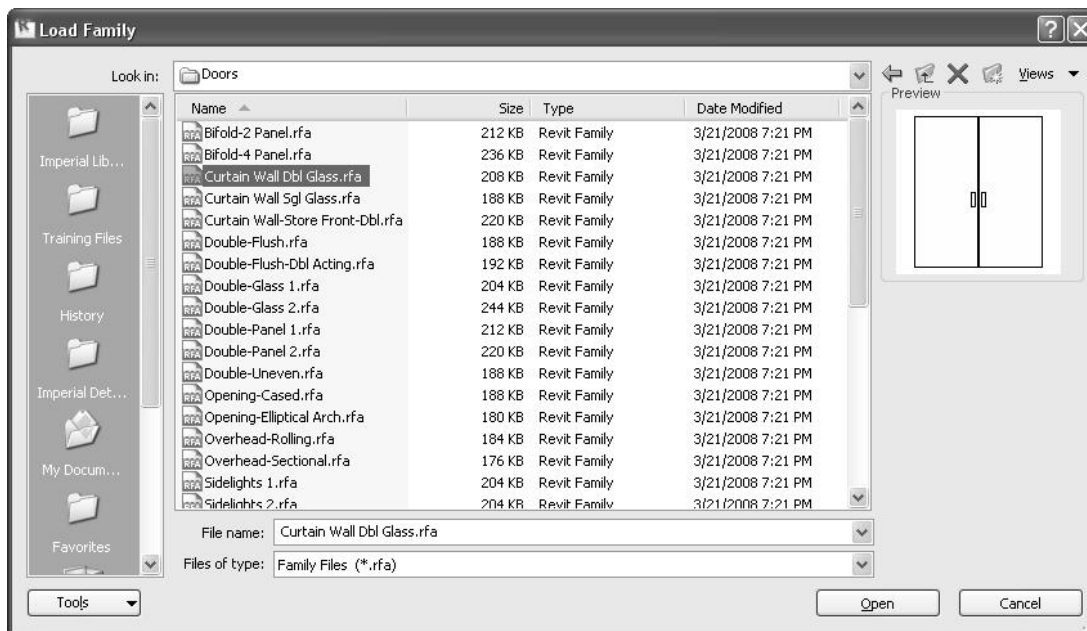


Figure 3-5.2 Door groups on hard drive

4. Select **Curtain Wall Dbl Glass.rfa**, and then click Open. (Figure 3-5.2)
5. Repeat steps 2 – 4 to load the following door groups:
  - a. **Double-Glass 1**
  - b. **Sidelights 1**
  - c. **Single-Glass 1**
6. In the *Project Browser*, expand *Families* and *Doors* to see the loaded door groups (Figure 3-5.3).

If you expand the door group itself in the *Project Browser* you see the predefined door sizes associated with that group. Right-clicking on a door size allows you to rename, delete or duplicate it. To add a door size you duplicate and then modify properties for the new item.

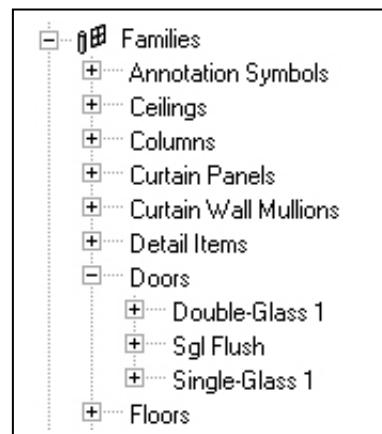


Figure 3-5.3 Loaded door groups

Next you will insert the doors into the stair shafts.

7. With the *Door* tool selected, pick **Sgl Flush: 36" x 84"** from the *type selector* on the *Options Bar*.
8. Insert two doors in the west stair shaft as shown in Figure 3-5.4. Remember you are inserting a door into a masonry wall so your door position and size need to work with coursing. Thus the 8" dimension.
9. Repeat the previous step to insert doors into the east stair shaft.
10. Finish inserting doors for the first floor (Figure 3-5.5). Use the following guidelines:
  - a. All doors should be 36" wide and 7'-0" tall.
  - b. You will not insert doors into the curtain wall for now. You will do that in a later lesson when you design the curtain wall.
  - c. Use the style and approximate location shown in Figure 3-5.5.
  - d. Doors across from each other in the two atrium walls should align with each other. **TIP:** While inserting the second set of doors, watch/wait for the reference line to show up, indicating alignment.
  - e. Place doors approximately as shown, exact location not given.

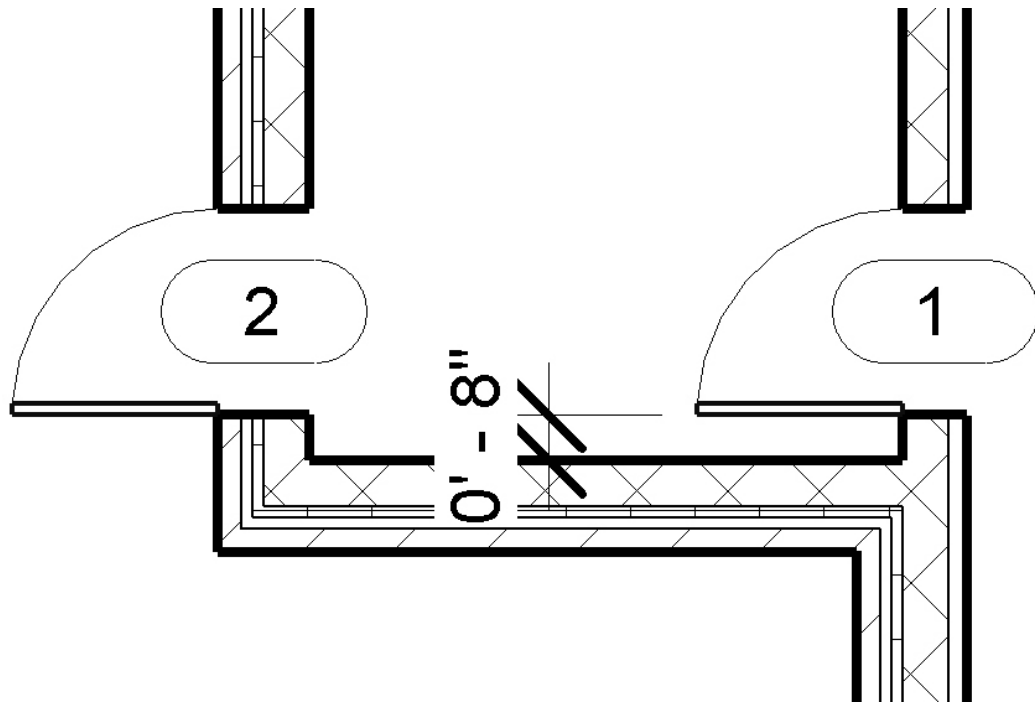


Figure 3-5.4 Door in west stair shaft

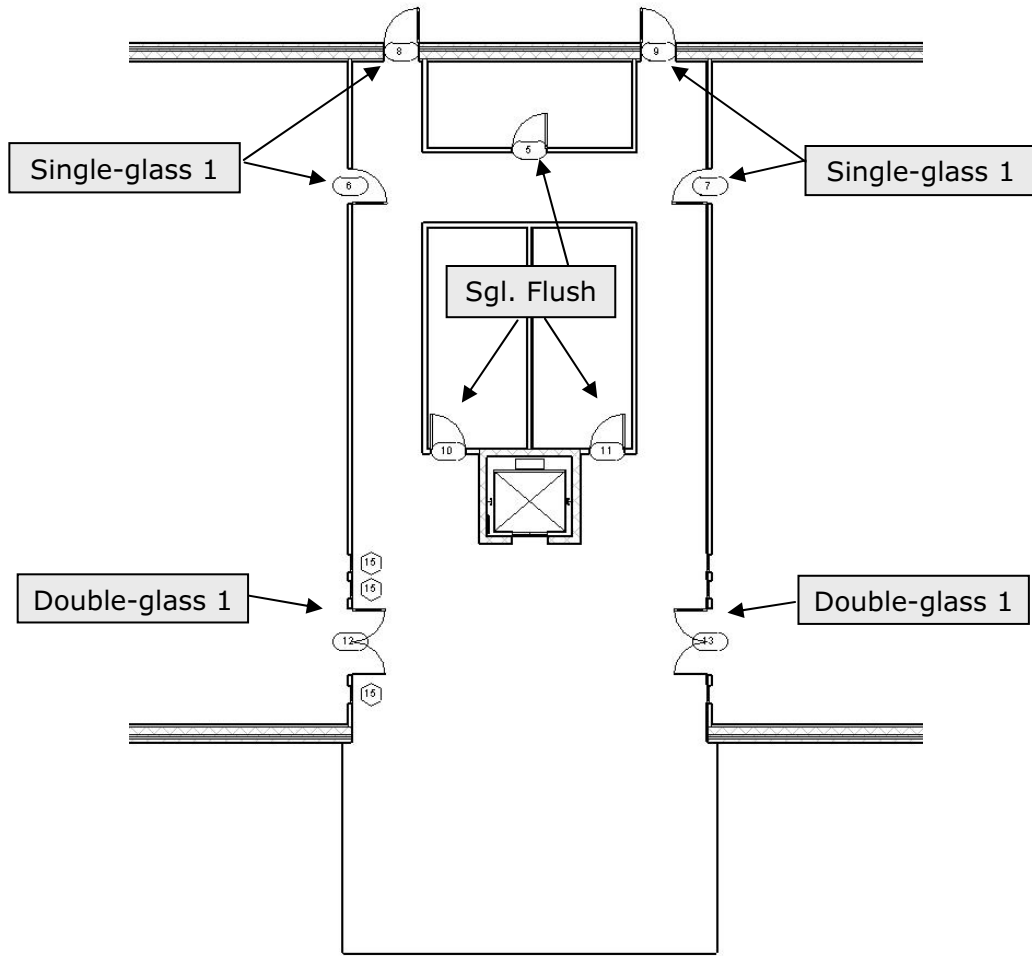


Figure 3-5.5 First floor with doors

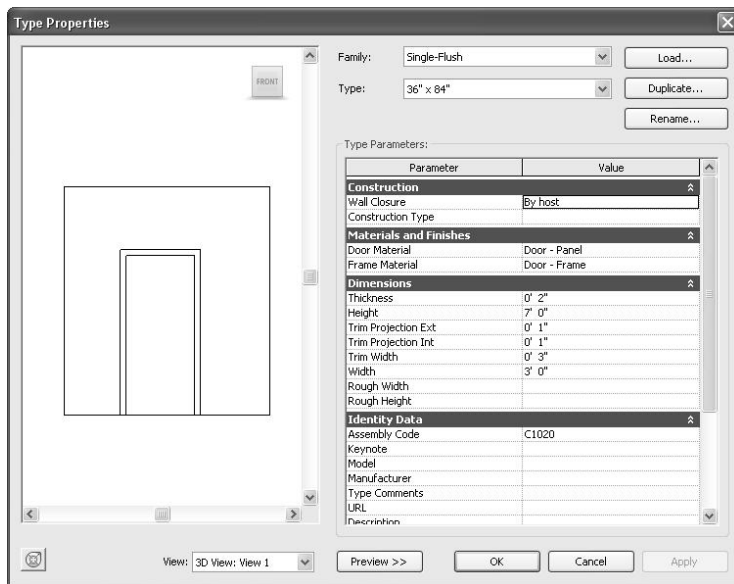


Figure 3-5.6 Door properties

**Door Properties:**  
 If you select Properties while the Door tool is active (selected), you can modify various properties related to the door.  
 You can easily add another standard door size to the Group as required. Click "Duplicate," type a name (Figure 3-5.6).  
 Standard doors sizes (and Groups) can be added to your template file, so you don't re-load it again.

## Insert windows:

Adding windows to your project is very similar to adding doors. Like the doors, the template file you started from has one group preloaded into your project, the FIXED group. Looking at the Type Selector drop-down you will see the various sizes available for insertion. At this point you should also see the SIDELIGHT group that you loaded in the previous exercise. First, you will add a few interior borrowed lights using the sidelight group.

## Interior windows (borrowed lights):

11. With the *Window* tool selected, pick:  
**Sidelights 1 : 18" x 84"** from the *type selector*.
12. On the west side of the atrium, insert the borrowed lights as shown in Figure 3-5.7; do not draw the dimensions.

Make sure the borrowed light frames are flush with the atrium side of the wall. You can control that option by moving your cursor to the side of the wall you want the frame flush with before clicking to insert. After drawing the window, you can select the frame and use the flip icon (similar to doors and walls).

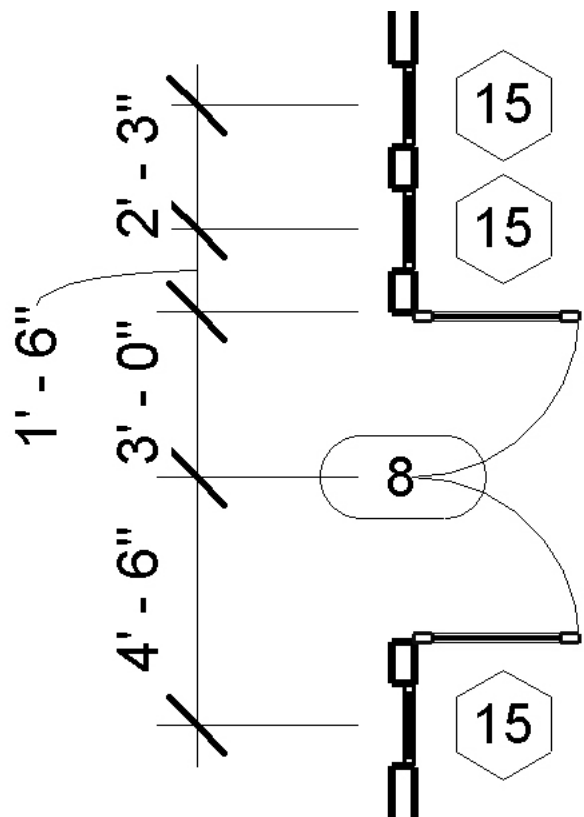


Figure 3-5.7 Sidelights added

13. Repeat the previous steps to insert the borrowed lights on the east side of the atrium.



## Exterior windows:

14. Using the methods previously covered in this book, create a new window size in the *FIXED* family. Create: **Fixed: 32" x 48"**. You are creating this new size to fit coursing in plan view. The largest window (preloaded) that fits coursing in plan view is 24". That is not wide enough for this design.
15. Adjust the sill height for your new window size to fit within coursing as well. Set the sill height for **Fixed: 32" x 48"** to be **3'-4"** (Figure 3-5.8).

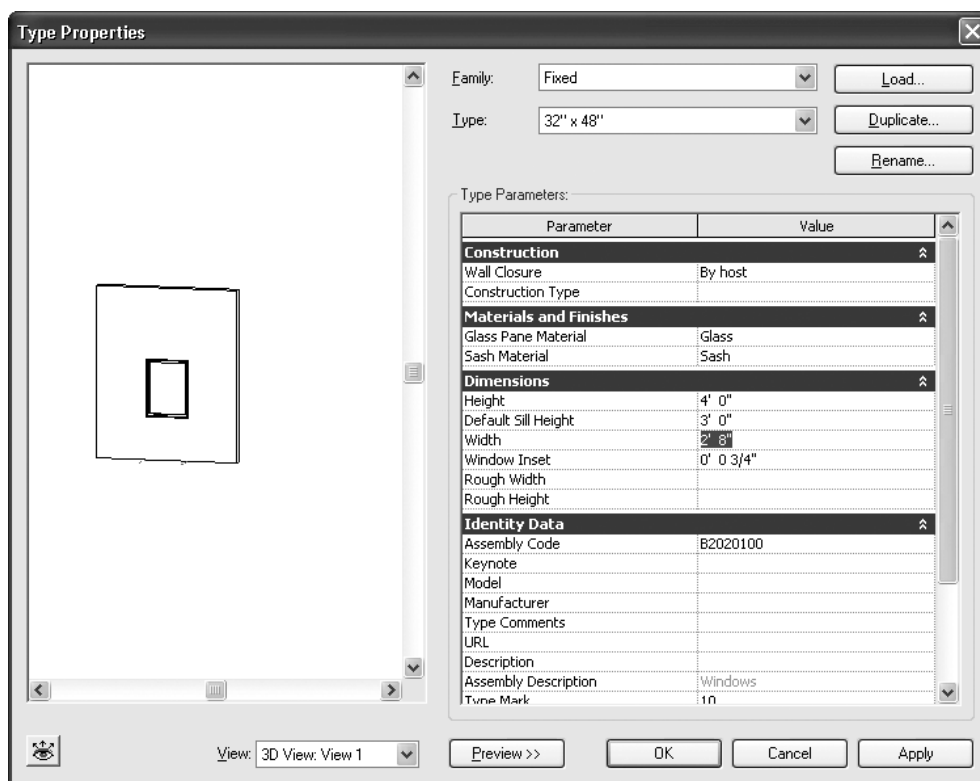


Figure 3-5.8 Added window size

16. Insert the window as shown in **Figure 3-5.9**. The window should be inserted in masonry coursing.

**NOTE:** The dimensions displayed while inserting the window will not work as displayed for coursing because Revit is measuring from the center of the adjacent exterior wall. Thus, you will have to insert the window as close as possible and adjust its location, verifying with the Measure tool.

**Array window:**

The *Array* tool allows you to quickly copy several objects that have the same distance between them. You will use *Array* to copy the windows:

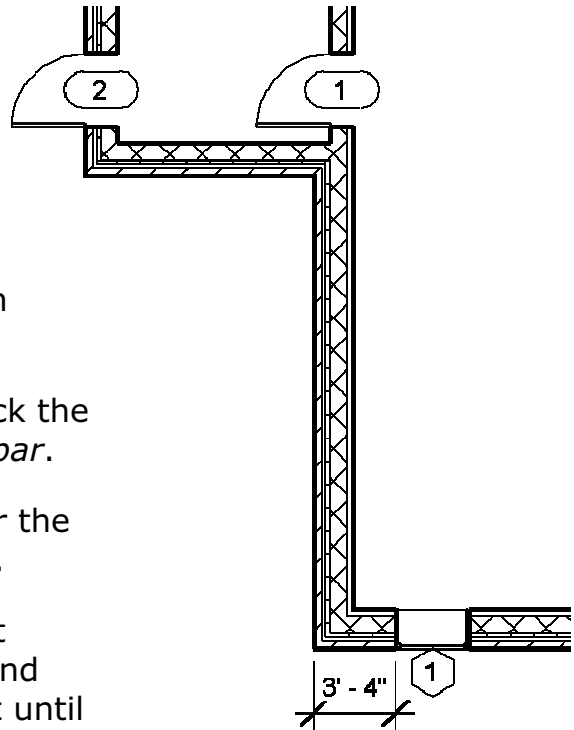


Figure 3-5.9 Exterior window

17. Click the *Modify* tool and then select your window.
18. With the window selected, pick the **Array** tool from the *edit toolbar*.
19. In the *Options Bar*, type **6** for the *Number* field (Figure 3-5.10).
20. Click the left mouse button at the midpoint of the window and move your mouse to the east until the dimension displayed is 8'-6".
21. You should now see the windows arrayed in the wall. 8'-6" is not coursing, so select the **Activate Dimensions** button on the *Options Bar* and then enter 8'-8" in the displayed dimension to adjust the window openings. This allows you to more accurately adjust the dimensions.

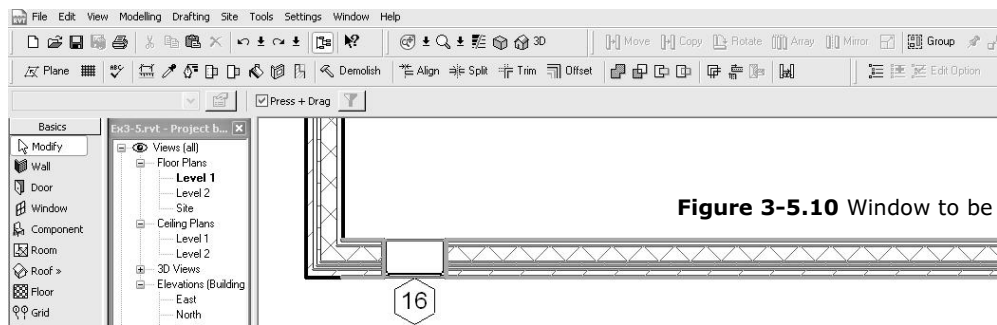


Figure 3-5.10 Window to be arrayed

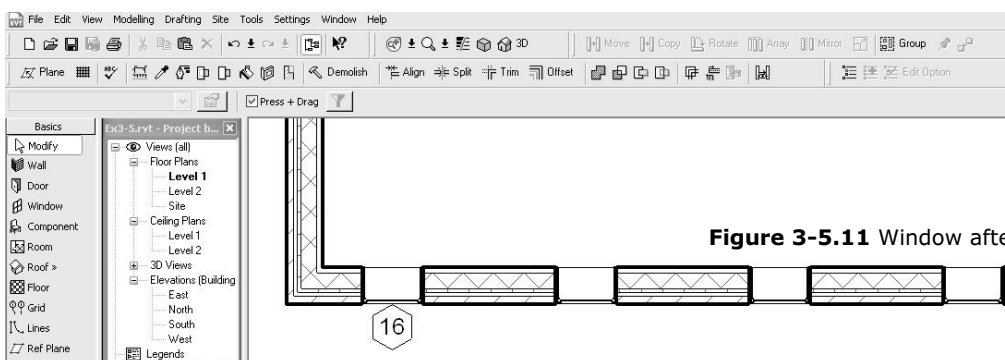


Figure 3-5.11 Window after array



22. Set the windows up on the three remaining walls of the first floor (Figure 3-5.12). Consider the following:
  - a. This would be a good use for the *Mirror* tool.
  - b. If you need to create a temporary wall for a mirror reflection axis, make sure the temporary wall is set to centerline. **TIP:** Try the pencil icon while in sketch mode.
  - c. If drawn accurately, you should be able to use the wall between the two toilet rooms (center, north of elevator shaft) to mirror the windows in the east west direction.
  - d. Use the *Tape Measure* tool to verify accuracy.
  - e. Use the Ctrl key to select multiple windows.

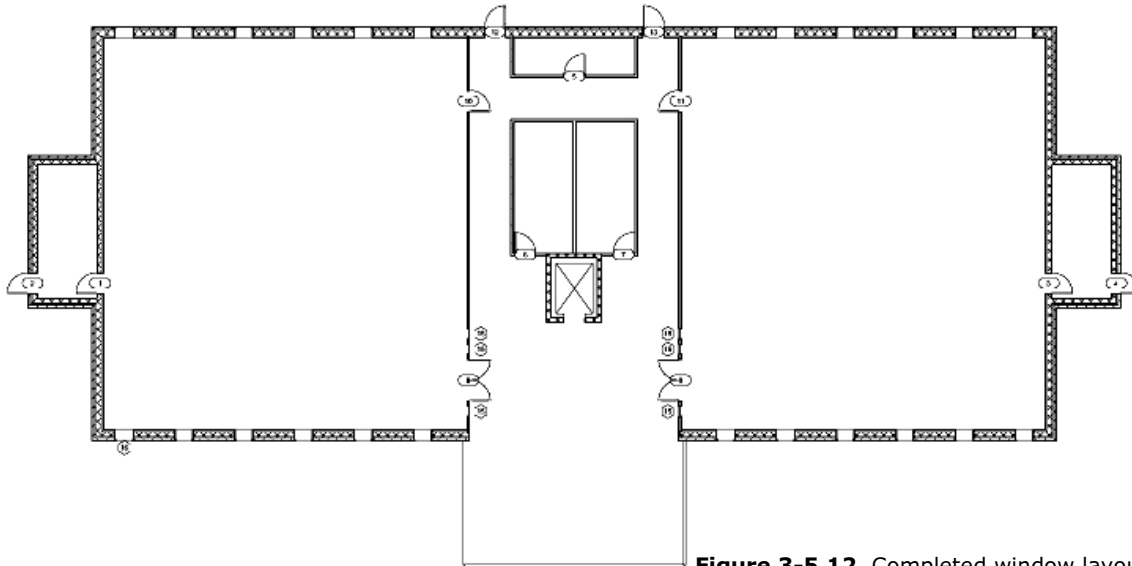


Figure 3-5.12 Completed window layout

### Cleaning house:

As previously mentioned, you can view the various Families and groups loaded into your project. The more Families and Types you have loaded the larger your file is, whether or not you are using them in your project. Therefore, it is a good idea to get rid of any door, window, etc., that you know you will not need in the current project.

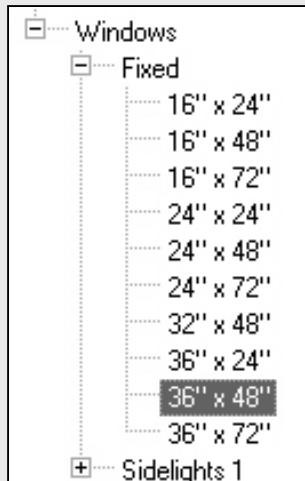


Figure 3-5.13 Project Browser

23. In the *Project Browser*, navigate to Families → Windows → Fixed. Right click on **36'' x 48''** and select **Delete**.

**Self-Exam:**

The following questions can be used as a way to check your knowledge of this lesson. The answers can be found at the bottom of this page.

1. The *Option Bar* allows you to select which level your wall will be drawn on. (T/F)
2. It is not possible to draw a wall with the interior or exterior face of the core as the reference point. (T/F)
3. Objects cannot be move accurately with the **Move** tool. (T/F)
4. The \_\_\_\_\_ tool, in the *Design Bar*, has to be selected in order to select an object in your project.
5. A wall has to be \_\_\_\_\_ to see its flip icons.

**Review Questions:**

The following questions may be assigned by your instructor as a way to assess your knowledge of this section. Your instructor has the answers to the review questions.

1. Revit comes with many predefined doors and windows. (T/F)
2. The length 3'-8" is a masonry dimension. (T/F)
3. You can delete unused families and types in the Project Browser. (T/F)
4. It is not possible to load families and types from the Internet. (T/F)
5. It is not possible to select which side of the wall a window should be on while you are inserting the window. (T/F)
6. What tool will break a wall into two smaller pieces? \_\_\_\_\_
7. The \_\_\_\_\_ tool allows you to match the surface of two adjacent walls.
8. Occasionally you have to draw \_\_\_\_\_ lines to use as a reference point for another object or as a reflection mirror.
9. You can use the \_\_\_\_\_ tool to copy an object multiple times in one step.
10. The \_\_\_\_\_ file has a few doors, windows and walls preloaded in it.

*Self-Exam Answers:*

1 – T, 2 – F, 3 – F, 4 – Modify, 5 – Selected