Commands Guide Tutorial for SolidWorks® 2012

A comprehensive reference guide with over 240 tutorials

David C. Planchard CSWP Marie P. Planchard CSWP



Supplemental Files



Better Textbooks. Lower Prices. www.SDCpublications.com Part, Assembly, Drawing Templates and more

Visit the following websites to learn more about this book:



CHAPTER 4: DESIGN INTENT, SKETCHING AND SKETCH ENTITIES

Chapter Objective

Chapter 4 provides a comprehensive understanding of Design Intent, Sketching and the available Sketch Entities in SolidWorks. On the completion of this chapter, you will be able to:

- Define and incorporate Design Intent in a:
 - Sketch, Feature, Part, Assembly and Drawing document
- Utilize the available SolidWorks Design Intent tools:
 - Comments, Design Binder, ConfigurationManager, dimensions, equations, design tables and features
- Identify the correct Reference planes:
 - 2D and 3D Sketching
- Insert sketch Reference planes
- Comprehend the Parent/Child relationship
- Recognize and address Sketch states:
 - Fully Defined, Over Defined, Under Defined, No Solution Found and Invalid Solution Found
- Identify and utilize the following Sketch Entities tools:
 - Line, Corner Rectangle, Center Rectangle, 3 Point Corner Rectangle, 3 Point Center Rectangle, Parallelogram, Straight Slot, Centerpoint Straight Slot, 3 Point Arc Slot, Centerpoint Arc Slot, Instant3D, Polygon, Circle, Perimeter Circle, Centerpoint Arc, Tangent Arc, 3 Point Arc, Ellipse, Partial Ellipse, Parabola, Spline, Spline on Surface, Equation Driven Curve, Point, Centerline, Text, Plane, Route line and Belt/Chain
- Classify and utilize the following Block tools:
 - Make Block, Edit Block, Insert Block, Add/Remove, Rebuild, Saves Block, Explode Block and Belt/Chain
- Recognize and utilize the following Spline tools:

- Add Tangency Control, Add Curvature Control, Insert Spline Point, Simplify Spline, Fit Spline, Show Spline Handle, Show Inflection points, Show Minimum Radius and Show Curvature Combs
- Reuse an existing 2D Sketch

Design Intent

What is design intent? All designs are created for a purpose. Design intent is the intellectual arrangements of features and dimensions of a design. Design intent governs the relationship between sketches in a feature, features in a part and parts in an assembly.

The SolidWorks definition of design intent is the process in which the model is developed to accept future modifications. Models behave differently when design changes occur.

Design for change! Utilize geometry for symmetry, reuse common features, and reuse common parts. Build change into the following areas that you create: sketch, feature, part, assembly and drawing.

 $\stackrel{\text{Theorem 1}}{\longrightarrow}$ When editing or repairing geometric relations, it is considered best practice to edit the relation vs. deleting it.


Design Intent in a Sketch


Build design intent in a sketch as the profile is created. A profile is determined from the Sketch Entities. Example: Rectangle, Circle, Arc, Point, Slot etc. Apply symmetry into a profile through a sketch centerline, mirror entity and position about the reference planes and Origin. Always know the location of the Origin in the sketch.

Build design intent as you sketch with automatic Geometric relations. Document the decisions made during the up-front design process. This is very valuable when you modify the design later.

A rectangle (Center Rectangle Sketch tool) contains Horizontal, Vertical and Perpendicular automatic Geometric relations.

Apply design intent using added Geometric relations if needed. Example: Horizontal, Vertical, Collinear, Perpendicular, Parallel, Equal etc.

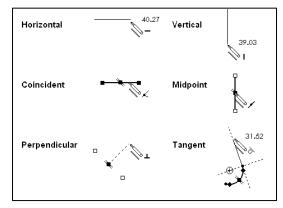

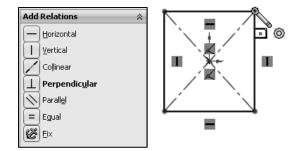

Example A: Apply design intent to create a square profile. Sketch a rectangle. Apply the Center Rectangle Sketch tool. Note: No construction reference centerline or Midpoint relation is required with the Center Rectangle tool. Insert dimensions to fully define the sketch.

Example B: If you have a hole in a part that must always be $16.5 \text{mm} \leq \text{from}$ an edge, dimension to the edge rather than to another point on the sketch. As the part size is modified, the hole location remains $16.5 \text{mm} \leq \text{from}$ the edge as illustrated.

Design Intent in a Feature

Build design intent into a feature by addressing End Conditions (Blind, Through All, Up to Next, Up to Vertex, Up to Surface, Offset from Surface, Up to Body and Mid Plane), symmetry, feature selection, and the order of feature creation.

Example A: The Extruded Base feature remains symmetric about the Front Plane. Utilize the Mid Plane End Condition option in Direction 1. Modify the depth, and the feature remains symmetric about the Front Plane.


Example B: Create 34 teeth in the model. Do you create each tooth separate using the Extruded Cut feature? No.


Create a single tooth and then apply the Circular Pattern feature. Modify the Circular Pattern from 32 to 24 teeth.


Design Intent in a Part


Utilize symmetry, feature order and reusing common features to build design intent into a part. Example A: Feature order. Is the entire part symmetric? Feature order affects the part.


Apply the Shell feature before the Fillet feature and the inside corners remain perpendicular.

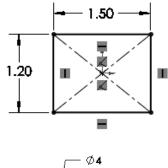

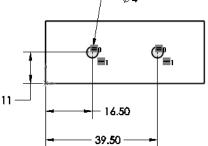

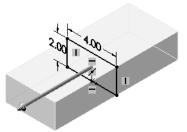

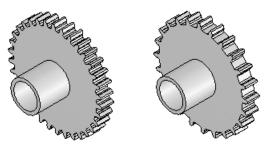



Design Intent in an Assembly

Utilizing symmetry, reusing common parts and using the Mate relation between parts builds the design intent into an assembly.

Example A: Reuse geometry in an assembly. The assembly contains a linear pattern of holes. Insert one screw into the first hole. Utilize the Component Pattern feature to copy the machine screw to the other holes.

Design Intent in a Drawing

Utilize dimensions, tolerance and notes in parts and assemblies to build the design intent into a drawing.

Example A: Tolerance and material in the drawing. Insert an inside diameter tolerance +.000/-.002 into the Pipe part. The tolerance propagates to the drawing.


Define the Custom Property Material in the Part. The Material Custom Property propagates to your drawing.


Create a sketch on any of the default planes: Front, Top, Right or a created plane or face.


SolidWorks Design Intent tools

Comments

Add comments, notes or additional information to features during the design period. This will aid you or your colleagues to recall and to better understand the fundamental design intent later of the model and individual features.

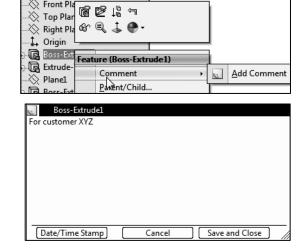

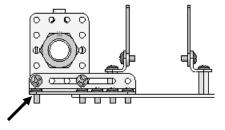


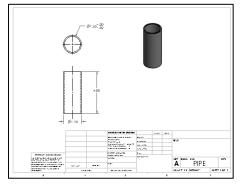

Comments

Sensors
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र
 र

Right-click on the feature in the FeatureManager. Click Comment ➤ Add Comment. The Comment dialog box is displayed. Enter the information. Click Save and Close. A Comments folder is displayed in the FeatureManager. Double-click the feature in the Comments folder to view the comment.

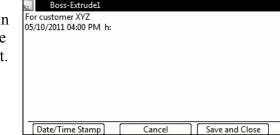

You can also add a Date/Time stamp to your comment.

Design Binder

Activate the Design binder. Click Options ► System Options tab ► FeatureManager. Select Show from the drop-down menu. The Design Binder is an embedded Microsoft Word document that provides the ability for the user to capture a screen image and to incorporate text into a document.

ConfigurationManager

When you create various configurations for assemblies, design tables, etc., use the comment area to incorporate a comment for these configurations.

Dimensions

To be efficient, reuse existing geometry. Provide dimensions with descriptive names.

Equations

Add a comment to the end of an equation to provide

clarity for the future. Use descriptive names and organize your equations for improve clarity. SolidWorks equations ignore everything from the right of the apostrophe.

Active	Equation	Evaluates To	Comment Add
 ✓ ✓	"X@Sketch3" = "A" / 3 "Y@Sketch5" = 'B" / 3 + 10 "B" "A" "C" "D" "E"	 ✓ 75mm ✓ 80mm ∞ 200mm ∞ 210mm ∞ 225mm ∞ 176mm ∞ 137mm ∞ 39mm 	Edit J Edit J Conf Impo Expo
gular equa	ation units: Degrees 🔻 🎬	ОК	Cancel Help





11.08020295mm

X

.


Design Tables

There are a number of ways to incorporate a comment into a design table. One way is to add "\$COMMENT" to the heading of a column. This provides the ability to add a comment in a design table.

Features

Always use descriptive names in the FeatureManager design tree, not the default feature names such as Boss-Extrude1, Cut-Extrude1, LPattern1, etc. Group important features toward the top of the FeatureManager design tree.

Enable the FeatureManager Name feature on creation option, click Options > System Options > FeatureManager > Name feature on creation box. The Name feature on creation option highlights the feature name when created and allows the feature to be named.

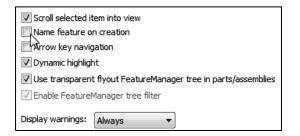


Identify the Correct Reference Planes


Most SolidWorks features start with a 2D sketch. Sketches are the foundation for creating features. SolidWorks provides the ability to create either 2D or 3D sketches.


A 2D sketch is limited to a flat 2D Sketch plane located on a reference plane, face or a created place. 3D sketches are very useful in creating sketch geometry that does not lie on an existing or easily defined plane.


Does it matter where you start sketching? Yes! When you create a new part or assembly, the three default planes are aligned with specific views. The plane you select for your first sketch determines the orientation of the part. Selecting the correct plane to start your model is very important.

The plane or face you select for the base sketch determines the orientation of the part.

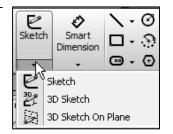



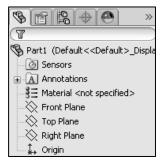

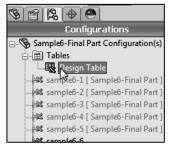

2D Sketching / Reference Planes

The three default \perp reference planes, displayed in the FeatureManager design tree represent infinite 2D planes in 3D space. They are:

- Front
- Top
- Right


Planes have no thickness or mass. Orthographic projection is the process of projecting views onto parallel planes with \perp projectors. The default \perp datum planes are:


- Primary
- Secondary
- Tertiary

Use the following planes in a manufacturing environment:

- Primary datum plane: Contacts the part at a minimum of three points.
- Secondary datum plane: Contacts the part at a minimum of two points.
- Tertiary datum plane: Contacts the part at a minimum of one point.

The part view orientation depends on the sketch plane. Compare the Front, Top and Right Sketch planes for an L-shaped profile in the following illustration. Remember - the plane or face you select for the base sketch determines the orientation of the part.

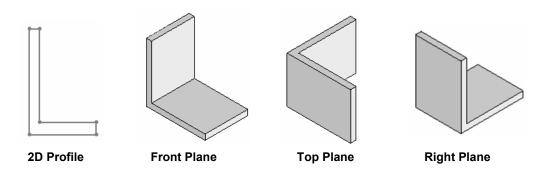

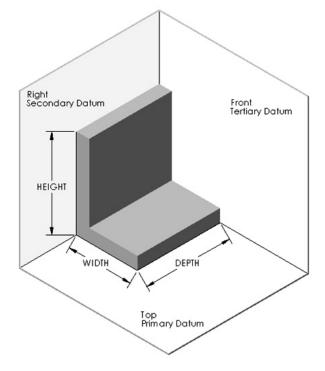

The six principle views of Orthographic projection listed in the ASME Y14.3M standard are: *Front, Top, Right, Bottom, Rear and Left*. SolidWorks Standard view names correspond to these Orthographic projection view names.

ASME Y14.3M Principle View Name:	SolidWorks Standard View:
Front	Front
Тор	Тор
Right side	Right
Bottom	Bottom
Rear	Back
Left side	Left

Overall drafting standard

ANSI

ANSI is the default Overall drafting standard used in the book.

Displayed is the Front, Top, Right and Isometric view in Third Angle Projection.


Tutorial: Default Reference Planes 4-1


Create a New part. Display the default Reference planes in the Graphics window.


- Click New from the Menu bar. The Templates tab is the default tab. Part is the default template from the New SolidWorks Document dialog box.
- 2. Click **OK**. The Part FeatureManager is displayed. Use the sketch Origin to understand the (x-,y-) coordinate location of the sketch and to apply sketch dimensions. Each sketch in the part has its own Origin.
- 3. Click **Front Plane** from the FeatureManager design tree. The Front Plane is the Sketch plane in this example. The Front Plane is highlighted in the FeatureManager and in the Graphics window.

Show the default Reference planes in the Graphics window. Select the Front, Top and Right planes.

- 4. Hold the **Ctrl** key down.
- 5. Click **Top Plane** and **Right Plane** from the FeatureManager design tree.

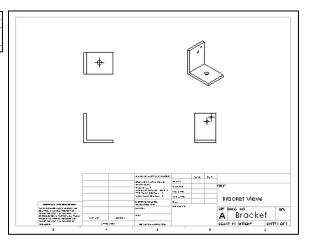

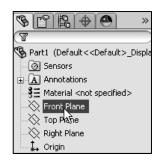

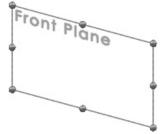

- 6. Release the **Ctrl** key.
- 7. Right-click **Show** ^(d) from the Context toolbar. If needed click **View**, check **Planes** from the Menu bar.
- 8. Click **inside** the Graphics window. The three planes are displayed in the Graphics window. Note the Plane icon in the FeatureManager.

Rename a feature or sketch for clarity. Slowly click the feature or sketch name twice and enter the new name when the old one is highlighted.

Rename the default Reference planes.

- 9. Rename the Front Plane to Front-PlateA.
- 10. Rename the **Top Plane** to **Top-PlateB**.
- 11. Rename the **Right Plane** to **Right-PlateC**.
- 12. **Rebuild •** the model.
- 13. Close the model.

3D Sketching / Reference Planes


Create a 3D Sketch in SolidWorks. A 3D Sketch is typically used for advanced features such as Sweeps and Lofts or when the sketch does not lie on an existing or easily definable plane. Most basic features are created from a 2D Sketch.


There are two approaches to 3D Sketching. The first approach is called 2D Sketching with 3D Sketch planes. In this approach, you:

- 1. Activate a planar face by adding a 3D Sketch plane.
- 2. Sketch in 2D along the plane.
- 3. Add 3D Sketch planes each time you require to move sketch entities to create a 3D sketch.

Using the 2D Sketching with 3D Sketch planes approach provides the ability to:

- Add relations:
 - Between planes
 - Between sketch entities on different planes
 - To planes
 - Define planes
 - Move and resize planes

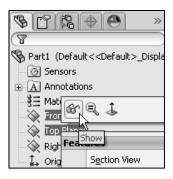

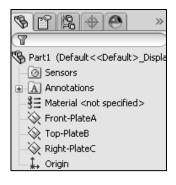

Tutorial: 3D Sketching 4-1

Create a simple 2D Sketch using 3D Sketch planes.

- 1. Create a **New** part in SolidWorks. Use the default ANSI Part template.
- 2. Click **Top Plane** from the FeatureManager.
- 3. Click **3D Sketch On Plane** from the Sketch Consolidated toolbar as illustrated. 3DSketch1 is active.
- 4. Click the Line \searrow Sketch tool.
- 5. Sketch a vertical line through the origin.
- Right-click Exit Sketch from the Context toolbar. 3DSketch1 is displayed in the FeatureManager and is under defined.
- Close the model.

Tutorial: 3D Sketching 4-2

Create the illustrated model. Insert two features: Boss-Extrude1 and Cut-Extrude1. Apply the 3D Sketch tool to create the Cut-Extrude1 feature. System units = MMGS.

- | 🗇 🖉

Select


� ば � � ፼


wit Sketch


- 1. Create a New D part in SolidWorks. Use the default ANSI, MMGS Part template.
- 2. Right-click **Front Plane** from the FeatureManager. This is your Sketch plane.
- 3. Click Sketch E. from the Context toolbar. The Sketch toolbar is displayed.
- 4. Click the **Corner Rectangle** \square tool from the Consolidated Rectangle Sketch toolbar. The PropertyManager is displayed.
- 5. Sketch a **rectangle** as illustrated. The part Origin is located in the bottom left corner of the sketch.

Insert dimensions.


- 6. Right-click **Smart Dimension** ♦ from the Context toolbar.
- 7. **Dimension** the sketch as illustrated. The sketch is fully defined. The sketch is displayed in black.

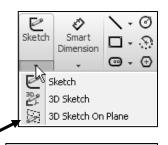


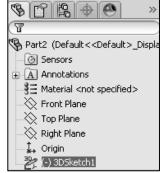

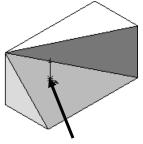



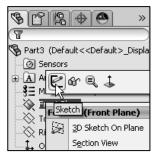

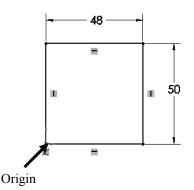



Create the first feature for the model. The Extruded Boss/Base feature adds material to a part. Extrude the sketch to create the first feature.

- 8. Click Extruded Boss/Base 🖾 from the Features toolbar. Apply symmetry.
- Select the Mid Plane End Condition in Direction 1. Enter 100.00mm for Depth in Direction 1. Accept the default conditions. Click OK ✓ from the Boss-Extrude PropertyManager.


The Instant3D tool provides the ability to drag geometry and dimension manipulator points to resize features or to create new features directly in the Graphics window. Click the face. Select a manipulator point. Click and drag. Click a location along the ruler for the required dimension. The rule increments are set in System Options.


- 10. Create 3DSketch1. 3DSketch1 is a four point sketch. Click **3D Sketch On Plane** from the Consolidated Sketch toolbar as illustrated.
- 11. Click the Line Sketch tool. 3DSketch1 is a four point sketch as illustrated. 3DSketch1 is the profile for Cut-Extrude1.
- 12. Locate the first point of the sketch. Click the **back right bottom point** as illustrated. Locate the second point of the sketch. Click the **top left front point** as illustrated. Locate the third point of the sketch.
- 13. Click the **bottom right front point** as illustrated.

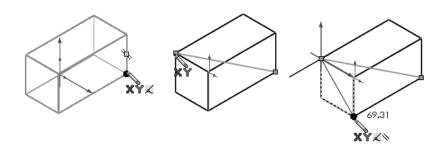

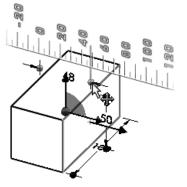

-Length increments -	
English units:	0.10in
Metric units:	10.00mm
Angle increments:	1°

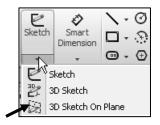

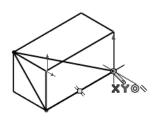

Locate the fourth point of the sketch.

14. Click the **back right bottom** point as illustrated to close the sketch.

Create the Cut-Extrude1 feature.

15. Click Extruded Cut 间 from the Features toolbar.



- 16. Click the **front right vertical edge** as illustrated to remove the material. Edge<1> is displayed in the Direction of Extrusions box.
- 17. Click **OK** ✓ from the Cut-Extrude PropertyManager. Cut-Extrude1 is displayed in the FeatureManager. **Close** the model.

Select the front right vertical edge or the Top face to remove the require material in this tutorial.

Use any of the following tools to create 3D Sketches: Lines, All Circle tools, All Rectangle tools, All Arcs tools, Splines and Points.

The second approach to create a 3D Sketch in SolidWorks is 3D Sketching. In this approach:

- 1. Open an existing 3D Sketch.
- 2. Press the Tab key each time you need to move your sketch entities to a different axis.

The sketch origin is placed wherever you start the sketch.


Tutorial: 3D Sketching 4-3


Apply the 3DSketch tool to create a 3DSketch using the Tab key to change Sketch planes.

1. Open **3D Sketching 4-3** from the SolidWorks 2012 folder.


Edit the 3D Sketch.

- 2. Right-click **3DSketch** from the FeatureManager.
- 3. Click Edit Sketch [™] from the Context toolbar. 3DSketch1 is displayed in the Graphics window.
- 4. Click the Line > Sketch tool. Note: The mouse feedback icon.
- 5. Click the **right endpoint** of the sketch as illustrated.
- 6. Press the **Tab** key to change the Sketch plane from XY to YZ. The YZ icon is displayed on the mouse pointer.
- Sketch a line along the Z axis approximately 130mm as illustrated. Press the Tab key twice to change the sketch plane from YZ to XY. The XY icon is displayed on the mouse pointer.

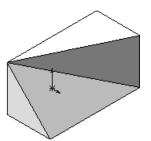

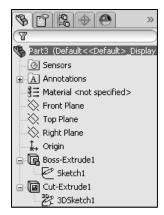



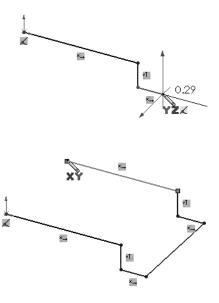

- 8. Sketch a line back along the X axis approximately 30mm.
- 9. Sketch a line on the Y axis approximately 30mm.
- 10. Sketch a **line** along the X axis of approximately 130mm.

Deselect the Line Sketch tool.

- 11. Right-click Select. View the 3D Sketch.
- 12. **Rebuild B** the model.
- 13. Close the model.

Tutorial: 3D Sketching 4-4

Utilize the 3D Sketch placement method. Insert a hole on a cylindrical face using the Hole Wizard.

- 1. Open **3D Sketching 4-4** from the from the SolidWorks 2012 folder.
- 2. Click the **Hole Wizard** feature tool.
- Create a Counterbore, ANSI Inch, Socket Head Cap Screw fastener Type. Size - ¹/₄. Fit - Normal. End Condition -Through All with a .100in Head clearance.
- 4. Click the **Positions** Tab.
- 5. Click the **3D Sketch** button. The Hole Position PropertyManager is displayed. SolidWorks displays an active

3D interface with the Point $\overset{}{\star} \overset{}{\star} \overset{}{\star} \star$ tool.


When the Point tool is active, wherever you click, you will create a point.

Dimension the sketch.


- 6. Click the **cylindrical face** of the model as illustrated. The selected face is displayed in orange. This indicates that an OnSurface sketch relations will be created between the sketch point and the cylindrical face. The hole is displayed in the model.
- 7. Insert a **.25in** dimension between the top face and the sketch point.


Locate the point angularly around the cylinder. Apply construction geometry.

8. Display the **Temporary Axes**.

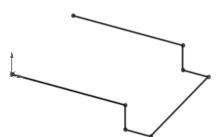



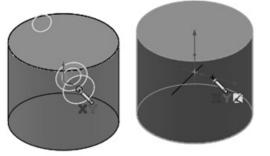

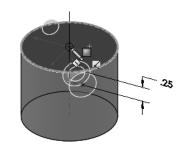

- 9. Click the Line Sketch tool. Note: 3D Sketch is still activated.
- 10. **Ctrl + Click** the top flat face of the model. This moves the red space handle origin to the selected face. This also constrains any new sketch entities to the top flat face.

Note the mouse pointer icon.

11. Move the **mouse pointer** near the center of the activated top flat face as illustrated. View the small black circle. The circle indicates that the end point of the


line will pick up a Coincident relation.


- 12. Click the **center point** of the circle.
- 13. Sketch a line so it picks up the AlongZ sketch relation. The cursor displays the relation to be applied. *This is a very important* <u>step.</u>


Deselect the Line Sketch tool. 14. Right-click **Select**.


- 15. Create an **AlongY** sketch relation between the center point of the hole on the cylindrical face and the endpoint of the sketched line.
- 16. **Expand** the FeatureManager and view the results. The two sketches are fully defined. One sketch is the hole profile, the other sketch is to define the position of the feature,
- 17. Close the model.


You can create a second sketched line and insert an angle dimension between the two lines. This process is used to control the position of the center point of the hole on the cylindrical face as illustrated. Insert an AlongY sketch relation between the center point of the hole on the cylindrical face and the end point of the second control line. Control the hole's position with an angular dimension.

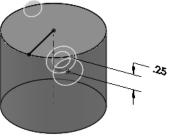

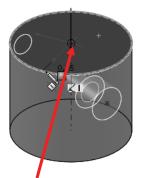

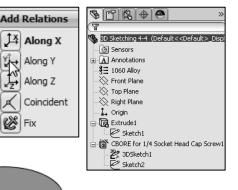

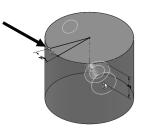

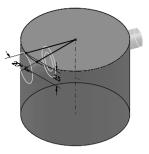


洨 The main advantages of the 3D Sketch placement method is that it can place a set of holes on any set of solid faces, regardless of whether they are at different levels, are non-parallel. A limitation; 3D sketches can be fairly cumbersome and difficult. See section on 3D Sketching in SolidWorks Help for additional details.

2D Sketching / Inserting **Reference Planes**

Reference Planes are geometry created from existing planes, faces, vertices, surfaces, axes, and or sketch geometry. To access the Plane PropertyManager, click Insert ≻ Reference Geometry \geq Plane from the Menu bar or


click the Plane \bigotimes tool from the **Consolidated Reference Geometry Features** toolbar.

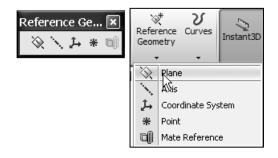

Plane Tool

The Plane \bigotimes tool uses the Plane PropertyManager. The Plane PropertyManager provides the following selections:

- *First Reference*. Select a face, plane or edge to create a reference plane. The options are available:
 - **Reference Entities**. Displays the selected planes either from the FeatureManager or from the Graphics window.
 - **Parallel**. Creates a plane parallel to the selected plane. For example, select a face for one reference and a point for another reference. The created plane is parallel to the face and coincident to the point.
 - Perpendicular. Creates a plane perpendicular to the selected reference. For example, select an edge or curve for one reference and a point or vertex for another reference.

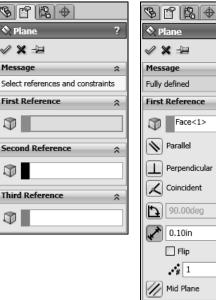


V 🗙 🕁


Message


 \square

 \square

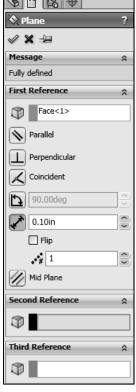

- **Coincident**. Creates a plane through a point coincident to a plane or a face.
- **Project**. Projects a singular entity such as a point, vertex, origin, or coordinate system onto a non-planar surface. Select the sketch point and the model surface. Two options appear in the PropertyManager:
 - Nearest location on surface
 - Along sketch normal
- **Tangent**. Creates a plane tangent to cylindrical, conical, non-cylindrical, and non-planar faces. Select a surface and a sketch point on the surface. The plane is created tangent to the surface and coincident to the sketch point.
- At Angle. Select a plane or planar face and select an edge, axis, or sketch line. You can specify the number of planes to create. Enter the angle value in the angle box.
- Offset Distance. Creates a plane parallel to a plane or face, offset by a specified distance. You can specify the number of planes to create. Enter the Offset distance value in the distance box.
 - **Reverse direction**. Reverses the direction of the angle if required.
 - Numbers of Planes to Create. Displays the selected number of planes.
- Mid Plane. Creates a mid plane between planar faces, reference planes, and 3D sketch planes. Select Mid Plane for both references.

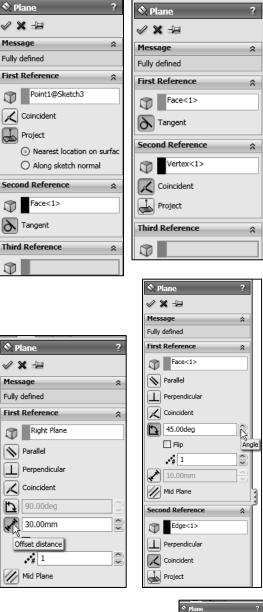

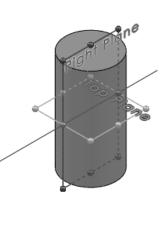



Tutorial: Reference Plane 4-1


Create three Reference planes using the Offset Distance option from the Plane PropertyManager.


- 1. Create a **New** part in SolidWorks. Use the default ANSI Part template. Set system units to MMGS.
- 2. Display an Isometric view.
- 3. Right-click **Top Plane** from the FeatureManager design tree.
- 4. Hold the **Ctrl** key down.
- 5. Click and drag the boundary of the Top Plane upwards in the Graphics window. The Plane PropertyManager is displayed. Top Plane is displayed in the First Reference box.
- 6. Release the Ctrl key and mouse pointer.
- Enter 25mm in the Distance. The Plane is offset by 25mms. Enter 3 in the Number of planes to create box.
- Click OK ✓ from the Plane PropertyManager. Plane1, Plane2 and Plane3 are created and displayed in the Graphics window. Each Plane is offset from the Top Plane a distance of 25mm.
- 9. Close the model.


Tutorial: Reference Plane 4-2


Use the Plane PropertyManager to create two angled Reference planes from an edge at a 45 degree angle.

- 1. Open **Reference Plane 4-2** from the SolidWorks 2012 folder.
- 2. Click **Right Plane** from the FeatureManager design tree.
- Click Insert ➤ Reference Geometry ➤ Plane from the Menu bar. The Plane PropertyManager is displayed. Right Plane is displayed in the First Reference box.
- 4. Click the **At angle** button.
- 5. Enter **45**deg for Angle.

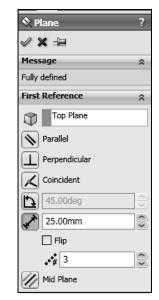

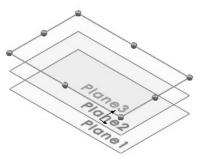

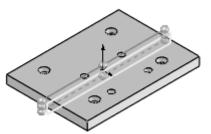

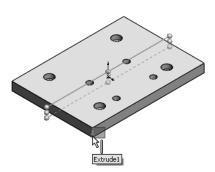


- Click the front vertical edge of Extrude1 as illustrated. Do not select the midpoint. Edge<1> is displayed in the Selections box. The model is fully defined.
- 7. Enter **2** in the Number of planes to create box.
- Click OK I from the Plane PropertyManager. Plane1 and Plane2 are displayed in the FeatureManager and in the Graphics window.
- 9. Close the model.

Tutorial: Reference Plane 4-3


Use the Plane PropertyManager to create a Reference plane using three vertices (Coincident) to the Extrude1 feature.

- 1. Open **Reference Plane 4-3** from the SolidWorks 2012 folder.
- Click Insert ➤ Reference Geometry ➤ Plane. The Plane PropertyManager is displayed.
- Click three Vertices as illustrated. Vertex<1>, Vertex<2> and Vertex<3> are displayed in the Reference Entities boxes. The model is fully defined.
- Click OK ✓ from the Plane PropertyManager. The angled Plane1 is created and is displayed in the FeatureManager and the Graphics window.
- 5. Close the model.

It is considered best practice to fully define all sketches in the model. However; there are times when this is not practical. Generally when using the Spline tool to create a complex freeform shape.

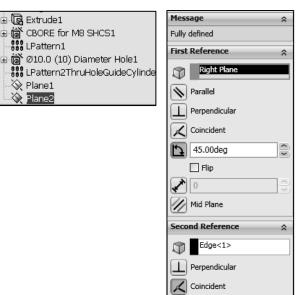



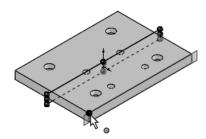

Tutorial: Reference Plane 4-4

Use the Plane PropertyManager to create a Reference plane parallel to an existing plane, through a selected point.

- 1. Open **Reference Planes 4-4** from the SolidWorks 2012 folder.
- 2. Click the **Plane** [◊] tool from the Consolidated Reference Geometry Features toolbar. The Plane PropertyManager is displayed.
- 3. Click the **front top right vertex**.
- 4. Click the **Right Plane** from the fly-out FeatureManager. The model is fully defined.
- 5. Click **OK** ✓ from the Plane PropertyManager. Plane1 is created and is displayed in the FeatureManager and Graphics window.
- 6. Close the model.

Parent/Child Relationship


A Parent feature or sketch is an existing feature or sketch on which others depend on. Example of a Parent feature: An Extruded feature is the Parent feature to a fillet which rounds the edges.


When you create a new feature or sketch which is based on other features or sketches, their existence depends on the previously built feature or sketch. The new feature or sketch is called a Child feature or a Child sketch. Example of a Child feature: A hole is the child of the Base-Extrude feature in which it is cut.


Tutorial: Parent-Child 4-1

View the Parent/Child relationship in an assembly for a sketch and a feature from a component.

- 1. Open the **AirCylinder Linkage** assembly from the SolidWorks 2012\Solutions folder.
- 2. **Expand** RodClevis<1> from the AirCylinder Linkage assembly FeatureManager.
- 3. **Expand** Base-Extrude from the FeatureManager design tree. Right-click **Sketch2**.
- 4. Click **Parent/Child**. The Parent/Child Relationships dialog box is displayed. View the Sketch2 relationships.
- 5. Click **Close** from the Parent/Child Relationships dialog box.

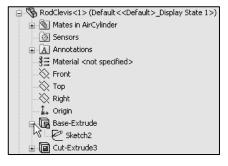

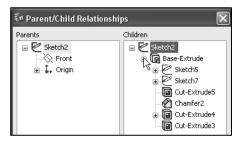

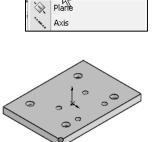

Extrude1

V

Curves

5

Instant3D

Ś

Reference

Geometry

View the Parent/Child Relationships for a feature.

- 6. Right-click **Base-Extrude** from the FeatureManager design tree.
- 7. Click Parent/Child. View the Base-Extrude feature relationships.
- 8. Click Close from the Parent/Child Relationships dialog box.
- 9. Close the model.

Sketch States

Sketches can exist in any of five states. The state of the sketch is displayed in the status bar at the bottom of the SolidWorks window. The five sketch states in SolidWorks are:

 $\stackrel{}{\longrightarrow}$ Color indicates the state of the individual Sketch entities.

- 1. *Under Defined*. Inadequate definition of the sketch, (blue). The FeatureManager displays a minus (-) symbol before the Sketch name.
- 2. *Fully Defined*. Complete information, (black). The FeatureManager displays no symbol before the Sketch name.
- 3. *Over Defined.* Duplicate dimensions and or relations, (red). The FeatureManager displays a (+) symbol before the Sketch name. The What's Wrong dialog box is displayed.
- 4. *Invalid Solution Found*. Your sketch is solved but results in invalid geometry. Example: such as a zero length line, zero radius arc or a self-intersecting spline (yellow).
- 5. *No Solution Found.* Indicates sketch geometry that cannot be resolved, (Brown).

The SolidWorks SketchXpert is designed to assist in an over defined state of a sketch. The SketchXpert generates a list of causes for over defined sketches. The list is organized into Solution Sets. This tool enables you to delete a solution set of over defined dimensions or redundant relations without compromising your design intent.

With the SolidWorks software, it is not necessary to fully dimension or define sketches before you use them to create features. You should fully define sketches before you consider the part finished for manufacturing.

Click Options \boxtimes System Options \succ Sketch, and click the Use fully defined sketches option to use fully defined sketches for created features.






Apply dimensions and relations calculated by the SolidWorks application to fully define sketches or selected sketch entities. Use the Fully Defined Sketch PropertyManager.

Sketch Entities

Sketch entities provide the ability to create lines, rectangles, parallelograms, circles, etc. during the sketching process. To access the available sketch entities for SolidWorks, click **Tools** ➤ **Sketch Entities** from the Menu bar menu and select the required entity. The book does not go over each individual Sketch entity in full detail but will address the more advance entities.

To obtain additional information of each sketch entity, active the sketch entity and click the question mark \square icon located at the top of the entity PropertyManager or click **Help** > **SolidWorks Help Topics** from the Menu bar and search by using one of the three available tabs: **Contents, Index**, or **Search**.

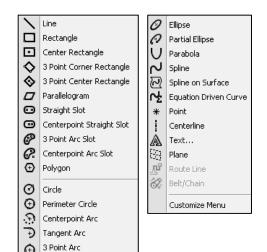

Line Sketch Entity

The Line Sketch entity tool provides the ability to sketch multiple 2D lines in a sketch. The Line Sketch entity uses the Insert Line PropertyManager. The Insert Line PropertyManager provides the following selections:

- *Orientation*. The Orientation box provides the following options:
 - As sketched. Sketch a line in any direction using the click and drag method. Using the click-click method, the As sketched option provides the ability to sketch a line in any direction, and to continue sketching other lines in any direction, until you double-click to end your process.
 - **Horizontal**. Sketch a horizontal line until you release your mouse pointer.
 - Vertical. Sketch a vertical line until you release your mouse pointer.



• Angle. Sketch a line at an angle until you release your mouse pointer.

The angle is created relative to the horizontal.

- *Options*. The Options box provides two line types. They are:
 - For construction. Converts the selected sketch entity to construction geometry.
 - **Infinite length**. Creates a line of infinite length which you can later trim in the design process.

Use Construction geometry to assist in creating your sketch entities and geometry that are ultimately incorporated into the part. Construction geometry is ignored when the sketch is used to create a feature. Construction geometry uses the same line style as a centerline.

The plane or face you select for the Base sketch determines the orientation of the part.


Rectangle and Parallelogram Sketch Entity

The Rectangle Sketch entity \Box tool provides the ability to sketch a *Corner Rectangle*, *Center Rectangle*, *3 Point Corner Rectangle* and a *3 Point Center Rectangle*. The Parallelogram Sketch entity provides the ability to sketch a *Parallelogram*.

The Rectangle and Parallelogram Sketch entity uses the Consolidated Rectangle PropertyManager. The Rectangle PropertyManager provides the following selections:

- *Rectangle Type*. The Rectangle Type box provides five selections. They are:
 - **Corner Rectangle**. Sketch a standard rectangle at a corner point. Click to place the first corner of the rectangle, drag, and release when the rectangle is the correct size and shape.
 - **Center Rectangle**. Sketch a rectangle at a center point. Click to define the center. Drag to sketch the rectangle with centerlines. Release to set the four edges.
 - **3 Point Corner Rectangle**. Sketch a rectangle at a selected angle. Click to define the first corner. Drag, rotate, and then release to set the length and angle of the first edge. Click

Options	~
For construction	
🔲 Infinite length	

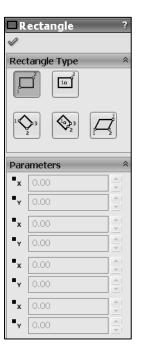

and drag to sketch the other three edges. Release to set the four edges.


- **3 Point Center Rectangle**. Sketch a rectangles with a center point at a selected angle. Click to define the first corner. Drag and rotate to set one half the length of the centerlines. Click and drag to sketch the other three edges and centerlines. Release to set the four edges.
- **Parallelogram**. Sketch a standard parallelogram. A Parallelogram is a rectangle whose sides are not horizontal or vertical with respect to the sketch grid. Click to define the first corner. Drag, rotate, and then release to set the length and angle of the first edge. Click, rotate, and drag to set the angle and length of the other three edges. Release to set the four edges.
- *Parameters*. Specify the appropriate combination of parameters to define the rectangle or parallelogram if they are not constrained by relations.


Slot Sketch Entity


The Slot Sketch entity volume tool provides the ability to sketch a *Straight Slot, Centerpoint Straight Slot, 3 Point Arc Slot* and a *Centerpoint Arc Slot* from the Consolidated Slot toolbar.


The Slot Sketch entity uses the Consolidated Slot PropertyManager. The Slot PropertyManager provides the following selections:


- *Slot Type*. The Slot Type box provides four selections. They are:
 - **Straight Slot**. Sketch a three point slot.
 - Centerpoint Straight Slot. Sketch a three point slot located at an Origin or centerpoint.
 - **3 Point Arc Slot**. Sketch a four point arc slot.
 - Centerpoint Arc Slot. Sketch a four point arc slot located at an Origin or reference point.

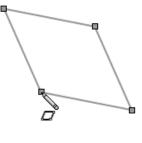

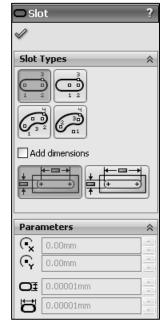

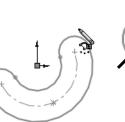



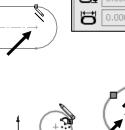

- Add dimensions. Insert dimensions as you sketch the slot.
- Center to Center. Insert center to center dimension if the Add dimensions box is checked.
- **Overall Length**. Insert overall length if the Add dimensions box is checked.
- *Parameters*. Provides the ability to specify the appropriate combination of parameters to define slot if they are not constrained by relations. The parameters box provides the following options: Center X Coordinate, Center Y Coordinate, Radius of Arc, Angle of Arc, Slot Width, Slot Length.


Tutorial: Slot Sketch - Instant3D 4-1


Utilize the Slot Sketch tool. Create an Extruded Boss/Base and Extruded Cut feature using the Instant3D tool.


- 1. Create a New D part in SolidWorks. Use the default ANSI, IPS Part template.
- 2. Right-click Front Plane from the FeatureManager.
- 3. Click Sketch E. from the Context toolbar. The Sketch toolbar is displayed.
- 4. Click **Centerpoint Straight Slot** from the Consolidated Slot toolbar as illustrated. The Slot PropertyManager is displayed. If needed, uncheck the Add dimension box.
- 5. Click the Origin.
- 6. Click a **position** directly to the right of the Origin.
- 7. Click a **position** directly above the second point as illustrated.


Dimension the slot sketch.


- 8. Right-click **Smart Dimension** ♥ from the Context toolbar in the Graphics window.
- 9. **Dimension** the model as illustrated. The sketch is fully defined. Note the location of the Origin!






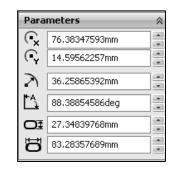







Apply the Instant3D tool. Create an Extruded Boss/Base feature. The Extruded Boss/Base feature adds material to a part. Note: Edit the feature, view the PropertyManager to confirm that you picked the correct dimension with the on-screen ruler. The Instant3D tool does not provide various End Conditions for Design Intent.

Exit Sketch1.

- 10. Right-click Exit Sketch. Note: Instant3D is active by default. If needed click Instant3D from the Features tab.
- 11. Display an **Isometric view**.

Create an Extruded Boss/Base feature with a default Blind End Condition.

- 12. Click the top edge as illustrated. A green arrow is displayed.
- 13. Drag the green arrow forward and click the on-screen ruler at the 0.25 dimension. View Boss-Extrude1 in the FeatureManager. Depth = .25in.

Create an Extruded Cut feature using Instant3D.

- 14. Display a Front view.
- 15. Right-click the Front face. This is you Sketch plane.
- 16. Click Sketch E from the Context toolbar. The Sketch toolbar is displayed.
- 17. Click the Circle ³ Sketch tool.
- 18. Sketch a circle centered at the Origin as illustrated.


Exit the Sketch.


- 19. Right-click Exit Sketch.
- 20. Display an Isometric view.


Create an Extruded Cut feature

- 21. Click the circumference of the sketch as illustrated. A green arrow is displayed.
- 22. Click a drag the green arrow backwards to create a hole in the model. Note: The default End Condition is Blind
- 23. **Release** the mouse icon behind the model. The Cut-Extrude1 feature is displayed. View the model.




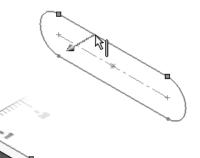

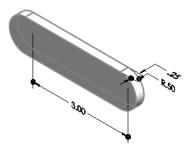







24. Close the model.

The Instant3D tool does not provide various End Conditions for Design Intent.

Polygon Sketch Entity

The Polygon Sketch entity O tool provides the ability to create equilateral polygons with any number of sides between 3 and 40. The Polygon Sketch entity uses the Polygon PropertyManager. The Polygon PropertyManager provides the following selections:


- *Existing Relations*. The Existing Relations box displays information on existing relations of the polygon sketch.
- *Add Relation*. The Add Relation box displays the selected relations to the points and lines of your polygon sketch.

 $\sqrt[3]{V}$ You can not add a relation to a complete polygon. You can only add a relation to the points and lines of the polygon.

- *Options*. The Options box provides the following selection:
 - For construction. Not selected by default. Converts the selected sketch entity to construction geometry.
- *Parameters*. The Parameters box provides the ability to specify the appropriate combination of parameters to define the polygon. When you modify or change one or more parameters, the other parameters update automatically. The available selections are:
 - Number of Sides. Sets the number of sides in your polygon.
 - **Inscribed circle**. Selected by default. Displays an inscribed circle inside the polygon. This option defines the size of the polygon. The circle is construction geometry.
 - **Circumscribed circle**. Displays a circumscribed circle outside of the polygon. This option defines the size of the polygon. The circle is construction geometry.
 - Center X Coordinate. Displays the X coordinate for the center of your polygon.

		_
🕀 Po	olygon	
✓	ing Relations	~
	Under Defined	
Add	Relations	~
		\$
Optio		
	For construction	1
Para	meters	~
۲	6	*
	Inscribed circle	
	Circumscribed circle	
٠	0.00	*
\odot	0.00	*
Ô	173.20508076	*
Ľ4	0.00°	*
	New Polygon	





- Center Y Coordinate. Displays the Y coordinate for the center of your polygon.
- **Circle Diameter**. Displays the diameter of the inscribed or circumscribed circle.
- Angle. Displays the angle of rotation.
- **New Polygon**. Creates more than a single polygon without leaving the PropertyManager.

Tutorial: Polygon 4-1

Create a new part using the Polygon Sketch entity.

- 1. Create a **New** part in SolidWorks. Use the default ANSI Part template.
- 2. Right-click **Top Plane** from the FeatureManager design tree. This is your Sketch plane.
- 3. Click Sketch E from the Context toolbar. The Top Plane boundary is displayed in the Top view in the Graphics window.
- 4. Click the **Circle** ^𝕶 Sketch tool. The Circle PropertyManager is displayed.
- 5. Sketch a **circle** centered at the origin. The mouse cursor displays the Circle icon symbol **o**.


Insert a polygon.

 Click Tools ➤ Sketch Entities ➤ Polygon from the Menu bar or click Polygon from the Sketch toolbar. The Polygon PropertyManager is displayed. The mouse


cursor displays the Polygon icon symbol O.


- 7. Sketch a **Polygon** centered at the Origin larger than the circle as illustrated.
- 8. Click **OK** 🖋 from the Polygon PropertyManager.
- 9. **Rebuild** the model. View the created Polygon in the Graphics window.
- 10. Close the model.


For illustration purposes, the Reference planes and grid are hidden.

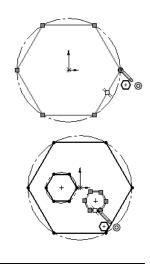



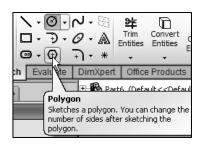

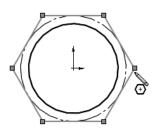

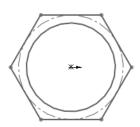


Circle Sketch and Perimeter Circle Sketch Entity

The Circle Sketch and Perimeter Circle Sketch

entity O tool provides the ability to control the various properties of a circle.

The Circle Sketch and Perimeter Circle Sketch entity uses the consolidated Circle PropertyManager. The consolidated Circle PropertyManager provides the following selections:

- *Circle Type*. Provides the ability to select either a center based circle or a perimeter-based circle sketch entity.
- *Existing Relations*. The Existing Relations box provides the following options:
 - Relations. Displays the automatic relations inferenced during sketching or created manually with the Add Relations tool. The callout in the Graphics window is highlighted when you select a relation in the dialog box. The Information icon in the Existing Relations box displays the sketch status of the selected sketch entity. Example: Under Defined, Fully Defined, etc.
- *Add Relations*. Provides the ability to add relations to the selected entity. Displays the relations which are possible for the selected entity.
- *Options*. The Options box provides the following selection:
 - For construction. Not selected by default. Converts the selected entity to construction geometry.
- *Parameters*. Specifies the appropriate combination of parameters to define the circle if the circle is not constrained by relations. The available selections are:
 - Center X Coordinate. Sets the Center X Coordinate value.
 - Center Y Coordinate. Sets the Center Y Coordinate value.
 - **Radius**. Sets the Radius value.

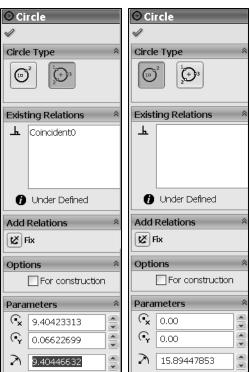

The Perimeter Circle Sketch entity of provides the ability to define a circle using 3 points along its perimeter. This sketch entity is very usefully when you are not concern about the location of the center of the circle.

Tutorial: Perimeter Circle 4-1

Create a Perimeter Circle sketch.

- 1. Create a **New** part in SolidWorks. Use the default ANSI Part template.
- 2. Right-click **Front Plane** from the FeatureManager. This is your Sketch plane.
- 3. Click Sketch 🖉 from the Context toolbar.
- 4. Click the Line ∧ Sketch tool. The Insert Line PropertyManager is displayed.
- 5. Sketch two lines as illustrated.


Sketch a circle that is tangent to both lines.


- 6. Click **Perimeter Circle** from the Consolidated Circle Sketch toolbar. The Circle PropertyManager is displayed.
- 7. Click each line once.
- 8. Click a **position** as illustrated to determine the size of the circle. The X coordinate, Y coordinate, and Radius is displayed in the Parameters box. The two lines are tangent to the circle. You created a simple circle using the Perimeter Circle sketch entity.
- Click OK ✓ from the Circle PropertyManager. View the model.
- 10. **Rebuild 8** the model.


11. Close the model.

$\stackrel{\text{lines}}{\longrightarrow}$ If the two lines change, the circle remains tangent to the lines.

In System Options, apply the Ghost image on drag option. The option displays a ghost image of a sketch entities' original position while you drag the sketch in the Graphics window.

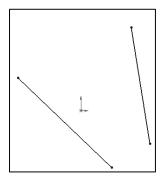



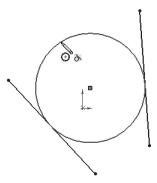

Enable spline tangency and curvature handles
 Show spline control polygon by default
 Ghost image on drag
 show curvature comb bounding curve
 Enable on screen numeric input on entity creation

Centerpoint Arc Sketch Entity

The Centerpoint Arc Sketch entity to tool provides the ability to create an arc from a center point, a start point, and an end point. The Centerpoint Arc Sketch entity uses the consolidated Arc PropertyManager.

The Arc PropertyManager controls the properties of a sketched *Centerpoint Arc, Tangent Arc and 3 Point Arc.*

The consolidated Arc PropertyManager provides the following selections:

- *Arc Type*. Provides the ability to select a Centerpoint Arc, Tangent Arc or 3 Point Arc sketch entity.
- *Existing Relations*. The Existing Relations box provides the following options:
 - **Relations**. Displays the automatic relations inferenced during sketching or created manually with the Add Relations tool. The callout in the Graphics window is highlighted when you select a relation in the dialog box. The Information icon in the Existing Relations box displays the sketch status of the selected sketch entity. Example: Under Defined, Fully Defined, etc.
- *Add Relations*. Provides the ability to add relations to the selected entity. Displays the relations which are possible for the selected entity.
- *Options*. The Options box provides the following selection:
 - For construction. Converts the selected entity to construction geometry.
- *Parameters*. Provides the ability to specify any appropriate combination of parameters to define your arc if the arc is not constrained by relations. The available selections are: Center X Coordinate, Center Y Coordinate, Start X Coordinate, Start Y Coordinate, End X Coordinate, End Y Coordinate, Radius and Angle.

Press the g key to activate the Magnifying glass tool. Use the Magnifying glass tool to inspect a model and make selections without changing the overall view.





Tutorial: Certerpoint Arc 4-1


Create a Centerpoint Arc sketch.


- 1. Create a **New** part in SolidWorks. Use the default ANSI Part template.
- 2. Right-click **Front Plane** from the FeatureManager. This is your Sketch plane.
- 3. Click **Sketch** ^ℓ from the Context toolbar.
- 4. Click the Line \searrow Sketch tool.
- 5. Sketch a **horizontal line** through the origin as illustrated.
- 6. Click **Centerpoint Arc** from the Consolidated Arc Sketch toolbar. The Arc icon is displayed on your mouse pointer.
- 7. Click a location on the **horizontal line** left of the origin. Do not pick the origin or the endpoint.
- 8. Click a **position** to the right and up on the horizontal line.
- 9. Drag to set the **angle** and the radius of the arc.
- 10. Release the **mouse** button to place the arc. View the Arc PropertyManager and the coordinates.
- 11. Click **OK** ✓ from the Arc PropertyManager.
- 12. **Rebuild B** the model.
- 13. Close the model.

Tangent Arc Sketch Entity

The Tangent Arc Sketch entity it tool provides the ability to create an arc, which is tangent to a sketch entity. The Tangent Arc Sketch entity uses the Arc PropertyManager. View the Centerpoint Arc Sketch entity section above for additional information on the Arc PropertyManager.

You can transition from sketching a line to sketching a Tangent Arc, and vice versa without selecting the Arc tool from the Sketch toolbar. Example: Create a line. Click the endpoint of the line. Move your mouse pointer away. The Preview displays another line. Move your mouse pointer back to the selected line endpoint. The Preview displays a tangent arc. Click to place the arc. Move the mouse pointer away from the arc endpoint. Perform the same procedure above to continue.

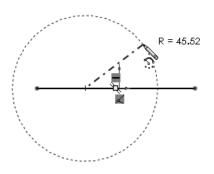



Tutorial: Tangent Arc 4-1

Create a Tangent Arc sketch.

- 1. Create a New D part in SolidWorks. Use the default ANSI Part template.
- 2. Right-click Front Plane from the FeatureManager.
- 3. Click **Sketch** [∠] from the Context toolbar.
- 4. Click the Line \searrow Sketch tool.
- 5. Sketch a horizontal line through the Origin.
- Click Tangent Arc → from the Consolidated Arc Sketch toolbar. The Arc icon is displayed on the mouse pointer. Click the left end point of the horizontal line.
- 7. Drag the **mouse pointer** upward and to the left for the desired shape.
- 8. Click an **end point**. You created a Tangent Arc. The Arc PropertyManager is displayed.

- 9. Right-click Select in the Graphics window to deselect the Sketch tool.
- 10. Click **OK** ✓ from the Arc PropertyManager.
- 11. Exit the sketch.
- 12. Close the model.

놊

You can select an end point of a line, ellipse, arc or a spline. The Tangent Arc tool creates both Normal and Tangent Arcs.


3 Point Arc Sketch Entity

The 3 Point Arc Sketch entity tool provides the ability create an arc by specifying three points; a starting point, an endpoint, and a midpoint. View the Centerpoint Arc Sketch entity section for additional information on the Arc PropertyManager.


Tutorial: 3Point Arc 4-1

Create a 3Point Arc sketch.

- 1. Open **3Point Arc 4-1** from the SolidWorks 2012 folder.
- 2. Edit Sketch1.
- 3. Click **3Point Arc** from the Consolidated Arc Sketch toolbar.





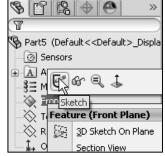


- 4. Click the **top point** of the vertical line for the start point as illustrated.
- 5. Click the **right point** of the open circle for the end point as illustrated.
- 6. Drag the **arc** downward to set the radius.
- 7. Click a **position** for the midpoint of the 3Point Arc.
- 8. Click **OK** I from the Arc PropertyManager.
- 9. **Rebuild** the model. Close the model.

Ellipse Sketch Entity

The Ellipse Sketch entity tool provides the ability to create a complete ellipse. The Ellipse PropertyManager controls the properties of a sketched Ellipse or a Partial Ellipse. The Ellipse PropertyManager provides the following selections:

- *Existing Relations*. The Existing Relations box provides the following options:
 - **Relations**. Displays the automatic relations inferenced during sketching or created manually with the Add Relations tool. The callout in the Graphics window is highlighted when you select a relation in the dialog box. The Information icon in the Existing Relations box displays the sketch status of the selected sketch entity. Example: Under Defined, Fully Defined, etc.
- *Add Relations*. Provides the ability to add relations to the selected entity. Displays the relations which are possible for the selected entity.
- **Options**. The Options box provides the following selection:
 - **For construction**. Converts the selected entity to construction geometry.
- *Parameters*. Provides the ability to specify any appropriate combination of parameters to define the ellipse if the ellipse is not constrained by relations. The available selections are: Center X Coordinate, Center Y Coordinate, Start X
 Coordinate (only available for a Partial Ellipse), Start Y
 Coordinate (only available for a Partial Ellipse), End X
 Coordinate (only available for a Partial Ellipse), End Y
 Coordinate (only available for a Partial Ellipse), Radius 1, Radius 2 and Angle (only available for a Partial Ellipse).

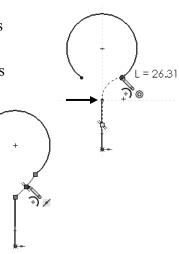

Ø Ellipse ?					
s de la companya de l					
Existing Relations					
					
0	Under Defined				
Add Relations *					
E Fix					
Options					
	For construction	ו			
Para	meters	~			
\mathcal{O}_{x}	-32.23623653	*			
Q,	51.64895672	*			
C	25.95798567	×			
C	6.09893093	*			

Tutorial: Ellipse 4-1

Create an Ellipse sketch.


- 1. Create a **New** ⁽¹⁾ part in SolidWorks. Use the default ANSI Part template.
- 2. Right-click **Front Plane** from the FeatureManager. This is your Sketch plane.
- 3. Click Sketch [€] from the Context toolbar.
- 4. Click the **Ellipse** *O* Sketch tool. The Ellipse icon is displayed on the mouse pointer.
- 5. Click a **location** in the Graphics window. This is the start location.
- 6. Drag and click to set the **major axis** of the ellipse. The ellipse PropertyManager is displayed.
- 7. Drag and click again to set the **minor axis** of the ellipse.
- 8. Right-click Select in the Graphics window.


Add a vertical geometric relation in the sketch.

- 9. Hold the Ctrl key down.
- 10. Click the **top vertical** point and the **bottom vertical** point of the Ellipse.
- 11. Release the **Ctrl** key. The Properties PropertyManager is displayed.
- 12. Click **Vertical** from the Add Relations box. Note: You can also use the pop-up Context toolbar and click Make Vertical.
- 13. Click **OK** 🖋 from the Properties PropertyManager.
- 14. **Rebuild** the model. View the sketch.
- 15. Close the model.

Partial Ellipse Sketch Entity

The Partial Ellipse Sketch entity tool provides the ability to create a partial ellipse or an elliptical arc from a centerpoint, a start point, and an end point. You use a similar procedure when you created a Centerpoint Arc. The Ellipse PropertyManager controls the properties of a sketched Ellipse or a Partial Ellipse. View the Ellipse section for additional information on the Ellipse PropertyManager.

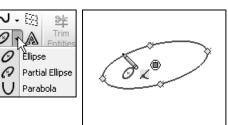







Parabola Sketch Entity

The Parabola Sketch entity V tool provides the ability to create a parabolic curve. The Parabola Sketch entity uses the Parabola PropertyManager. The Parabola PropertyManager provides the following selections:

- *Existing Relations*. The Existing Relations box provides the following options:
 - **Relations**. Displays the automatic relations inferenced during sketching or created manually with the Add Relations tool. The callout in the Graphics window is highlighted when you select a relation in the dialog box. The Information icon in the Existing Relations box displays the sketch status of the selected sketch entity. Example: Under Defined, Fully Defined, etc.
- *Add Relations*. Provides the ability to add relations to the selected entity. Displays the relations which are possible for the selected entity.
- *Options*. The Options box provides the following selection:
 - **For construction**. Not selected by default. Converts the selected entity to construction geometry.
- *Parameters*. Provides the ability to specify the appropriate combination of parameters to define the parabola if the parabola is not constrained by relations. The available selections are: **Start X Coordinate**, **Start Y Coordinate**, **End X Coordinate**, **End Y Coordinate**, **Center X Coordinate**, **Center Y Coordinate**, **Apex X Coordinate** and **Apex Y Coordinate**.

Tutorial: Parabola 4-1


Create a Parabola sketch.

- 1. Create a **New** part in SolidWorks. Use the default ANSI, IPS Part template.
- 2. Right-click **Front Plane** from the FeatureManager. This is your Sketch plane.
- 3. Click **Sketch** [€] from the Context toolbar.

Apply the Parabola Sketch tool.

4. Click the **Parabola** \cup Sketch tool from the Consolidated Sketch toolbar. The Parabola icon is displayed on the mouse pointer.

	rabola	
V		
Exist	ing Relations	~
Ŧ		
0	Under Defined	
Add	Relations	~
К К	ix	
Optic	ons	~
	For constructio	n
Para	matare	
	neters	~
A	-11.45918932	< > >
$\bigcap_{i=1}^{n}$		< > < > >
• ^	-11.45918932	< > < > < > > > > > > > > > > > > > > >
\cap	-11.45918932 53.4360253	< > < > < > < > > < > > < > > > > > > >
	-11.45918932 53.4360253 -11.97871449	
	-11.45918932 53.4360253 -11.97871449 53.73822786	<pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre>
$\begin{array}{c} & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ & $	-11.45918932 53.4360253 -11.97871449 53.73822786 -20.39791411	<



- 5. Click a **position** in the Graphics window to locate the focus of your parabola.
- 6. Drag to **enlarge** the parabola. The parabola is outlined.
- 7. Click on the **parabola** and drag to define the extent of the curve. The Parabola PropertyManager is displayed.
- 8. Click **OK** 🖋 from the Parabola PropertyManager.
- 9. **Rebuild** ⁸ the model.
- 10. Close the model.


Spline Sketch Entity


The Spline Sketch entity \checkmark tool provides the ability to create a profile that utilizes a complex curve. This complex curve is called a Spline, (Non-uniform Rational B-Spline or NURB). Create a spline with control points. With spline control points, you can:

- Use spline points as handles to pull the spline into the shape you want.
- Add dimensions between spline points or between spline points and other entities.
- Add relations to spline points.

The 2D Spline PropertyManager provides the following selections:

- *Existing Relations*. The Existing Relations box provides the following options:
 - **Relations**. Displays the automatic relations inferenced during sketching or created manually with the Add Relations tool. The callout in the Graphics window is highlighted when you select a relation in the dialog box. The Information icon in the Existing Relations box displays the sketch status of the selected sketch entity. Example: Under Defined, Fully Defined, etc.
- *Add Relations*. Provides the ability to add relations to the selected entity. Displays the relations which are possible for the selected entity.
- *Options*. The Options box provides the following selection:

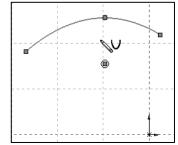

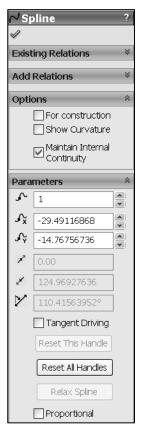

- For construction. Not selected by default. Converts the selected entity to construction geometry.
- Show Curvature. Not selected by default. Provides the ability to control the Scale and Density of the curvature. Displays the Curvature of the spline in the Graphics window.
- **Raised degree**. Only available with splines that include curvature handles at each end. Raises or lowers the degree of the spline. You can also adjust the degrees by dragging the handles.
- **Standard**. Only available with splines that include curvature handles at each end. Displays when you first create the spline or if Raised degree is cleared.
- Maintain Internal Continuity. Selected by default.
- *Parameters*. Provides the ability to specify the appropriate combination of parameters. The available parameters are:
 - **Spline Point Number**. Highlights your selected spline point in the Graphics window.
 - X Coordinate. Specifies the x coordinate of your spline point.
 - Y Coordinate. Specifies the y coordinate of your spline point.
 - **Radius of Curvature**. Controls the radius of curvature at any spline point. This option is only displayed if you select the Add Curvature Control option from the Spline toolbar, and add a curvature pointer to the spline.
 - **Curvature**. Displays the degree of curvature at the point where the curvature control was added. This option is only displayed if you add a curvature pointer to the spline.
 - **Tangent Weighting1**. Controls the left tangency vector by modifying the spline's curvature at the spline point.
 - **Tangent Weighting 2**. Controls the right tangency vector by modifying the spline's curvature at the spline point.
 - **Tangent Radial Direction**. Controls the tangency direction by modifying the spline's angle of inclination relative to the X, Y or Z axis.

A Curvature Scale ? ✓
Scale *
25
Density
96

- **Tangent Polar Direction**. Controls the elevation angle of the tangent vector with respect to a plane placed at a point perpendicular to a spline point. This is only for the 3D Spline PropertyManager.
- **Tangent Driving**. Enables spline control by using the Tangent Magnitude option and the Tangent Radial Direction option.
- **Reset This Handle**. Returns the selected spline handle to the initial state.
- **Reset All Handles**. Returns the spline handles to their initial state.
- **Relax Spline**. Sketch your spline and display the control polygon. You can drag any node on the control polygon to change shape. If your dragging results in a spline which is not smooth, re-select the spline to display the PropertyManager. Click the Relax Spline selection under the Parameters option. This will reparameterize or smooth the shape of your spline.
- **Proportional**. Retains the spline shape when you drag the spline.

Spline toolbar



Use the tools located on the Spline toolbar to control properties of a sketched spline. The Spline toolbar provides the following tools:

- *Add Tangency Control*. The Add Tangency Control tool * adds a tangency control handle. Drag the control handle along the spline and position it to control the tangency at the selected point.
- *Add Curvature Control*. The Add Curvature Control tool ^{*}O adds a curvature control handle. Drag the control handle along the spline and position the control handle to control the spline shape at the selected point.
- *Insert Spline Point*. The Insert Spline Point tool \checkmark adds a point to the spline. Drag spline points to reshape the spline.

- *Simplify Spline*. The Simplify Spline tool ***** reduces the number of points in the spline. This function improves the performance in the model for complex spline curves.
- *Fit Spline*. The Fit Spline tool **b** adds a spline based on the selected sketch entities and edges.

 $[\]stackrel{\text{line}}{\longrightarrow}$ You can insert dimensions between the spline points.

- *Show Spline Handles*. The Show Spline Handles tool ⁶ displays all handles of the selected spline in the Graphic window. Use the spline handles to reshape the spline.
- *Show Inflection Points*. The Show Inflection Points tool * displays all points where the concavity of a selected spline changes.
- *Show Minimum Radius*. The Show Minimum Radius tool ^ displays the measurement of the smallest radius in the selected spline.
- *Show Curvature Combs*. The Show Curvature Combs tool A displays the scalable curvature combs which visually enhances the curves of your selected spline.

Tutorial: Spline 4-1

Create a 2D Spline sketch.


- 1. Create a New D part. Use the default ANSI, IPS Part template.
- 2. Right-click **Right Plane** from the FeatureManager. This is your Sketch plane.
- 3. Click **Sketch** ^𝗠 from the Context toolbar.

Apply the Spline Sketch tool.


- 4. Click the **Spline** ∼ Sketch tool. The spline icon is displayed on the mouse pointer.
- 5. Create the Spline. This is a closed profile. Create a **seven point control** spline as illustrated. Do not select the origin. The Spline PropertyManager is displayed.
- 6. Right-click **End spline** on the last control point.
- 7. Exit the Spline \sim tool.
- 8. Click and drag the **spline** from left to right. Do not select a control or handle. The spline moves without changing its shape.
- 9. Click **OK** I from the Spline PropertyManager.
- 10. **Rebuild** the model. View the results.
- 11. Close the model.

It's considered best practice to fully define all sketches in the model. However; there are times when this is not practical. Generally when using the spline tool to create a freeform shape.







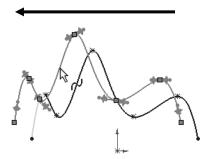

Spline handles are displayed by default. To hide or display spline handles, click the Show Spline Handles to tool from the Spline toolbar or click Tools > Spline Tools > Show Spline Handles.

Tutorial: 2D Spline 4-2

Dimension a 2D Spline handle.

- 1. Open **2D Spline 4-2** from the SolidWorks 2012 folder.
- 2. Edit Sketch1.

Use the Smart Dimension tool to dimension the spline handles. Display the handles.


- Click the Spline in the Graphics window. The Spline PropertyManager is displayed. Locate the pointer on the top handle. The rotate Sicon is displayed.
- 4. Click the top handle tip.
- 5. **Rotate** the handle upwards as illustrated to create a Tangent Driving.
- 6. Right-click **Smart Dimension** ♥ from the Context toolbar.

Create a Tangent Radial dimension.

- 7. Click the handle arrow tip.
- 8. Click the **horizontal** line.
- 9. Enter 40deg.
- 10. Set **precision** to none.
- 11. Click **OK** ✓ from the Dimension PropertyManager.
- 12. **Rebuild** the model. View the results.
- 13. Close the model.

For a Tangent Magnitude, select the arrow tip on the handle to add the dimension.

Illustrations may vary depending on your SolidWorks version and system setup.

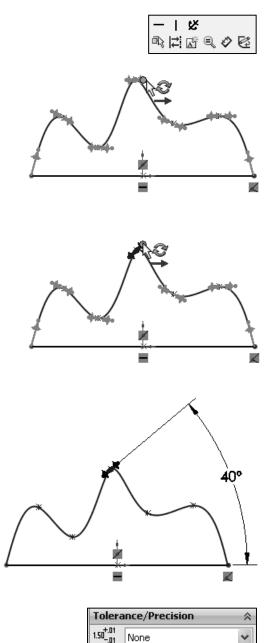

None

v

Tutorial: 3D Spline 4-1

Create a 3D Spline part.

- 1. Create a **New** \square part. Use the default ANSI Part template.
- 2. Click **Insert ≥ 3D Sketch** from the Menu bar menu.

Apply the Spline Sketch tool.

- 3. Click the **Spline** ∩ Sketch tool.
- 4. Click a **location** in the Graphics window to place the first spline point. Each time you click a different location, the space handle is displayed to help you sketch on a different plane.

Press the **Tab** key to change planes.

- 5. Click **three** additional locations as illustrated. The Spline PropertyManager is displayed.
- 6. Right-click End Spline.
- 7. Click **Spline** ∼^J from the Sketch toolbar to exit the sketch tool.
- 8. Click **OK** ✓ from the Spline PropertyManager.
- 9. **Exit** the 3D Sketch. 3DSketch1 is created and displayed in the FeatureManager.
- 10. Close the sketch.

Tutorial: 3D Spline 4-2


Edit a 3D spline using the current elements.


- 1. Open **3D Spline 4-2** from the SolidWorks 2012 folder.
- 2. Edit 3DSketch1.
- 3. Click the **Spline** in the Graphics window. The Spline PropertyManager is displayed.

Modify the Spline shape using the click and drag method on a control point.


4. Click a **spline control point** as illustrated and drag it upward. The Point PropertyManager is displayed. You modified the Spline shape.





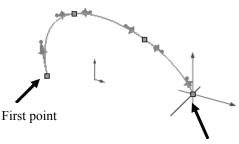

Last point

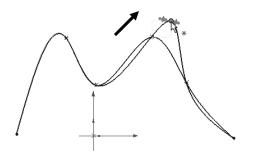

Modify the Spline shape using the x-, y- and z- coordinates method on a control point.

- 5. Click a **spline point** as illustrated. The Point PropertyManager is displayed.
- 6. Set values for x-, y-, and z- coordinates from the Point PropertyManager. You modified the shape of the spline.

Modify the Spline shape using the click and drag method on a handle.

- 7. Click a spline handle as illustrated.
- 8. Drag the selected **spline handle** to control the tangency vector by modifying the spline's degree of curvature at the spline point. The Spline PropertyManager is displayed.

Reset the handle to the original location.

9. Click the **Reset This Handle** option. All values relative to the selected handle return to their original value.


Move the spline.

- 10. Check the **Proportional** box.
- 11. Click and drag the **spline** from left to right. Do not select a control point. As the spline is moved, it retains its shape.
- 12. Click **OK** I from the Spline PropertyManager.
- 13. Exit the 3D Sketch. View the results.
- 14. Close the model.


Tutorial: 3D Spline 4-3

Add new elements to a 3D Spline.


- 1. Open **3D Spline 4-3** from the SolidWorks 2012 folder.
- 2. Edit 3DSketch1.
- 3. Click the **spline** from the Graphics window. The Spline PropertyManager is displayed.

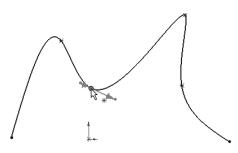

Para	meters	8
■ _×	4.00	*
•	30.00	*
⁼z	5.00	*

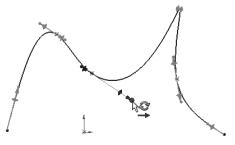

Tangent Driving
Reset This Handle
Reset All Handles
Relax Spline
Proportional

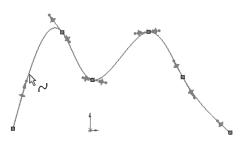

- 4. Click the Add Tangency Control ** tool from the Spline toolbar.
- 5. Drag to **place** the handle as illustrated.
- 6. Click a **position** for the handle.
- Click OK ✓ from the Spline PropertyManager.
- 8. Exit the 3D Sketch. View the results.
- 9. Close the model.

Spline on Surface Entity


The Spline on Surface entity tool provides the ability to sketch splines on various surfaces. Splines sketched on surfaces include standard spline attributes, as well as the capabilities to add and drag points along the surface and to generate a preview that is automatically smoothed through the points.


All spline points are bounded to the surface on which they are sketched.


Tutorial: Spline on Surface 4-1


Create a Closed Spline on Surface feature.

- 1. Open **Spline on Surface 4-1** from the SolidWorks 2012 folder.
- 2. Click the **top left face** as illustrated.
- Click the Spline on Surface Sketch tool.
 The spline icon is displayed on the mouse pointer.
- 4. Create a five point closed spline as illustrated.
- 5. Click **Spline on Surface** C to close the sketch tool.
- 6. Click the **Extruded Boss/Base** Features tool. The Boss-Extrude PropertyManager is displayed.
- 7. Click the **left vertical line** as illustrated for Direction 1.

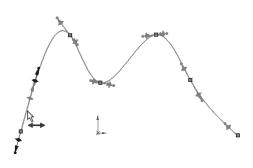

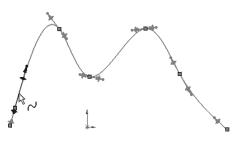



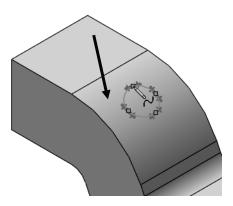

- 8. Enter **10**mm for Depth.
- Click OK I from the Boss-Extrude PropertyManager. Boss-Extrude1 is displayed. View the results in the Graphics window. Close the model.

Intelligence Modeling - Equation Driven Curve

The Equation Driven Curve **\Lambda** tool is a 2D Sketch spline driven by an equation. This Sketch entity provides the ability to create a curve by specifying the equations that defines the curve. Equations defining a curve specify y- as a function of x-. You can use any function that is supported in the Equations dialog box. See Chapter 18 - Intelligence modeling techniques for additional information.

The Equation Driven Curve entity uses the Equation Driven Curve PropertyManager. The PropertyManager provides the following selections:

- *Equation Type*. There are equation types available: *Explicit* and *Parametric*.
- *Parameters*. The Parameters box provides the following options:
 - Equation. Provides the ability to enter an equation as a function of X-. If you enter an equation that can't be resolved, the text color is displayed in red.
 - **Parameters**. Provides the ability to enter the start and end X value of the equation.
 - **Transform**. Provides the ability to enter the translation of X-, Y- and angle for the curve.


Tutorial: Equation Driven Curve 4-1

Create an Equation Driven Curve on the Front Plane.

1. Create a New D part. Use the default ANSI, IPS Part template.

Create a 2D Sketch on the Front Plane.

- 2. Right-click **Front Plane** from the FeatureManager.
- 3. Click **Sketch** from the Context toolbar. The Sketch toolbar is displayed. Front Plane is your Sketch plane.

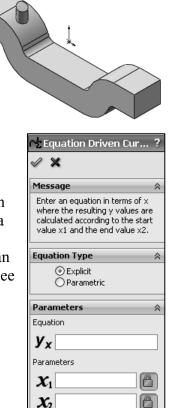




4. Click the **Equation Driven Curve** № Sketch tool. The Equation Driven Curve PropertyManager is displayed. This tool provides the ability to build intelligences into a part.

Specify the equation that defines the sketch. Note: y- is a function of x-.

- 5. Enter: **3*****x*****sin**(**x**) as illustrated in the Equation box.
- 6. Enter **0** for the start point as illustrated.
- 7. Enter **4*pi** for the end point. Note: You can fix the end points of the curve by applying the Fix tool.
- 8. Click **OK** I from Equation Driven Curve PropertyManager. View the created curve. Note click the curve in the Graphics window to edit the Parameters of the curve.
- 9. Click Exit Sketch. View the results.




Use regular mathematical notation and order of operations to write an equation. x_1 and x_2 are for the beginning and end of the curve. Use the transform options at the bottom of the PropertyManager to move the entire curve in x-, y- or rotation. To specify x=f(y) instead of y = f(x), use a 90 degree transform.


View the .mp4 movies located on the CD in the book to better understand the potential of the Equation Driven Curve tool. The first one: *Calculating Area of a region bounded by two curves (secx)*² *and sin x* in SolidWorks - the second one: *Determine the Volume of a Function Revolved Around the x Axis* in SolidWorks. Both are located in the SolidWorks 2012 folder on the CD.


Curve Through XYZ Points

The Curve Through XYZ Points \mathcal{V} feature provides the ability to either type in (using the Curve File dialog box) or click Browse and import a text file using x-, y-, z-, coordinates for points on a curve.

A text file can be generated by any program which creates columns of numbers. The Curve \mathcal{V} feature reacts like a default spline that is fully defined.

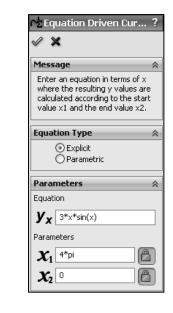

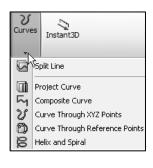

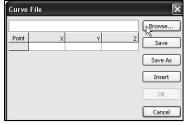

Create a curve using the Curve Through XYZ Points tool. Import the x-, y-, z- data. Verify that the first and last points in the curve file are the same for a closed profile.

It is highly recommend that you insert a few extra points on either end of the curve to set end conditions or tangency in the Curve File dialog box.

Imported files can have an extension of either *.sldcrv or *.text. The imported data: x-, y-, z-, must be separated by a space, a comma, or a tab.

Tutorial: Curve Through XYZ points 4-1


Create a curve using the Curve Through XYZ Points tool. Import x-, y-, z- data from a CAM program. Verify that the first and last points in the curve file are the same for a closed profile.


- 1. Open **Curve Through XYZ points 4-1** from the SolidWorks 2012 folder.
- 2. Click the **Curve Through XYZ Points** *U* tool from the Features CommandManager. The Curve File dialog box is displayed.


Import x-, y-, z- data. Verify that the first and last points in the curve file are the same for a closed profile.


- 3. Click **Browse** from the Curve File dialog box. **Browse** to the SolidWorks 2012 folder.
- 4. Set Files of type to **Text Files**.
- 5. Double-click **cam2.txt**. View the data in the Curve File dialog box. View the sketch in the Graphics window. Review the data points in the dialog box.
- Click OK from the Curve File dialog box. Curve1 is displayed in the FeatureManager. This curve can now be used in a sketch (fully defined profile). View the results of the fully defined sketch using the curve.
- 7. Close the model.
- 8. Open **Curve Through XYZ points 4-2** from the SolidWorks 2012 folder to view the final Cam model and FeatureManager. **Close** the model.

See Chapter 18 - Intelligence Modeling techniques for additional information.

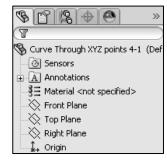









Curve File 🗙					
C:\Documents and Settings\dplanchard\My Docur				Browse	
Point	X	Y	Z	^	
1	50mm	Omm	Omm		Save
2	49.99mm	0.88mm	Omm		
3	49.97mm	1.78mm	Omm		Save As
4	49.93mm	2.68mm	Omm		
5	49.88mm	3.61mm	Omm		Insert
6	49.82mm	4.54mm	Omm		
7	49.75mm	5.49mm	Omm		ОК
8	49.66mm	6.44mm	Omm		
9	49.56mm	7.41mm	Omm	¥	Cancel



Curve Through Reference Points

The Curve Through Reference Points tool provides the ability to create a curve through points located on one or more planes. See SolidWorks Help for additional information.

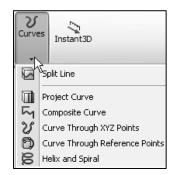

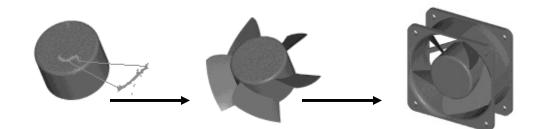

Point Sketch Entity

The Point Sketch entity * tool provides the ability to insert points in your sketches and drawings. To modify the properties of a point, select the point in an active sketch, and edit the properties in the Point PropertyManager. The Point PropertyManager provides the following selections:

- *Existing Relations*. The Existing Relations box provides the following options:
 - **Relations**. Displays the automatic relations inferenced during sketching or created manually with the Add Relations tool. The callout in the Graphics window is highlighted when you select a relation in the dialog box. The Information icon in the Existing Relations box displays the sketch status of the selected sketch entity.
- *Add Relations*. Provides the ability to add relations to the selected entity. Displays the relations which are possible for the selected entity.

* Point ?				
×				
Exist	ing Relations 🛛 🔗			
뇨	Coincident0			
0	Under Defined			
Add	Relations *			
۲ ک	K Fix			
Para	Parameters			
■x	-46.87718279			
•	23.20723198			

- *Parameters*. Provides the ability to specify the appropriate combination of parameters for your point only is the point is not constrained by relations. The available parameters are:
 - X Coordinate. Specifies the x coordinate of your point.
 - Y Coordinate. Specifies the y coordinate of your point.

Centerline Sketch Entity

The Centerline Sketch entity tool provides the ability to use centerlines to create symmetrical sketch elements and revolved features, or as construction geometry. The Centerline sketch entity uses the Insert Line PropertyManager. The Insert Line PropertyManager provides the following selections:

- *Orientation*. The Orientation box provides the following options:
 - As sketched. Sketch a line in any direction using the click and drag method. Using the click-click method, the As sketched option provides the ability to sketch a line in any direction, and to continue sketching other lines in any direction, until you double-click to end your process.
 - **Horizontal**. Sketch a horizontal line until you release your mouse pointer.
 - Vertical. Sketch a vertical line until you release your mouse pointer.
 - Angle. Sketch a line at an angle until you release your mouse pointer.

 $\stackrel{\text{\tiny \star}}{\longrightarrow}$ The angle is created relative to the horizontal.

- *Options*. The Options box provides two line types. They are:
 - For construction. Selected by default. Converts the selected sketch entity to construction geometry.
 - **Infinite length**. Not selected by default. Creates a line of infinite length which you can later trim in the design process.

Use Construction geometry to assist in creating your sketch entities and geometry that are ultimately incorporated into the part. Construction geometry is ignored when the sketch is used to create a feature. Construction geometry uses the same line style as a centerline.

∖Insert Line	?
≪ ×	
Message	⇒
Orientation	~
As sketched	
○ Horizontal	
🔘 Vertical	
🔿 Angle	
Options	~
For construction	
🗌 Infinite length	

Text Sketch Entity

The Text Sketch \triangle entity tool provides the ability to sketch text on the face of a part and extrude or cut the text. Text can be inserted on any set of continuous curves or edges. This includes circles or profiles which consist of lines, arcs or splines.

Convert the sketch entities to construction geometry if the curve is a sketch entity, or a set of sketch entities, and your sketch text is in the same sketch as the curve.

The Text sketch entity uses the Sketch Text PropertyManager. The Sketch Text PropertyManager provides the following selections:

- *Curves*. The Curves box provides the following options:
 - Select Edges, Curves Segment. Displays the selected curves, edges, sketches, or sketch segments.
- *Text*. The Text box provides the following options:
 - **Text**. Displays the entered text along the selected entity in the Graphics window. If you do not select an entity, the text is displayed horizontally starting at the origin.
 - **Bold Style**. Bold the selected text.
 - Italic Style. Italic the selected text.
 - Rotate Style. Rotate the selected text.
 - Left Alignment. Justify text to the left. Only available for text along an edge, curve or sketch segment.
 - **Center Alignment**. Justify text to the center. Only available for text along an edge, curve or sketch segment.
 - **Right Alignment**. Justify text to the right. Only available for text along an edge, curve or sketch segment.
 - **Full Justify Alignment**. Justify text. Only available for text along an edge, curve or sketch segment.
 - Flip. Provides the ability to flip the text.

As	ketch Text ?
I :	×
Cur	ves 🌣
15	
Тех	t ×
<	> B / ®
	E Ξ ∃ ■
	A V AB EA
₽	100%
Δ₽	100%
	Use document font
	Font

- Flip Vertical direction and back. The Flip Vertical option is only available for text along an edge, curve or sketch segment.
- Flip Horizontal direction and back. The Flip Horizontal option is only available for text along an edge, curve or sketch segment.
- Width Factor. Provides the ability to widen each of your characters evenly by a specified percentage. Not available when you select the Use document's font option.
- **Spacing**. Provides the ability to modify the spacing between each character by a specified percentage. Not available when your text is fully justified or when you select the Use document's font option.
- Use document's font. Selected by default. Provides the ability to clear the initial font and to choose another font by using the Font option button.
- **Font**. Provides the ability to choose a font size and style from the Font dialog box.

Tutorial: Text 4-1

Apply text on a curved part. Use the Sketch Text PropertyManager.


- 1. Open **Text 4-1** from the SolidWorks 2012 folder. The Lens Cap is displayed in the Graphics window.
- 2. Click **Front Plane** from the FeatureManager.

Apply the Text Sketch tool.

- 3. Click the **Text** ▲ Sketch tool. The Sketch Text PropertyManager is displayed.
- 4. Click **inside** the Text box.
- 5. Type **SolidWorks**. SolidWorks is displayed horizontally in the Graphics window starting at the origin, because you do not select an entity.
- 6. Click the **front edge** of Base Extrude. Edge<1> is displayed in the Curves option box. The SolidWorks text is displayed on the selected edge.
- 7. Uncheck the Use document font box.
- 8. Enter **250%** in the Spacing box.
- 9. Click the **Font** Button. The Choose Font dialog box is displayed.
- 10. Select Arial Black, Regular, Point 14.





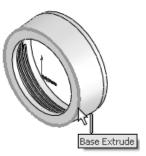

- 11. Click **OK** from the Choose Font dialog box.
- 12. Click **OK** I from the Sketch Text PropertyManager. Sketch7 is created and is displayed in the FeatureManager. Zoom in on the created text.

13. Close the model.

If the curve is a sketch entity, or a set of sketch entities, and the sketch text is in the same sketch as the curve, convert the sketch entities to construction geometry.

Plane Sketch Entity

The Plane Sketch entity tool provides the ability for the user to add Reference entities to a 3D sketch. Why? To facilitate sketching and to add relations between sketch entities. Once you add the plane, you need to activate it to display its properties and to create a sketch. The Plane sketch entity uses the Sketch Plane PropertyManager.

The Sketch Plane PropertyManager provides the following selections:

- *First Reference*. Provides the ability to select Reference entities from the FeatureManager or from the Graphics window. Select the constraining relations to each reference. The available relations selection is based on the selected geometry.
 - **Reference Entities**. Displays the selected sketch entity or plane as the reference to position the 3D Sketch plane.
 - Select a relation. Select a relation based on the selected geometry.

The available relations are displayed in the Sketch Plane PropertyManager under the First, Second and Third Reference. The relations are based on existing geometry.

Sketch Plane	?
✓ X →	
Message	~
Select references (planes, sketch entities, edges, face or vertices) to define the sketch plane. Then select the constraining relations t each reference.	
First Reference	~
Ŷ	
Second Reference	~
Third Reference	~

- *Second Reference*. Provides the ability to select Reference entities from the FeatureManager or from the Graphics window. Select the constraining relations to each reference. The available relations selection is based on the selected geometry.
 - **Reference Entities**. Displays the selected sketch entity or plane as the reference to position the 3D Sketch plane.
 - Select a relation. Selects a relation based on the selected geometry.
- *Third Reference*. Provides the ability to select Reference entities from the FeatureManager or from the Graphics window. Select the constraining relations to each reference. The available relations selection is based on the selected geometry.
 - **Reference Entities**. Displays the selected sketch entity or plane as the reference to position the 3D Sketch plane.
 - Select a relation. Selects a relation based on the selected geometry.


With existing geometry, add a plane by referencing the entities that are present. Use any number of references required to achieve the desired results.


Tutorial: Sketch Plane 4-1

Add a 3D Sketch plane. Add a plane using references. Select two corner points of a 3D sketch. The corner points of the rectangle reference the position of the 3D sketch plane.

- 1. Open Sketch Plane 4-1 from the SolidWorks 2012 folder.
- 2. Edit 3DSketch1 from the FeatureManager.
- 3. Click **Tools** ➤ **Sketch Entities** ➤ **Plane**. The Sketch Plane PropertyManager is displayed.

Rename a feature or sketch for clarity. Slowly click the feature or sketch name twice and enter the new name when the old one is highlighted.

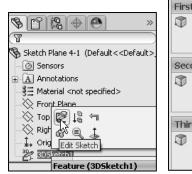

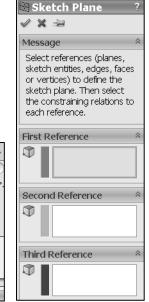

- 4. Click the **top front corner point** of the rectangle as illustrated. Point3 is displayed in the First Reference box.
- 5. Click the **bottom back corner point** of the rectangle. Point4 is displayed in the Second Reference box.
- Click OK ✓ from the Sketch Plane PropertyManager.
- Rebuild the model. Plane2@3DSketch1 is created and is displayed in the Graphics window.
- 8. Close the model.

Route Line Sketch Entity


The Route Line Sketch entity Let tool provides the ability to insert a Route line between faces, circular edges, straight edges, or planar faces. The Route Line Sketch entity is active when you:


- Create an Explode Line Sketch.
- Edit an Explode Line Sketch.
- Select the Route Line tool in a 3D sketch.

The Exploded Line Sketch tool $\overset{\text{def}}{=}$ is a 3D sketch added to an Exploded View in an assembly. The explode lines indicate the relationship between components in the assembly.

The Route Line Sketch entity ^L uses the Route Line PropertyManager. The Route Line PropertyManager provides the following selections:

- *Items To Connect*. The Items To Connect box provides the following option:
 - **Reference entities**. Displays the selected circular edges, faces, straight edges or planar faces to connect with your created route line.
- *Options*. The Options box provides the following selections:
 - **Reverse**. Reverses the direction of your route line. A preview arrow is displayed in the direction of the route line.
 - Alternate Path. Displays an alternate possible path for the route line.
 - Along XYZ. Creates a path parallel to the X, Y and Z axis directions.

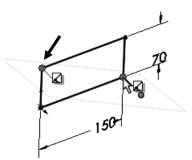



9 1° 12 4	
₽ Route Line	
I 🗙 Q	
Items To Connect	11
	1
	l
	I
Options	11
Reverse	1
Alternate Path	
Along XYZ	


 $\stackrel{}{\longrightarrow}$ Clear the Along XYZ option to use the shortest route.


Tutorial: Route Line 4-1


Create an Explode Line sketch using the Route Line Sketch entity.


- 1. Open the **Route Line 4-1** assembly from the SolidWorks 2012 folder. The assembly is displayed in an Exploded view.
- 2. Click the **Explode Line Sketch** tool from the Assembly toolbar. The Route Line PropertyManager is displayed.
- Click the inside face of Cut-Extrude1 of Shaft-Collar<1>. The direction arrow points towards the back. If required, check the Reverse direction box. Face<1>
 @Shaft-Collar-1 is displayed in the Items To Connect box.
- Click the inside face of the top hole of Cut-Extrude1 of the Flatbar<1> component. Face<2>@Flatbar-1 is displayed in the Items To Connect box. The arrow points towards the right.
- 5. Click the **inside face** of Cut-Extrude5 of RodClevis<1>. Face<3>@AirCylinder-1is displayed in the Items To Connect box. The Arrow points towards the back.
- Click the inside face of the second Cut-Extrude5 feature of RodClevis<1>. Face<4>@ AirCylinder-1 is displayed in the Items To Connect box.
- Click the inside face of the top hole of Cut-Extrude1 of the Flatbar<2> component. Face<2>@Flatbar-2 is displayed in the Items To Connect box. The arrow points towards the back.



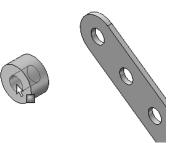

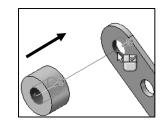

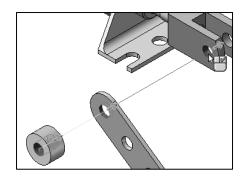

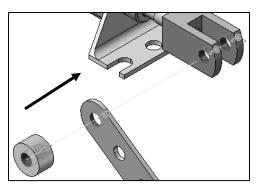


- 8. Click the **inside face** of Cut-Extrude1 of SHAFT-COLLAR<2>. The direction arrow points towards the back. Face<1> @Shaft-Collar<2> is displayed in the Items To Connect box.
- Click OK ✓ from the Route Line PropertyManager. View the created Route Line.
- 10. Click OK ✓ from the PropertyManager to return to the FeatureManager.
- 11. Press the **f** key to fit the model to the Graphics window.
- 12. Click **Isometric view**. View the results.
- 13. Close the model.

SolidWorks provides the ability to create a Bill of Materials (BOM) in an assembly. The BOM is displayed in the Tables folder of the FeatureManager. You no longer need to create a drawing to see a BOM. See the Assembly section for additional information.

Tutorial: Route Line 4-2

Edit an Explode Line Sketch.


- 1. Open **Route Line 4-2** from the SolidWorks 2012 folder. The Route Line 4-2 Assembly FeatureManager is displayed.
- 2. Click the **ConfigurationManager** tab.
- 3. Expand Default.
- 4. Right-click **ExplView1** from the ConfigurationManager.
- 5. Click Explode.
- 6. Expand ExplView1.

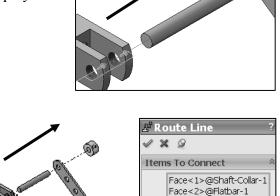

Face<3>@AirCylinder-1/F

Face<4>@AirCylinder-1/F

Face<2>@Flatbar-2 Face<1>@Shaft-Collar-2

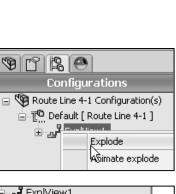

ExplVie ت ے۔	w1		
		1.4	
Exp	Feat	ure (3DExploa	le1)
Exp	e	Rdit Sketch	
년 Exp 년 Exp	660	Hide	

Edit the Explode Line Sketch.

- 7. Right-click **3DExplode1** from the ConfigurationManager.
- 8. Click Edit Sketch.
- 9. Display a **Top** view.
- 10. Click **Centerline** ^I from the Sketch toolbar. The Insert Line PropertyManager is displayed.
- 11. Click the **endpoints** of the Route Line as illustrated.


Create a new path.


- 12. Click a **point** to the right of the Route Line endpoint and over the top of the axle.
- 13. Click a **point** below the axle as illustrated.
- 14. Click a **point** to the left of the axle over the Flatbar.
- 15. Click a **point** below the Flatbar and a **point** above the SHAFT-COLLAR.
- 16. Click a **point** below the Shaft-Collar.

Deselect the active Sketch tool.

- 17. Right-click Select in the Graphics window.
- 18. **Rebuild** the model. View the results.

19. Close the model.

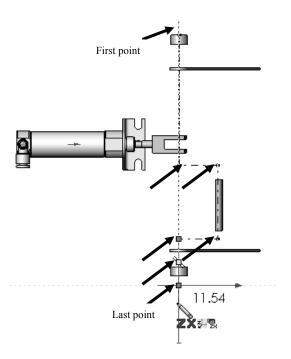

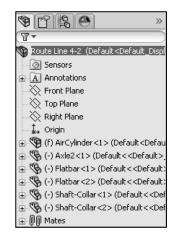

Belt/Chain Sketch Entity


This option provides the ability to create layout sketches for pulleys or sprocket mechanisms. The Belt/Chain feature simulates a cablepulley mechanism. The Belt/Chain entity uses the Belt/Chain PropertyManager.


In the past, it was difficult using SolidWorks to effectively model components such as cables, chains, and timing belts due to their flexible motion. The shapes of these items could change over time. This made it difficult to examine the way a belt would interact with two or more pulleys, or a cable system shifts a lever, or crank with a solid assembly model.

The Belt/Chain PropertyManager provides the following selections:

- *Belt Members*. The Belt Members box provides the following options:
 - **Pulley Components**. Displays the selected arcs or circles for the pulley components.
 - **Up arrow**. Moves the selected pulley component upwards in the displayed order.
 - **Down arrow**. Moves the selected pulley component downward in the displayed order.
 - Flip belt side. Changes the side on which the belt is located in the pulley system.
- *Properties*. The Properties box provides the ability to define the following belt conditions. They are:
 - **Driving**. Cleared by default. Provides the ability to calculate the length of your belt. When checked, enter a value if you do not want the system to calculate your belt length. Based on the constraints, one or more of the components may move to adjust for the length of the belt.
 - Use belt thickness. Specifies the thickness value of the belt.



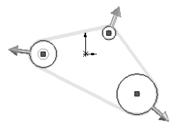

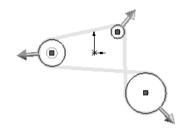

• Engage belt. Selected by default. Disengages the belt mechanism.

 $\stackrel{\text{lin}}{\longrightarrow}$ Only circle entities in a block can be selected for a belt member.

Before you use the Belt/Chain sketch entity in an example, review Blocks in general and the Block toolbar.

Blocks

Blocks are a grouping of single or multiple sketch entities. In SolidWorks, the origin of the block is aligned to the orientation of the sketch entity. Previously, blocks inherited their origin location from the Parent sketch. Additional enhancements to Blocks are:

- Modeling pulleys and chain sprockets.
- Modeling cam mechanisms.

Blocks are used in the Belt/Chain sketch entity. You can create blocks from a single or multiple sketch entities.

Why should you use Blocks? Blocks enable you to:

- Create layout sketches using the minimum of dimensions and sketch relations.
- Freeze a subset of sketch entities in a sketch to control as a single entity.
- Manage complicated sketches.
- Edit all instances of a block simultaneously.

Use blocks in drawings to conserve drawing items such as standard label positions, notes, etc. See SolidWorks Help for additional information.

Blocks toolbar



The Blocks toolbar controls blocks in sketching. The Blocks toolbar provides the following tools:

- *Make Block*. The Make Block it tool provides the ability to create a new block.
- *Edit Block*. The Edit Block ^(M) tool provides the ability to add or remove sketch entities and to modify dimensions and relations in your sketch.


- *Insert Block*. The Insert Block ^{III} tool provides the ability to add a new block to your sketch or drawing. This option provides the ability to either create multiple instances of existing blocks or to browse for existing blocks.
- *Add/Remove*. The Add/Remove is tool provides the ability to add or remove sketch entities to or from your block.
- *Rebuild*. The Rebuild at tool provides the ability to update the parent sketches affected by your block changes.
- *Saves Block*. The Saves Block to a file. Adds an .sldblk extension.
- *Explode Block*. The Explode Block it tool provides the ability to explode the selected block.
- *Belt/Chain*. The Belt/Chain ⁶ tool provides the ability to insert a belt.


 $\frac{1}{\sqrt{2}}$ Exploding a single instance of the block will only affect that instance of the block.

Tutorial: Block 4-1

Create a Block using the Blocks toolbar.

- 1. Create a New D part in SolidWorks. Use the default ANSI Part template.
- 2. Click **Top Plane** from the FeatureManager. This is your Sketch plane.
- 3. Sketch a **closed sketch** using sketch entities as illustrated. The sketch consists of five lines.
- Click Make Block from the Block toolbar or click Tools > Blocks > Make. The Make Block Property Manager is displayed.
- 5. Box-select the **sketch entities** from the Graphics window. The selected sketch entities are is displayed in the Block Entities box.
- Click OK ✓ from the Make Block PropertyManager. Note the location of the insertion point. Block1-1 is displayed in the FeatureManager.
- 7. **Rebuild** the model.
- 8. Close the model.

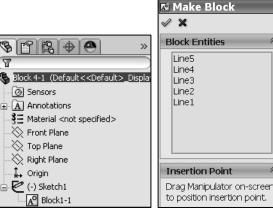

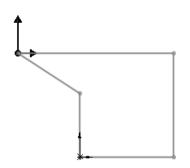


Create a block for a single or combination of multiple Sketch entities. Saving each block individually provides you with extensive design flexibility.

Tutorial: Belt-chain 4-1


Use the Belt/Chain Sketch entity function. Create a pulley sketch.


- Open Belt-chain 4-1 from the SolidWorks 2012 folder. View the three created blocks in the Belt-chain FeatureManager.
- 2. Edit Sketch1 from the FeatureManager.
- Click Tools ➤ Sketch Entities ➤ Belt/Chain. The Belt/Chain PropertyManager is displayed.
- 4. Select the **three circles** from left to right. The select circles are displayed in the Belt Members dialog box.
- 5. Check the **Driving** box.
- 6. Enter **460**mm for Belt Length.
- 7. Check the **Use belt thickness** box.
- 8. Enter **20**mm for belt thickness.
- Click OK ✓ from the Belt/Chain PropertyManager.
- 10. **Expand** Sketch1. Belt1 is created and is displayed in the FeatureManager. The calculated belt length was larger than the belt length entered in the PropertyManager. The system moved the entities to correct for the entered 460mm belt length.
- 11. **Rebuild** the model. View the results. Use SolidWorks Help for additional information.
- 12. Close the model.



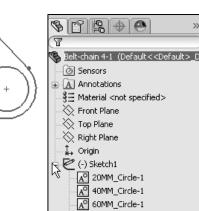

🗞 Belt1 (Length=460mm)

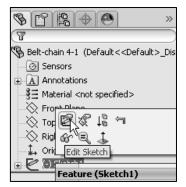

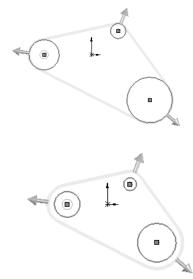

Reuse an existing 2D Sketch

You can use the same sketch to create different features. To create different features with the same sketch:

- Create a sketch.
- Create a feature from the sketch.
- In the FeatureManager design tree, select the same sketch used to create the first feature.
- Create a second feature from the sketch.


In the FeatureManager design tree, a sketch that is shared by multiple features is identified by the Shared $\overset{\frown}{\bowtie}$ icon or by Shared $\overset{\frown}{\bowtie}$ icon for a selected contour.

Add additional sketches as required to create the features. For example; if one feature is an extrude and the other feature is a revolve, use the same sketch for both features, but add a centerline to create the revolve.

Tutorial: Shared Sketch 4-1


Create an Extrude Thin1 feature with a shared sketch.

- 1. Open **Shared Sketch 4-1** from the SolidWorks 2012 folder.
- 2. Click **Sketch1** from the FeatureManager. View the sketch in the Graphics window.
- 3. Click **Extruded Boss/Base** from the Feature toolbar.
- 4. Select **Mid Plane** for End Condition in Direction 1.
- 5. Enter 16.00mm for Depth.
- 6. Check the **Thin Feature** dialog box.
- 7. Enter **4.50mm** for Thinkness.
- 8. Click the **Reverse Direction** button.
- 9. Click inside the Selected Contours dialog box.
- 10. Click the **circumference of the large circle** in the Graphics window.
- 11. Click **OK** 🖋 from the PropertyManager.

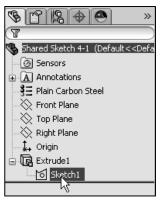



- 12. **Expand** Extrude-Thin1 in the FeatureManager. View the Shared sketch.
- 13. Close the model.

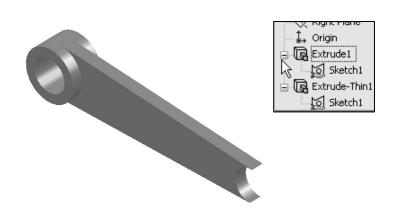

Summary

In this chapter, you learned about the available tools to incorporate Design Intent into a sketch, feature, part, assembly and drawing.

Sketching is the foundation of a model. You addressed 2D and 3D Sketching and how to recognize the various Sketch states: *Fully Defined, Over Defined, Under Defined, No Solution Found and Invalid Solution Found* along with identifying the correct Reference plane.

You reviewed the following Sketch Entities; Line, Corner Rectangle, Center Rectangle, 3 Point Corner Rectangle, 3 Point Center Rectangle, Parallelogram, Straight Slot, Centerpoint Straight Slot, 3 Point Arc Slot, Centerpoint Arc Slot, Polygon, Circle, Perimeter Circle, Centerpoint Arc, Tangent Arc, 3 Point Arc, Ellipse, Partial Ellipse, Parabola, Spline, Spline on Surface, Equation Driven Curve, Point, Centerline, Text, Plane, Route line and Belt/Chain.

You utilized and addressed the following toolbars; Block toolbar and Spline toolbar and applied the Instant3D tool.

It's considered best practice to fully define all sketches in the model. However; there are times when this is not practical. Generally when using the spline tool to create a freeform shape.

Rename a feature or sketch for clarity. Slowly click the feature or sketch name twice and enter the new name when the old one is highlighted.

In Chapter 5, explore and address the Sketch tools, 2D to 2D toolbar, Geometric Relations, Dimensions/Relations toolbar, the DimXpertManager and learn about TolAnalyst.