

Dean Muccio

# AutoCAD® 2025

for the Interior Designer

AutoCAD® for Mac and PC



Visit the following websites to learn more about this book:




[amazon.com](https://www.amazon.com)

[Google books](https://books.google.com)

[BARNES & NOBLE](https://www.barnesandnoble.com)

## Chapter 4

# Hotel Suite Project – Tutorial 1

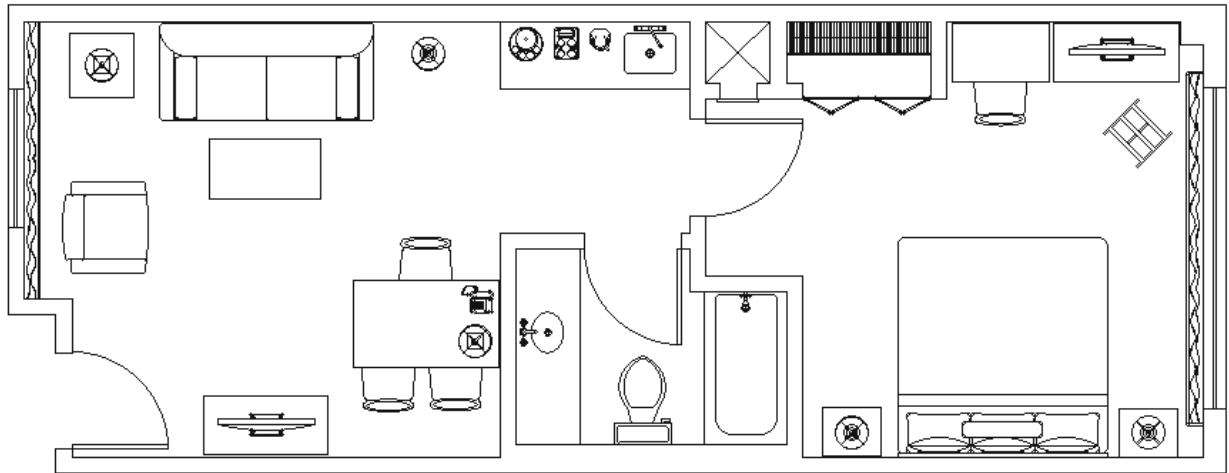


## Learning Objectives:

- To create a drawing of a real-world application using AutoCAD
  - Create the plan view of the outside walls of the hotel suite
- To utilize and reinforce the use of the AutoCAD commands learned in the previous chapters

## Hotel Suite Project

For our project, we will draw a hotel suite that will include a bedroom, bathroom, and a living room area. This project will utilize the majority of commands that will be covered throughout this book. The project will be broken down into multiple tutorials and each tutorial emphasizes commands covered in the preceding chapter.

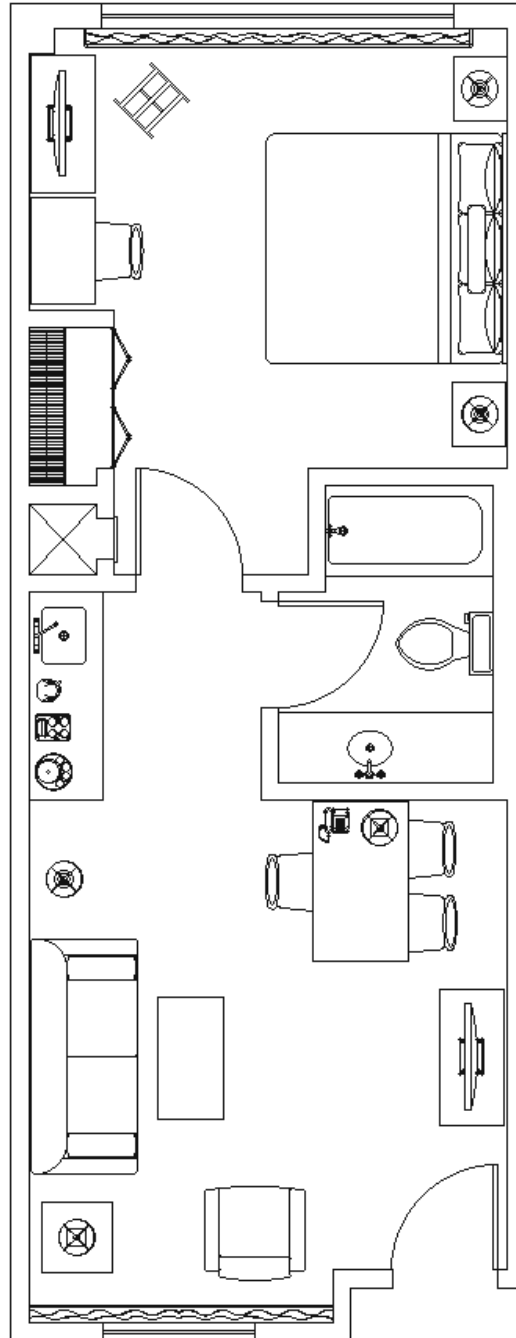

*The Hotel Suite*

This tutorial covers the creation of the floor plan view of the hotel suite outside walls.

Commands & Techniques:

- Starting a new drawing
- Units
- Zoom - All
- Rectangle
- Offset
- Explode
- Construction Line – Offset
- Trim
- Extend
- Repeating commands by using the ↵ Enter key
- Erase
- Save

To help guide you through these tutorials, the following method is used to represent mouse and keyboard operations:

**Font** represents a keyboard operation.


***Font*** in parentheses represents a mouse operation.

*Font* represents AutoCAD generated command line text.

Because the majority of the steps are repetitive, after the first several steps, the tutorial will not repeat every detail and prompt. When a new command is used, then the details will be given.



If you have already set up your mouse for customized right-click, everywhere the tutorial instructs you to press the ↵ Enter key, you can substitute that instruction with “right mouse-click”.

For command options, where the text instructs you to type a letter or letters to use the option, you can use the cursor to select the option instead.

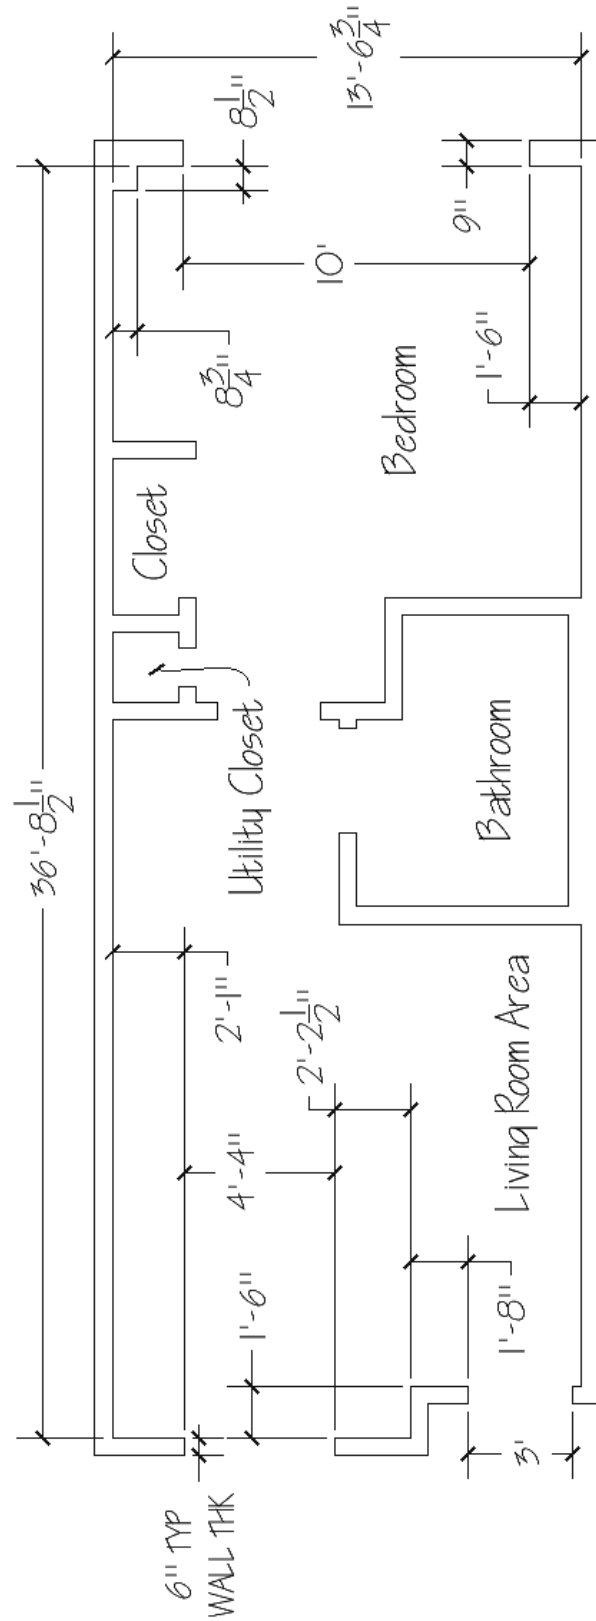

Outside Wall Dimensions

**Create the basic shell of the suite**

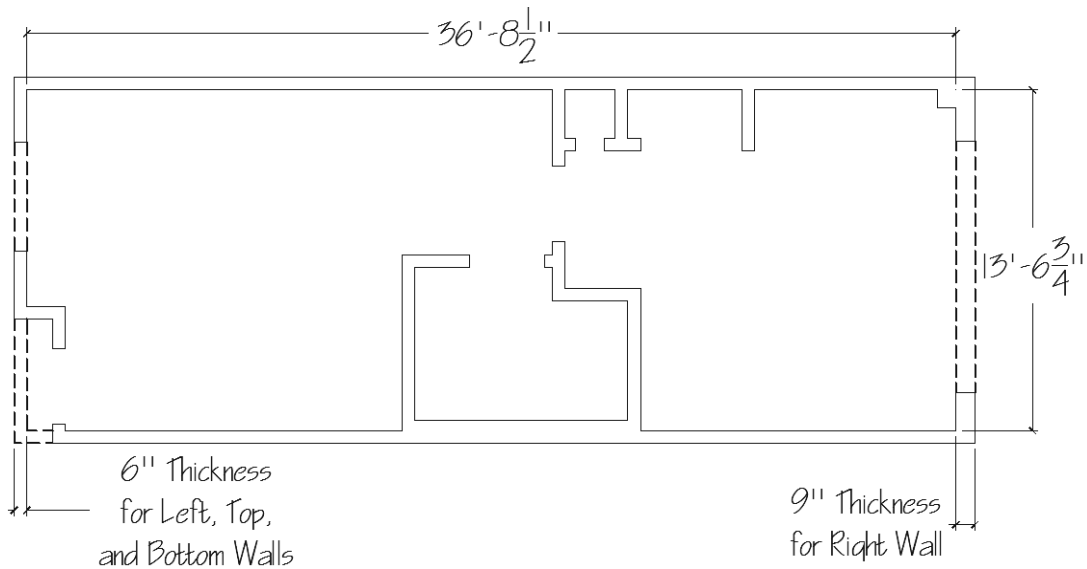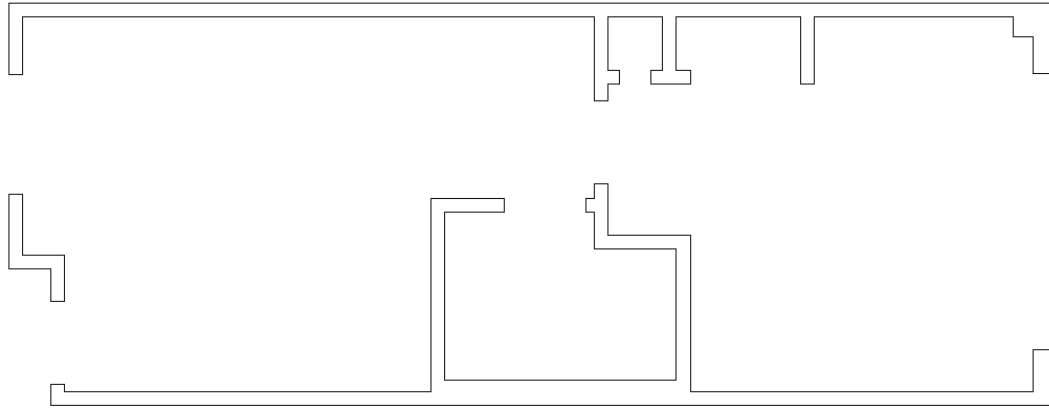

Basic Shell Dimensions

The dashed lines are shown to illustrate that we can start this drawing by using rectangles.

- Before beginning, start up a new drawing, use the Application Menu Browser to select Drawing Utilities, and change the Units to **Architectural**.
  - For Mac users, use the Format pull-down menu to change the Units to **Architectural**.

**1. Change the units from decimal to feet-inches:**

*(Pick the Application Menu Browser, Pick Drawing Utilities, and Pick Units)*

*Mac: (Select pull-down menu Format, Units)*

*(Change to Architectural Units in the Length Type: (upper left portion) pull-down arrow in the dialog box)*

*(Pick OK to exit the dialog box)*

**2. Create the inside walls using Rectangle:**

*(Pick Rectangle icon)*

**RECTANG** Specify first corner point or [Chamfer/Elevation/Fillet/Thickness/Width]: *(Pick a point on the screen, below and to the left of the center)*

Use the Dimensions option to define the 36'8-1/2" width and the 13'6-3/4" height. AutoCAD uses confusing definitions for length and width: "length" = Horizontal direction, "width" = Vertical direction.

Note: when specifying Rectangle dimensions:

- Length is the horizontal direction
- Width is the vertical direction

Specify other corner point or [Area/Dimensions/Rotation]: **d**↵

**(or pick Dimensions with your cursor)**

Specify length for rectangles <0'-10">: **36'8-1/2** ↵

Specify width for rectangles <0'-10">: **13'6-3/4** ↵

Specify other corner point or [Area/Dimensions/Rotation]: *(Pick to the upper right of the 4 choices given)*



As you move your cursor around the first corner point, four locations are available to choose. Pick the upper right location for the rectangle.

(AutoCAD will automatically end the Rectangle command)



When done, you will be left with only one rectangle; however, it will not be seen in its entirety. That is because it is too big for the size of the view.



### 3. Change the screen zoom so that the entire drawing space is on the screen:

> **\_z** ↵

**ZOOM**

*Specify corner of window, enter a scale factor (nX or nXP), or*

**ZOOM** [All/Center/Dynamic/Extents/Previous/Scale/Window/Object] <real time>: **a** ↵

*Regenerating model.*

(AutoCAD will automatically end the Zoom command)

When done, you will now be able to see the entire rectangle on your screen.



### 4. Use the Mouse Wheel to zoom out even further.

Your rectangle will appear even smaller. This will allow us to view more drawing space for when we offset the walls toward the outside.

### 5. Use the offset command to draw the outside walls:

*(Pick Offset icon)*

**OFFSET** Current settings: Erase source=No Layer=Source OFFSETGAPTYPE=0

*Specify offset distance or [Through] <Through>: **6** ↵*

*Specify point on side to offset or [Exit/Multiple/Undo] <Exit>: **(Pick the rectangle)***

*Select object to offset or [Exit/Undo] <Exit>: **(Pick to the outside of the rectangle)***

Since no more offset lines are required, pressing the ↵ Enter key will end the Offset command.

*Select object to offset or <exit>: ↵*

When completed,  
your drawing will  
look like this.



In Step 6b,  
we will erase  
this line

## 6. Draw the 9" outside wall on the right side:

Our plan is to explode the rectangles first so that they become individual lines that we can work with. We will then be able to construct the thicker right wall.

### 6a. Prepare to draw the right outside wall by using the Explode command to convert the rectangles to lines:

*(Pick the Explode icon)*

**EXPLODE** *Select objects: (Pick one of the rectangles) 1 found:  
Select objects: (Pick the other rectangle) 1 found, 2 total*

Since no more objects are to be exploded, pressing the ↵ Enter key will end the Explode command.

*Select objects: ↵*

### 6b. Erase the furthest right vertical line:

*(Pick the Erase icon)*

**ERASE** *Select objects: (Pick the right vertical line) 1 found*

Since no more objects are being erased, pressing the ↵ Enter key will end the Erase command.

*Select objects: ↵*

When completed,  
your drawing will  
look like this.



In step 6c, we will  
create a construction  
line offset from this  
vertical line

**6c. Construct the new right outside wall line for the 9" thick wall:**

*(Pick the Construction Line icon)*

***XLINE** Specify a point or [Hor/Ver/Ang/Bisect/Offset]: 0 ↵*

***(or pick Offset with your cursor)***

*Specify offset distance or [Through] <0'-6">: 9 ↵*

*Select a line object: **(Pick the right vertical line)***

*Specify side to offset: **(Pick anywhere to the right of the line you just selected)***


Since no more offset construction lines are required, pressing the ↵ Enter key will end the Offset command.

*Select a line object: ↵*

When you are done, your drawing should now look like this:



**6d. Extend the horizontal lines to the new wall:**

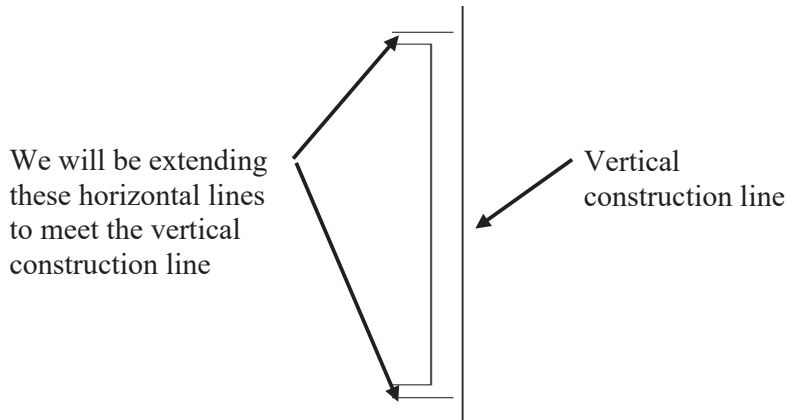

*(Pick the Extend icon)*

*Current settings: Projection=UCS, Edge=None, Mode=Quick*  
*Select object to extend or shift-select to trim or*  
**EXTEND** [Boundary edges/Crossing/mOde/Project/Undo]:


*(Pick the top horizontal line)*  
*(Pick the bottom horizontal line)*

Note: the order in which you pick the lines to extend does not matter.

Since there are no more lines that need to be extended, pressing the ↵ Enter key will end the Extend command.

*Select object to extend or shift-select to trim or*  
*[Boundary edges/Crossing/mOde/Project/Undo]:* ↵

When done, this portion of your drawing should look like this:

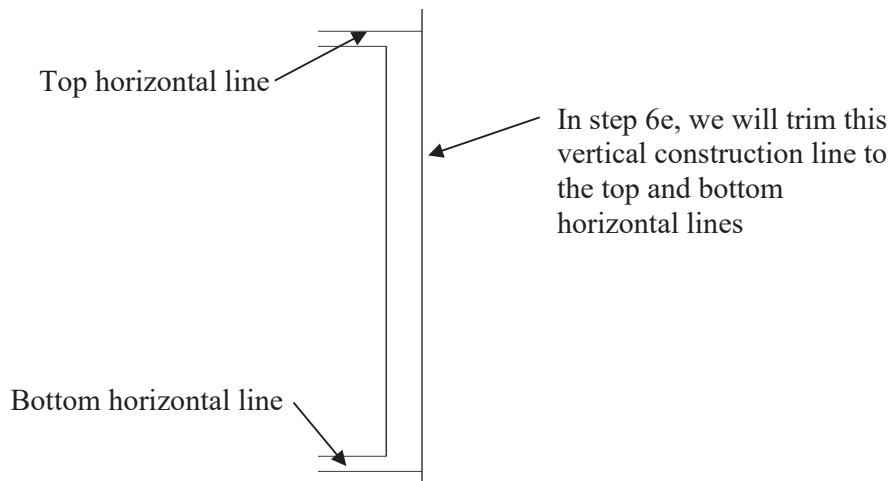

**6e. Trim the vertical construction line of the new wall to the top and bottom walls:**

Since we just used the Extend command, the icon for the Extend command is now shown in the panel, and to access the Trim command, the pull-down arrow must be selected.

***(Pick the Trim icon)***

*Current settings: Projection=UCS, Edge=None, Mode=Quick*

*Select object to trim or shift-select to extend or*

**TRIM** [*cutting edges/Crossing/mOde/Project/eRase/Undo*]:

***(Pick the construction line in a location above the top horizontal line)***

***(Pick the construction line in a location below the bottom horizontal line)***

Note: the order in which you pick the location or lines to trim does not matter.

Since no more trimming is required, pressing the ↵ Enter key will end the Trim command.


*Select object to trim or shift-select to extend or*

*[cutting edges/Crossing/mOde/Project/eRase/Undo]:* ↵

When you are done, your drawing should look like this:




### 7. Create the window opening in the bedroom.

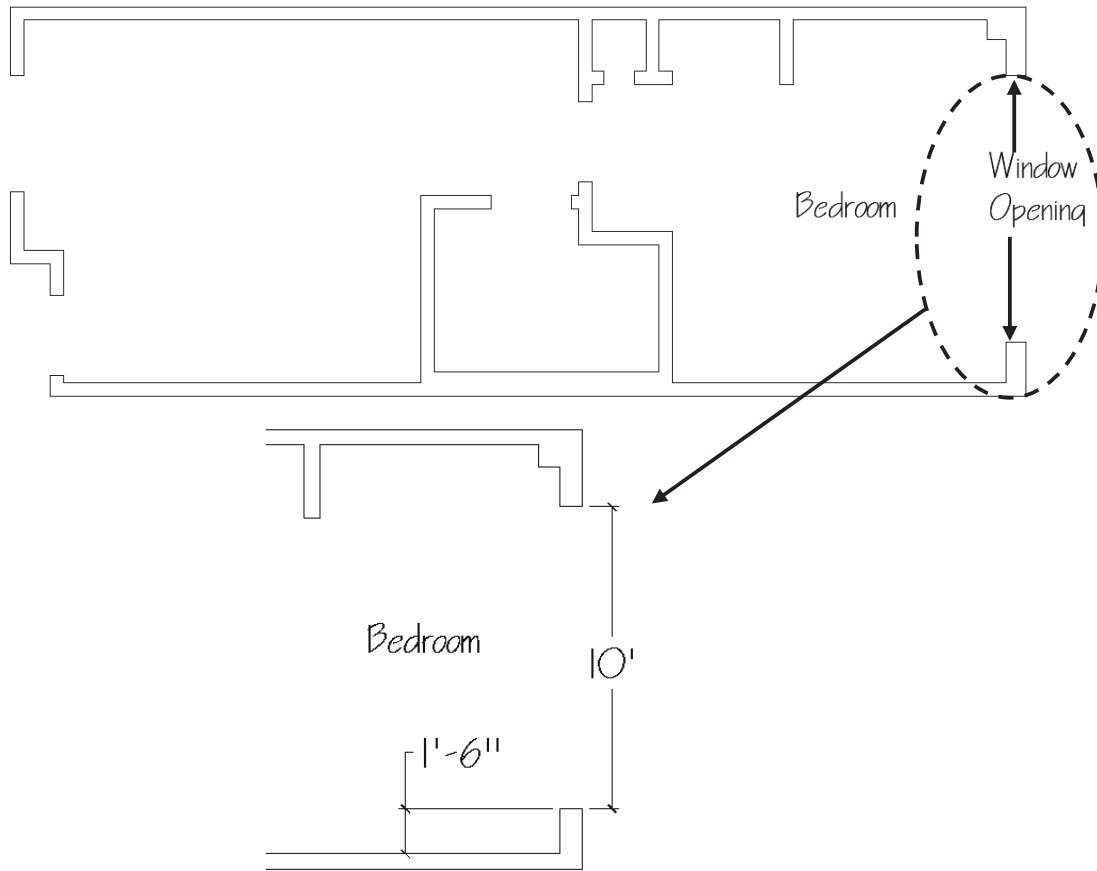

Our plan is to use both the **Construction Line – Offset** command and the **Offset** command to define the window opening. We will then trim the lines (and construction lines) to complete the window opening.

#### 7a. Create a construction line offset from the bottom inside horizontal wall:

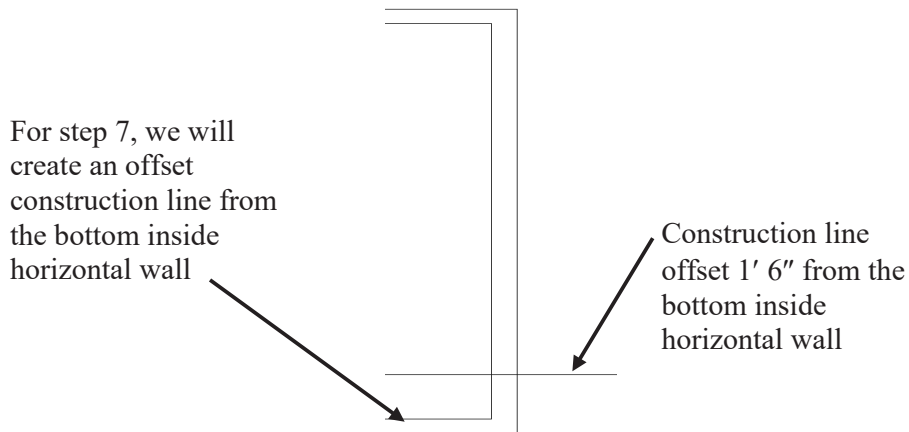

***(Pick the Construction Line icon)***

***XLINE*** Specify a point or [Hor/Ver/Ang/Bisect/Offset]: 0↵

***(or pick Offset with your cursor)***

Specify offset distance or [Through] <Through>: 1'6↵

Select a line object: ***(Pick the bottom inside horizontal line)***

Specify side to offset: ***(Pick a location above the line you just selected)***

Since we are not offsetting any more construction lines at this distance, pressing the ↵ Enter key will end the command.

Select a line object: ↵

Command:

### **7b. Offset the new construction line to define the window size.**

***(Pick the Offset icon)***

Current settings: Erase source=No Layer=Source OFFSETGAPTYPE=0

***OFFSET*** Specify offset distance or [Through/Erase/Layer] <1'-6">: 10'↵

Note that the default value for the offset distance is the last value used for either the Offset command or the Construction Line Offset command

Select object to offset or [Exit/Undo] <Exit>: ***(Pick the horizontal construction line that you just created in step 7a)***


Specify point on side to offset or [Exit/Multiple/Undo] <Exit>: ***(Pick a point anywhere above the horizontal construction line)***

Since there are no more objects that we plan to offset, pressing the ↵ Enter key will end the command.

Select object to offset or [Exit/Undo] <Exit>: ↵

When you are done, your drawing should look like this:

In step 7c, we will trim the lines and construction lines to create the window opening



**7c. Use the Trim command to trim the lines and construction lines:**


*(Pick the Trim icon)*

*Current settings: Projection=UCS, Edge=None, Mode=Quick*

*Select object to trim or shift-select to extend or*

**TRIM** [cuTting edges/Crossing/mOde/Project/eRase/Undo]:

*(Pick the objects to be trimmed in the appropriate locations shown (1-6). The order of selection does not matter)*

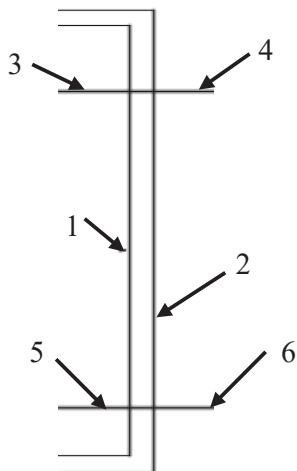

Since no more trimming is required, pressing the ↵ Enter key will end the Trim command.

*Select object to trim or shift-select to extend or  
[Fence/Crossing/Project/Edge/eRase/Undo]: ↵*


The select object prompt will repeat until you press the ↵ Enter key to end the command

When you are done  
trimming, your  
window opening will  
be complete






## 8. Create the upper right corner of the bedroom.

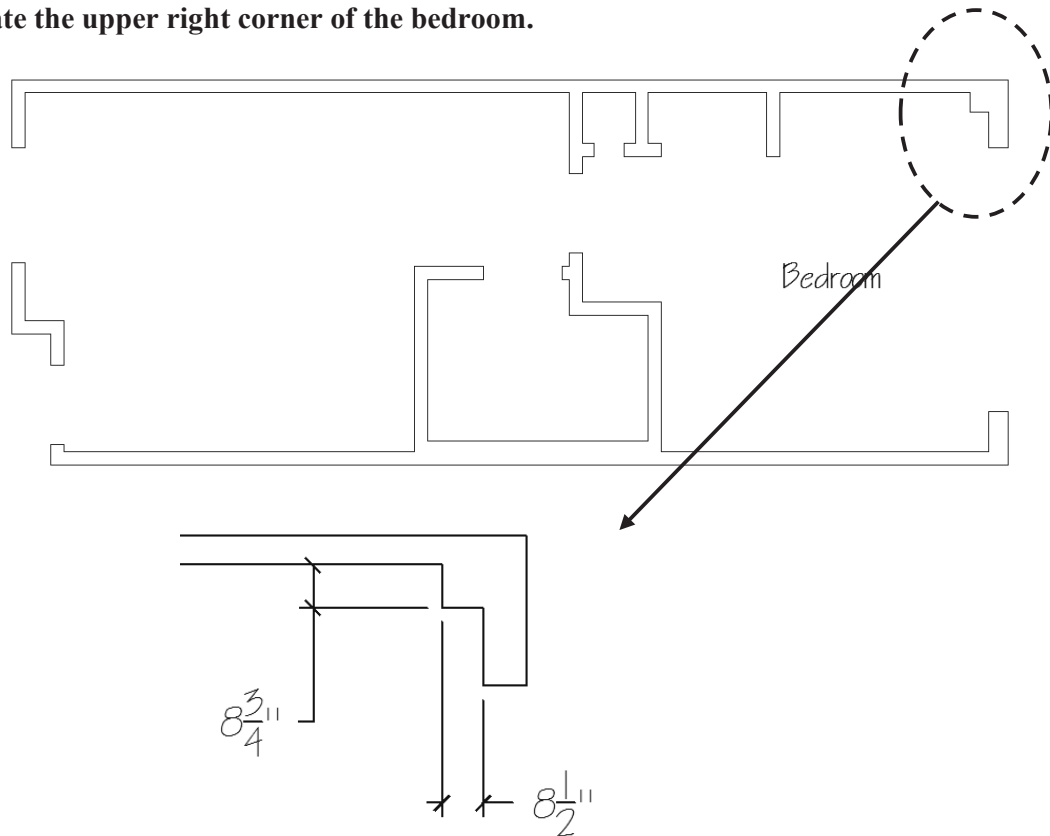


The upper right corner of the bedroom has a bump-out into the room because there is a structural column supporting the outside wall of the building. Our plan is to draw this bump-out by using the Offset and Trim commands.

Before beginning, you may want to use Zoom and Pan (using your mouse-wheel) to get a larger view of the upper right corner.

### 8a. Use the Offset command to offset the right inside wall line.

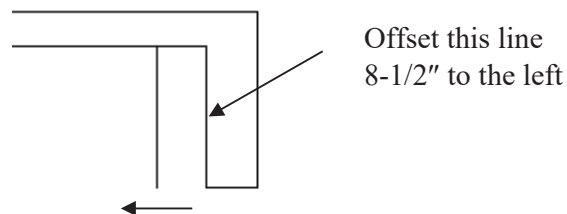


### 8b. Press the ↵ Enter key to repeat the Offset command to offset the top inside wall line.

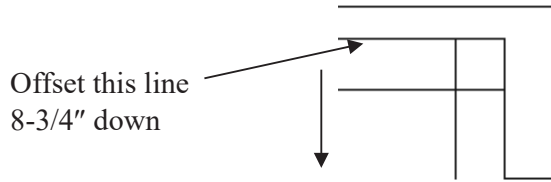


**8c. Use the trim command to complete the corner.**

Select the lines to be trimmed at the locations shown:

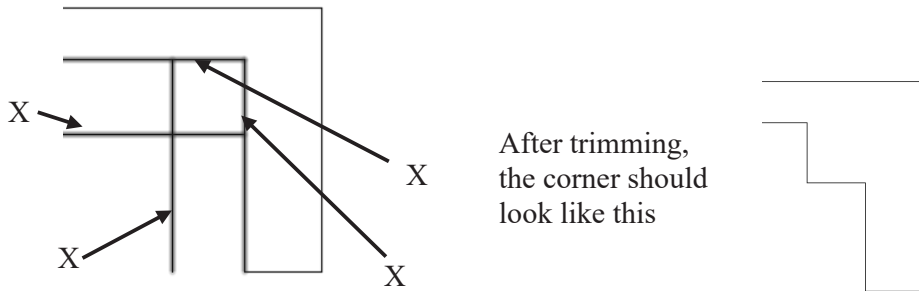


**8d. Use Zoom with the Extents option to view all your objects:**

```
> _z ↵  
ZOOM  
Specify corner of window, enter a scale factor (nX or nXP), or  
ZOOM [All/Center/Dynamic/Extents/Previous/Scale/Window/Object] <real time>: e ↵
```

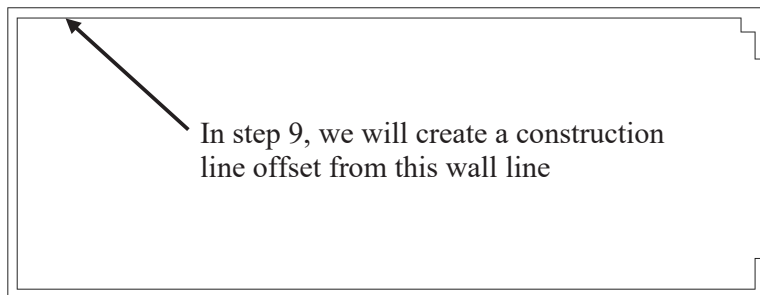

## 9. Create the window opening in the living room area:

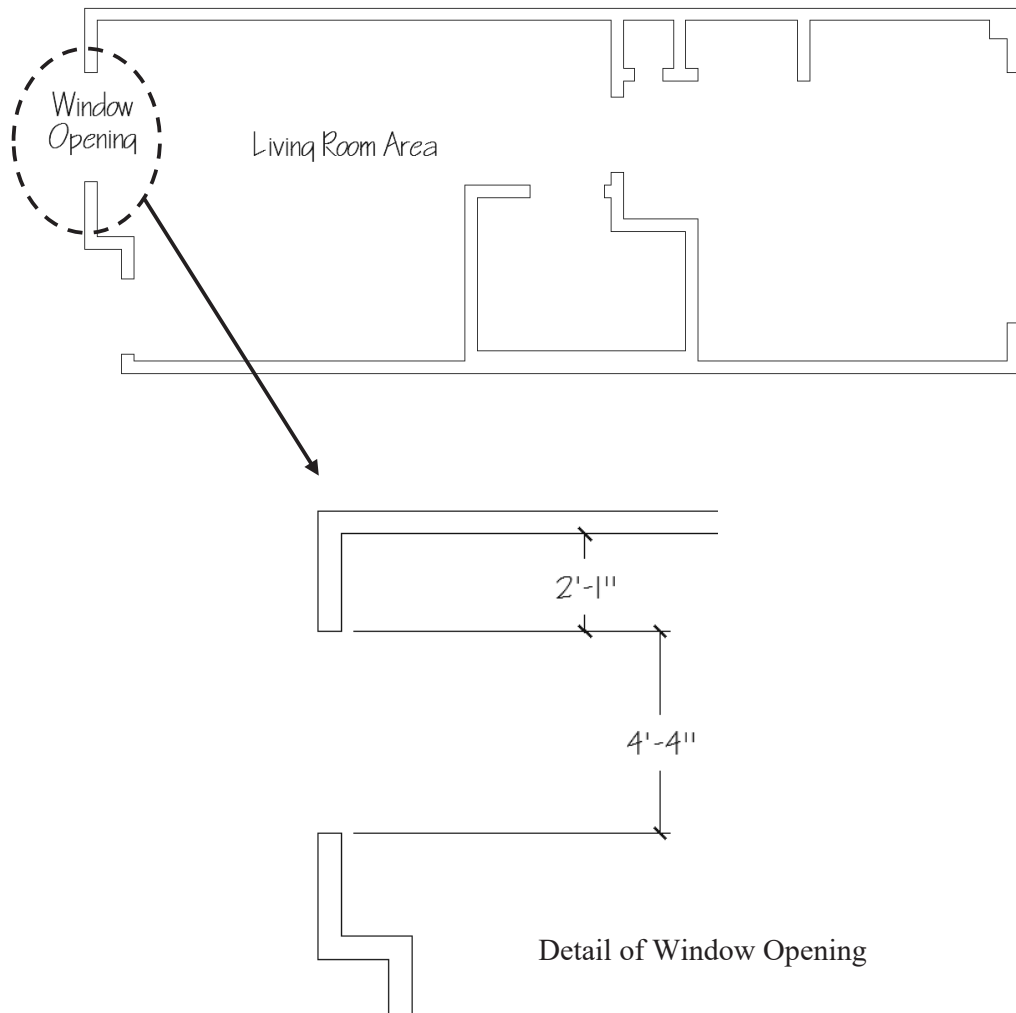

The steps required to create this window opening are very similar to the steps needed to create the bedroom window opening of step 7.

Our plan is to use both the Construction Line – Offset command and the Offset command to define the window opening. We will then trim the lines (and construction lines) to complete the window opening.

Before beginning, use the wheel mouse to zoom and pan to get a closer view of the window opening area that we will be working on.


### 9a. Create a Construction Line Offset 2'1" from the upper inside wall

### 9b. Offset the construction line of step 9a 4'4" down

**9c. Use the Trim command to complete the window opening**




When you are done  
trimming, your window  
will be complete




**10. Create the entryway indentation into the living room area**



Living Room Area

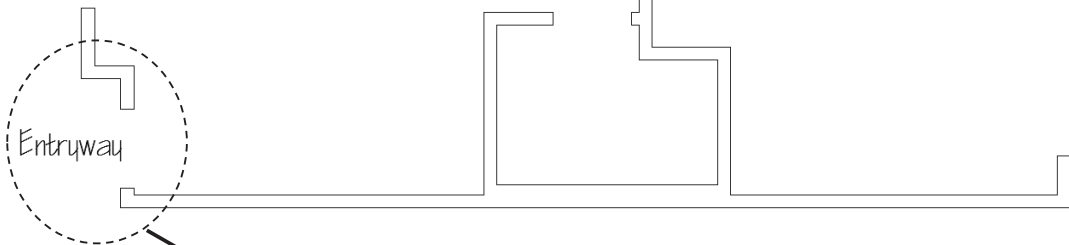


Entryway

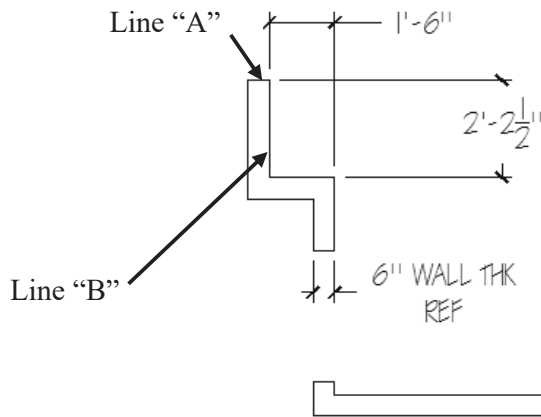


**10a. Create a Construction Line Offset 2'2-1/2" down from line "A"**

**10b. Create a Construction Line Offset 1'6" to the right of line "B"**

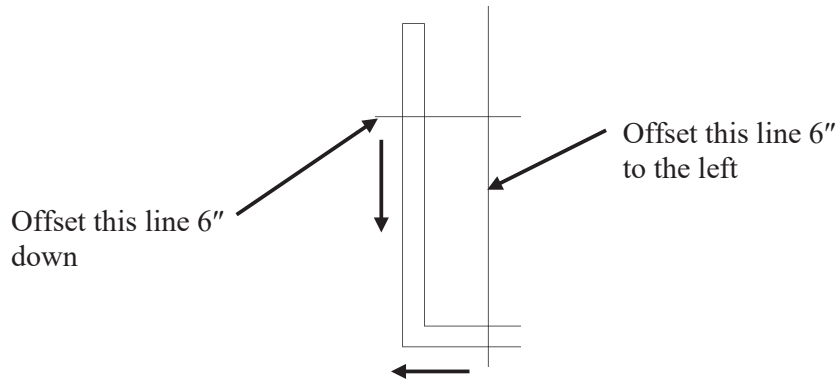

**10c. Use the Offset command to Offset both construction lines 6" each.**


After this step, this part of your drawing should look like this:

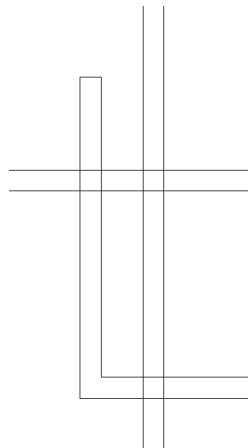

**10d. Use the Trim command to trim construction lines.**


**10e. Use the Erase command (if needed) to eliminate any extra lines.**

Depending on the order and location of the lines you picked during trimming, you may have some extra lines left over. Use the Erase command to eliminate them.

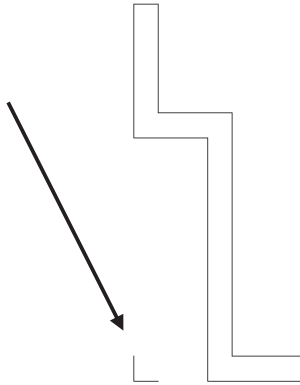

This is how much you have created so far! – Almost done!

**11. Create the doorway opening into the living room area.**

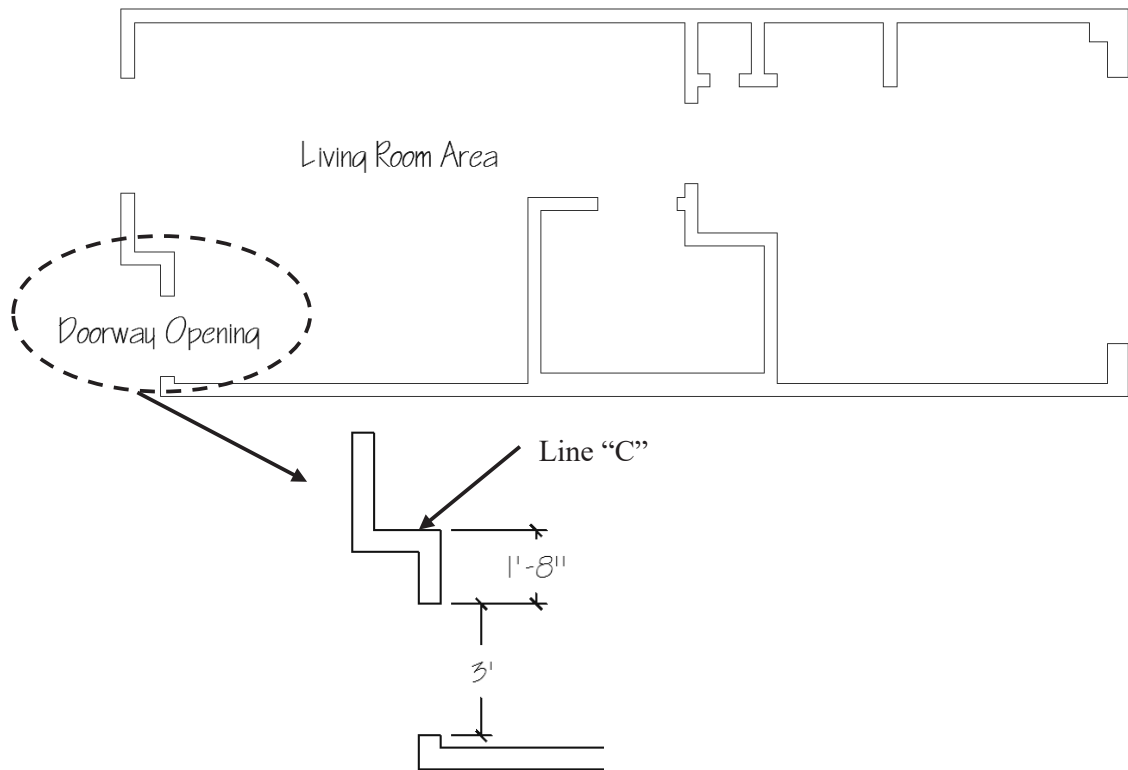


**11a. Offset line "C" 1'8" down.**

**11b. Offset the line created in step 11a 3' down.**

**11c. Use the Trim command to complete the doorway opening.**


Congratulations! You have now completed the basic shell of the hotel suite outside walls. Make sure to save your drawing so all that hard work won't be wasted!




## 12. Save the drawing.

*(Pick the Save icon)*

After picking the Save icon, a dialog box will appear. If this is the first time saving, it will look similar to this:

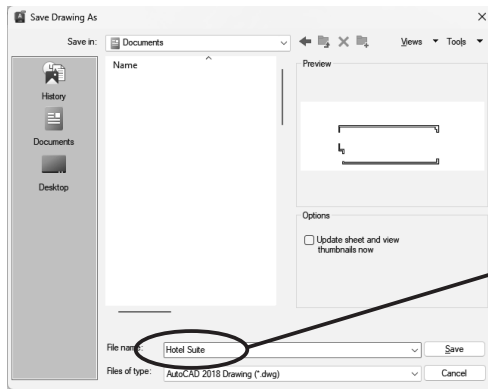


Name your drawing “Hotel Suite” and pick the Save button



**Mac:**

*(Use the pull-down menu File and pick Save)*

After picking Save, a dialog box will appear. If this is the first time saving, it will look similar to this:

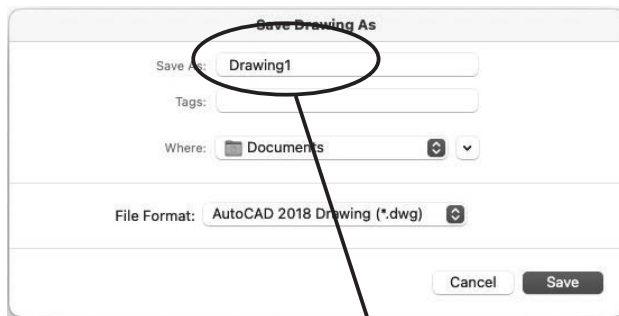

Name your drawing “Hotel Suite” and pick the Save button

