SOLIDWORKS 2025 Quick Start





David C. Planchard, CSWP, SOLIDWORKS Accredited Educator

D&M ENGINEERING Fly Wheel 555-64



Better Textbooks. Lower Prices. www.SDCpublications.com



Visit the following websites to learn more about this book:






Googlebooks



Chapter 1

Overview of SOLIDWORKS® 2025 and the User Interface

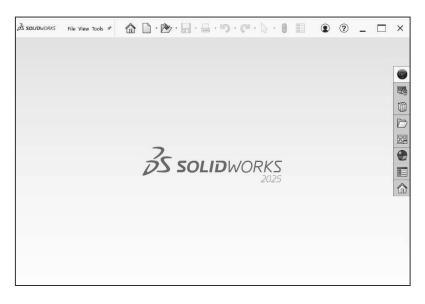

Below are the desired outcomes and usage competencies based on the completion of Chapter 1.

Desired Outcomes:	Usage Competencies:
• A comprehensive understanding of the SOLIDWORKS [®] User Interface (UI) and CommandManager.	 Ability to establish a SOLIDWORKS session. Aptitude to utilize the following items: Menu bar toolbar, Menu bar menu, Drop-down menus, Context toolbars, Consolidated drop- down toolbars, System feedback icons, Task Pane, Confirmation Corner, Heads-up View toolbar and System and Document Properties. Open a new and existing SOLIDWORKS part. Set units, precision and Drafting Standard. Address Y-up orientation. Knowledge to zoom, rotate and maneuver a three-button mouse in the SOLIDWORKS Graphics window.

Notes:

Chapter 1 - Overview of SOLIDWORKS® 2025 and the User Interface

Chapter Objective

Chapter 1 introduces the user to the SOLIDWORKS User Interface, CommandManager, Document and System properties. Review and address: Menu bar toolbar, Menu bar menu, Drop-down menus, Context toolbars, Consolidated drop-down toolbars, System feedback icons, Confirmation Corner and Heads-up View toolbar.

Start a new SOLIDWORKS session. Open an existing part. View the created features and sketches using the Rollback bar. Examine design intent.

On the completion of this chapter, you will be able to:

- Utilize the Welcome SOLIDWORKS dialog box.
- Establish a SOLIDWORKS session.
- Comprehend the SOLIDWORKS User Interface.
- Identify the default Reference Planes in the FeatureManager.
- Address Y-up orientation setting.
- Open a new and existing SOLIDWORKS part.
- Set Document Properties and System Properties.
- Utilize the FeatureManager Rollback bar.
- Locate Help and the SOLIDWORKS Tutorials.
- Zoom, rotate and maneuver a three-button mouse in the SOLIDWORKS Graphics window.

What is SOLIDWORKS®?

- SOLIDWORKS[®] is a design tool by Dassault Systèmes. The **3D**EXPERIENCE[®] Platform is a technology platform that connects SOLIDWORKS to other design, simulation, intelligent information and collaboration Apps through a web browser.
- SOLIDWORKS[®] is a mechanical design automation software package used to build parts, assemblies and drawings that takes advantage of the familiar Microsoft[®] Windows graphical user interface.
- SOLIDWORKS is an easy to learn design and analysis tool (SOLIDWORKS Simulation, SOLIDWORKS Motion, SOLIDWORKS Flow Simulation, Sustainability, etc.), which makes it possible for designers to quickly sketch 2D and 3D concepts, create 3D parts and assemblies and detail 2D drawings.
- Model dimensions in SOLIDWORKS are associative between parts, assemblies and drawings. Reference dimensions are one-way associative from the part to the drawing or from the part to the assembly.
- This book is written for the beginner to intermediate user.

Start a SOLIDWORKS Session

Start a SOLIDWORKS session and familiarize yourself with the SOLIDWORKS User Interface. As you read and perform the tasks in this chapter, you will obtain a sense of how to use the book and the structure. Actual input commands or required actions in the chapter are displayed in bold.

The book does not cover starting a SOLIDWORKS session in detail for the first time. A default SOLIDWORKS installation presents you with several options. For additional information, visit http://www.SOLIDWORKS.com.

Activity: Start a SOLIDWORKS Session.

Start a SOLIDWORKS session.

- 1) Type SOLIDWORKS 2025 in the Search window.
- Click the SOLIDWORKS 2025 application (or if available, double-click the SOLIDWORKS icon on the desktop). The Welcome - SOLIDWORKS dialog box is displayed by default.





The Welcome - SOLIDWORKS box provides a convenient way to open recent documents (Parts, Assemblies and Drawings), view recent folders, access SOLIDWORKS resources, and stay updated on SOLIDWORKS news.

3) View your options. Do not open a document at this time. Note: The Task Pane icon order may be different.

β \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$	Search Commands Q •
	MySession - SOLI ∨ Q S ≡
Welcome - SOLIDWORKS 7 ×	Component Name Status Rev Is
Home Recent Learn Alerts	R
Quick Tours Master the basis with brief, hands-on lessons. Explore Quick Tours Don't show again X	
New	
🚯 Part 👋 Assembly 📰 Drawing Advanced Im Open	
Recent Documents View all	
have plates.DDPT NCDTubes.DDPT ACQuinter.SLDAM SUPPRIME	
¢	
Recent Folders View Jal Resources Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobility Joins Image: New Tobi	
Constant out an uncleaded Control of the model. Chil - Arrow keys part the model. At: - Arrow keys rotate the model parallel to the viewing plane.	Lifecycle Collaboration Simulation View
Do not show on stange	G· B. C. ⊕ E I. H H.
SOLIDWORKS Premium 2025 SP0.0	8

Home Tab

The Home tab lets you open new and existing documents, view recent documents and folders and access SOLIDWORKS resources (*Part, Assembly, Drawing, Advanced mode, Open*).

Recent Tab

The Recent tab lets you view a longer list of recent documents and folders. Sections in the Recent tab include *Documents, Folders and Document Groups*.

The Documents section includes thumbnails of documents that you have opened recently.


Click a thumbnail to open the document, or hover over a thumbnail to see the document location and access additional information about the document. When you hover over a thumbnail, the full path and last saved date of the document appears.

Learn Tab

The Learn tab lets you access instructional resources to help you learn more about the SOLIDWORKS software.

Sections in the Learn tab include:

- Get Started with SOLIDWORKS CAD.
- Get Started with Collaborative Designer for SOLIDWORKS (Learning Path).
- Step-by-Step Tutorials (Integrated Learning).
- MySolidWorks CAD models.
- On my PC.
- Getting Started guide.

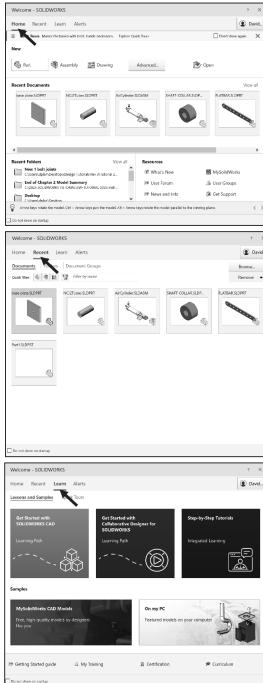

- My Training. Open the My Training section at MySolidWorks.com.
- **Certification**. Open the SOLIDWORKS Certification Program section at solidworks.com. You will need to create an account with a password.
- **Curriculum**. Open the Curriculum section at solidworks.com. You will need to create an account with a password.

When you install the software, if you do not install the Help Files or Example Files, the Tutorials and Samples links are unavailable.

Alerts Tab

The Alerts tab keeps you updated with SOLIDWORKS news.


Sections in the Alerts tab include Critical, Troubleshooting, and Technical.

The Critical section does not appear if there are no critical alerts to display.


• **Troubleshooting**. Includes troubleshooting messages and recovered documents that used to be on the SOLIDWORKS Recovery tab in the Task Pane.

If the software has a technical problem and an associated troubleshooting message exists, the Welcome dialog box opens to the Troubleshooting section automatically on startup, even if you selected **Do not show at startup** in the dialog box.

• Technical Alerts. Open the contents of the SOLIDWORKS Support Bulletins RSS feed (Hotfixes, release news) at solidworks.com.

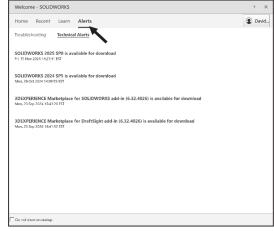



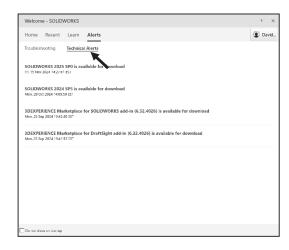

Close the Welcome - SOLIDWORKS dialog box.

Click Close × from the Welcome - SOLIDWORKS 4) dialog box. The SOLIDWORKS Graphics window is displayed. Note: You can also click outside the Welcome - SOLIDWORKS dialog box, in the Graphics window.



View the SOLIDWORKS Graphics window.

	25 SOLIDWORKS	File View Tools 🖈 🔓		$ \cdot \Im \cdot \mathcal{O} \cdot \cdot \cdot $	•	- 🗆 ×
						5
						\bigcirc
						D
			7			
			ÓS sol	.IDWORKS		
				2025		
			1			
Menu Bar toolbar	35 SOLID WORKS	File View Too	ols 🕈 👔	• • 🖻	•	- Ŋ
The SOLIDWORKS (UI)						
is designed to make		- 8	= { ₀ } .	Search	Commands	Q -
maximum use of the						
Graphics window. The						
Menu Bar toolbar contains a	ì				_	×
set of the most frequently us	sed tool buttons	from the				

Standard toolbar.

The following default tools are available:


Welcome to SOLIDWORKS 🙆 - Open the Welcome dialog box; New 🗋 - Create a • new document; Open 🖄 - Open an existing document; Save 🗐 - Save an active document; **Print** - Print an active document; **Undo** - Reverse the last action; **Redo** C - Redoes the last action that you reverse; **Select** - Select Sketch entities, components and more; **Rebuild** - Rebuild the active part, assembly or drawing; File **Properties** \blacksquare - Summary information on the active document; **Options** ξ_{O} - Change system options and Add-Ins for SOLIDWORKS; Login (- Login to SOLIDWORKS. You will need to create an account with a password; Help ? - access to help, tutorials,

File View Tools

Menu Bar menu (No model open)

SOLIDWORKS provides a context-sensitive menu structure. The menu titles remain the same for all

three types of documents (Parts Assemblies and

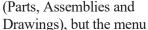



S SOLIDWORKS

items change depending on which type of document is active.

Menu Bar menu (Model open)


The Pin \checkmark option displays the Menu bar toolbar and the Menu bar menu as illustrated. Throughout the book, the Menu bar menu and the Menu bar toolbar are referred to as the Menu bar.

35 SOLID WORKS	File Edit View Insert	Tools	Window		• 🛃	-	• 5	• 🖓	-	- 6	£63

Drop-down menu (Open part document)

SOLIDWORKS takes advantage of the familiar Microsoft[®] Windows user interface. Communicate with SOLIDWORKS through drop-down menus, Context sensitive toolbars, Consolidated toolbars or the CommandManager tabs.

To close a SOLIDWORKS drop-down menu, press the Esc key. You can also click any other part of the SOLIDWORKS Graphics window or click another drop-down menu.

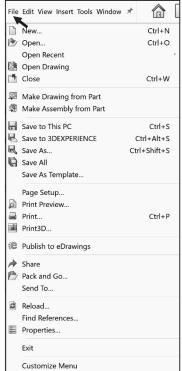

Create a New Part Document

Activity: Create a new Part Document.

A part is a 3D model, which consists of features. What are features? Features are geometry building blocks. Most features either add or remove material. Some features do not affect material (Cosmetic Thread).

Features are created either from 2D or 3D sketched profiles or from edges and faces of existing geometry.

The first sketch of a part is called the Base Sketch. The Base sketch is the foundation for the 3D model. The book focuses on 2D sketches and 3D features.

Features are individual shapes that combined with other features make up a part or assembly. Some features, such as bosses and cuts, originate as sketches. Other features, such as shells and fillets, modify a feature's geometry.

Note: When you create a part or assembly, you can choose a default part or assembly template for Y-up (Y-axis points upward) or Z-up (Z-axis points upward) orientation. In earlier releases, SOLIDWORKS only had a default Y-up orientation. All models in the book are written for a default Y-up orientation. View the Triad in the Graphics area for Y axis orientation.

FeatureManager tabs, CommandManager tabs, Task Pane tabs and other tabs will vary depending on system setup, version and Add-ins.

S SOLIDWORKS File Edit View In	sert Tools Window 🖈 🧃	â 🗋 · 🖻 ·	.	C ^{al} - Br 🜘	? _ □	×
Extruded Revolved Boss/Base Boss/Base Boss/Boss/Boss/Boss/Boss/Boss/Boss/Boss	Base Extruded Hole Revo Cut Wizard Cu	Ived M Lafted Cut	Pattern	Wrap Intersect Mirror	ence Curves Instant3D	^
Features Sketch Markup Evaluate	MBD Dimensions Lifecy	cle and Collaboration	SOLIDWORKS Add-In	s	P. P. P	X
		2 		-		
B LPattern1 Image: Solution of the second sec	Z Z z z z z z z z z z z z z z z z z z z		•			

X

There are two modes in the New SOLIDWORKS Document dialog box: Novice and Advanced.

The Novice option is the default option with three templates.

The Advanced mode contains access to additional templates and tabs that you create in System options.

Utilize the Advanced mode and accept the default Y-up orientation in this book.

Create a new part.


5) Click New from the Menu bar. The New SOLIDWORKS Document dialog box is displayed.

Select the Advanced mode.


- 6) If needed, click the **Advanced** tab. The New SOLIDWORKS Document box is displayed.
- 7) Click the **Templates** tab. Accept the default Y-up orientation.
- 8) Click **Part**. Part is the default template from the New SOLIDWORKS Document dialog box.
- 9) Click OK from the New SOLIDWORKS Document dialog box.

The Advanced mode remains selected for all new documents in the current SOLIDWORKS session. When you exit SOLIDWORKS, the Advanced mode setting is saved.

The default SOLIDWORKS installation contains two tabs in the New SOLIDWORKS Document dialog box: Templates and MBD. The Templates tab corresponds to the default SOLIDWORKS templates. The MBD tab corresponds to the templates utilized in the SOLIDWORKS (Model Based Definition). You may see a Tutorial tab depending on your version.

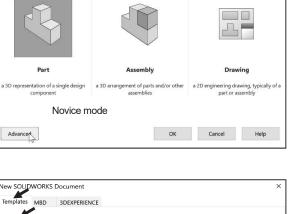

New SOLIDWORKS Document

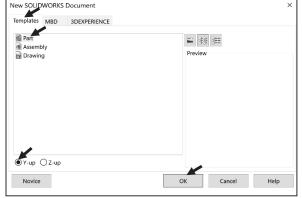



Note: 3DEXPERIENCE users can create templates for the **3D**EXPERIENCE Platform directly from SOLIDWORKS. Use the 3DEXPERIENCE tab in the New SOLIDWORKS Document dialog box.


沷

window as illustrated.

Part1 is displayed in the FeatureManager and is the name of the document. Part1 is the default part name.

The Part Origin *- is displayed in blue in the center of the Graphics window. The Origin represents the intersection of the three default reference planes: Front Plane, Top Plane and Right Plane.


The positive X-axis is horizontal and points to the right of the Origin in the Front view. The positive Y-axis is vertical and points upward in the Front view. The FeatureManager contains a list of features, reference geometry, and settings utilized in the part.

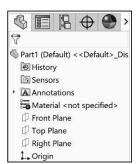

Edit the document units directly from the Graphics


☆ CommandManager tabs, FeatureManager tabs, Task Pane tabs will vary depending on system setup, version and Add-ins.



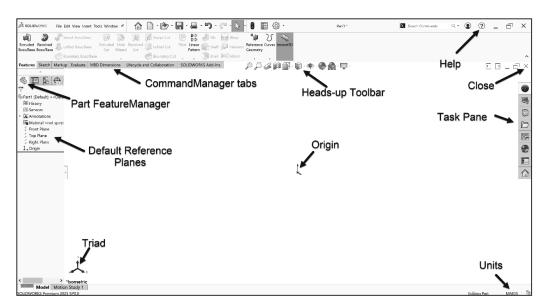

View the Default Sketch Planes.

- **10)** Click the **Front Plane** from the FeatureManager.
- 11) Click the Top Plane from the FeatureManager.
- **12)** Click the **Right Plane** from the FeatureManager.
- **13)** Click the **Origin** from the FeatureManager. The Origin is the intersection of the Front, Top and Right Planes. The Origin point is displayed.
- 14) Click inside the Graphics window.

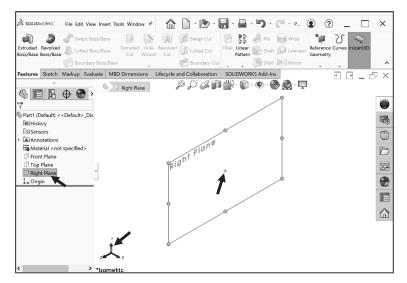


Download all model files from the SDC Publication website

(<u>www.SDCpublications.com/downloads/978-1-63057-703-2</u>). Open the Bracket part. Review the features and sketches in the Bracket FeatureManager. Work directly from a local hard drive.


Activity: Download the SOLIDWORKS folder. Open the Bracket Part.

Download the SOLIDWORKS-MODELS 2025 folder. Open an existing SOLIDWORKS part.

- 15) Download the SOLIDWORKS-MODELS 2025 folder.
- **16)** Unzip the folder. Work from the unzip folder.
- 17) Click Open 7 from the Menu bar menu.
- 18) Browse to the SOLIDWORKS-MODELS 2025\Bracket folder.
- **19)** Double-click the **Bracket** part. The Bracket part is displayed in the Graphics window.

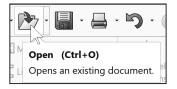



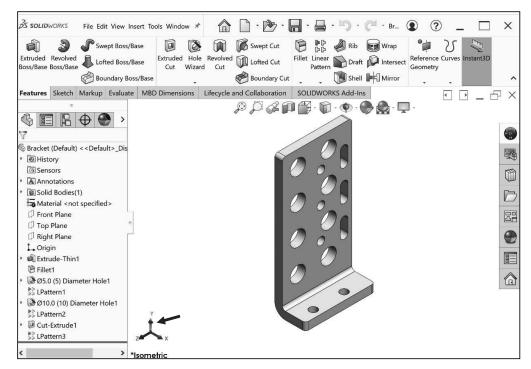

The FeatureManager design tree is located on the left side of the SOLIDWORKS Graphics window. The FeatureManager provides a summarized view of the active part, assembly, or drawing document. The tree displays the details on how the part, assembly or drawing document was created.

Use the FeatureManager rollback bar to temporarily roll back to an earlier state, to absorbed features, roll forward, roll to previous, or roll to the end of the FeatureManager design tree.


You can add new features or edit existing features while the model is in the rolled-back state. You can save models with the rollback bar placed anywhere.

In the next section, review the features in the Bracket FeatureManager using the Rollback bar.

Activity: Use the FeatureManager Rollback Bar option.


Apply the FeatureManager Rollback Bar. Revert to an earlier state in the model.

- 20) Place the mouse pointer over the rollback bar in the FeatureManager design tree as illustrated. The pointer changes to a hand 1. Note the provided information on the feature. This is called Dynamic Reference Visualization.
- 21) Drag the rollback bar up the FeatureManager design tree until it is above the features you want rolled back, in this case 10.0 (10) Diameter Hole1.
- 22) Release the mouse button.

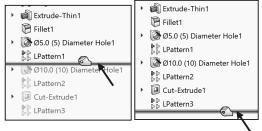


View the first feature in the Bracket Part.

23) Drag the **rollback bar** up the FeatureManager above Fillet1. View the results in the Graphics window. This is a great tool to re-engineer a part.

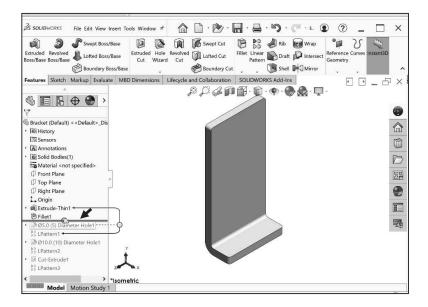

Return to the original Bracket Part FeatureManager.

- 24) Right-click Extrude-Thin1 in the FeatureManager. The Pop-up Context toolbar is displayed.
- **25)** Click **Roll to End**. View the results in the Graphics window.

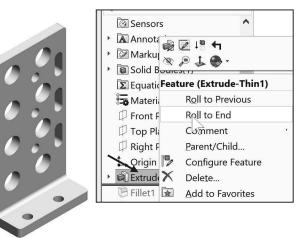

Heads-up View toolbar



SOLIDWORKS provides the user with

numerous view options. One of the most useful tools is the Heads-up View toolbar displayed in the Graphics window when a document is active.

Dynamic Annotation Views a: Only available with SOLIDWORKS MBD (Model Based Definition). Provides the ability to control how annotations are displayed when you rotate models.

In the next section, apply the following tools: Zoom to Fit, Zoom to Area, Zoom out, Rotate and select various view orientations from the Heads-up View toolbar.

Activity: Utilize the Heads-up View toolbar.

Zoom to Fit the model in the Graphics window.

26) Click the **Zoom to Fit** icon. The tool fits the model to the Graphics window.

Zoom to Area on the model in the Graphics window.

Click the Zoom to Area icon. The Zoom to Area icon is displayed.

Zoom in on the top left hole.

28) Window-select the top left corner as illustrated. View the results.

De-select the Zoom to Area tool.

29) Click the Zoom to Area 🔑 icon.

Fit the model to the Graphics window.


30) Press the **f** key.


Rotate the model.

 Hold the middle mouse button down. Drag upward [™],

downward U, to the left U and

to the **right** ^U to rotate the model in the Graphics window.

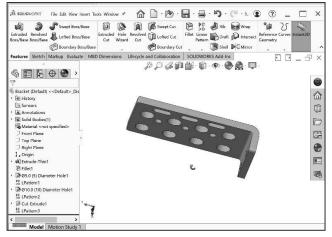

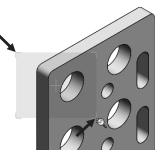



Display a few Standard Views.

- 32) Click inside the Graphics window.
- **33)** Click **Front** from the drop-down Headsup view toolbar. The model is displayed in the Front view.
- **34)** Click **Right** from the drop-down Headsup view toolbar. The model is displayed in the Right view.
- **35)** Click **Top** \square from the drop-down Heads-up view toolbar. The model is displayed in the Top view.


Display an Isometric view of the model.


36) Click **Isometric** [♥] from the drop-down Heads-up view toolbar as illustrated. Note your options. View the results in the Graphics window.

SOLIDWORKS Help

Help in SOLIDWORKS is context-sensitive and in HTML format. Help is accessed in many

ways, including Help buttons in all dialog boxes and PropertyManager and Help ? on the Standard toolbar for SOLIDWORKS Help.

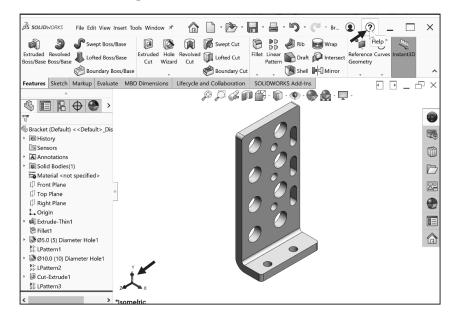

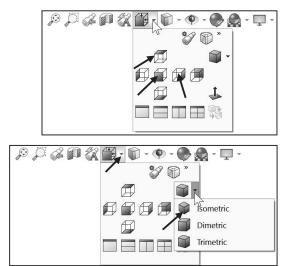

- **37)** Click ⑦ from the Standard toolbar.
- 38) Click (?) Help from the drop-down menu. The SOLIDWORKS Home Page is displayed by default. View your options.

SOLIDWORKS Web Help is active by default under Help in the Main menu.

Close Help. Return to the SOLIDWORKS Graphics window.


39) Close SOLIDWORKS Home.


SOLIDWORKS Tutorials


Display and explore the SOLIDWORKS Tutorials.

- **40)** Click ⑦ from the Standard toolbar.
- **41)** Click **Tutorials**. The SOLIDWORKS Tutorials are displayed. The SOLIDWORKS Tutorials are presented by category.
- **42)** Click the **Getting Started** category. The Getting Started category provides lessons on parts, assemblies, and drawings.
- 43) Click the Basic Techniques category. View the provided information.

In the next section, exit SOLIDWORKS Tutorials. View additional user interface tools.

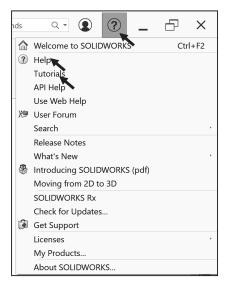

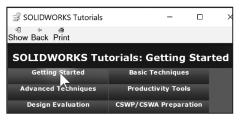

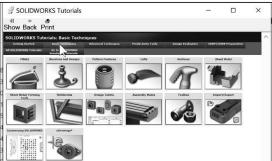

Activity: Close the SOLIDWORKS Tutorials.

Close SOLIDWORKS Tutorials.

44) Close 🔀 SOLIDWORKS Tutorials.

User Interface Tools


The book utilizes additional areas of the SOLIDWORKS User Interface. Explore an overview of these tools in the next section.



Right-click

Right-click in the Graphics window on a model, or in the FeatureManager on a feature or sketch to display the Context-sensitive toolbar. If you are in the middle of a command, this toolbar displays a list of options specifically related to that command.

Right-click an empty space in the Graphics window of a part or assembly, and a selection context toolbar above the shortcut menu is displayed. This provides easy access to the most commonly used selection

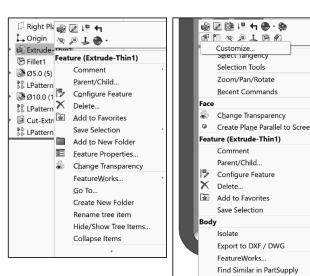

tools.

Consolidated toolbar

Similar commands are grouped together in the CommandManager. For example, variations of the Rectangle sketch tool are grouped in a single fly-out button as illustrated.

If you select the Consolidated toolbar button without expanding:

For some commands such as Sketch, the most commonly used command is performed. This command is the first listed and the command shown on the button.

For commands such as rectangle, where you may want to repeatedly create the same variant of the rectangle, the last used

command is performed. This is the highlighted command when the Consolidated toolbar is expanded.

System feedback icon


SOLIDWORKS provides system feedback by attaching a symbol to the mouse pointer cursor.

The system feedback symbol indicates what you are selecting or what the system is expecting you to select.

As you move the mouse pointer across your model, system feedback is displayed in the form of a symbol, riding next to the cursor as illustrated. This is a valuable feature in SOLIDWORKS.





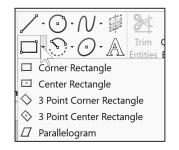

Confirmation Corner

When numerous SOLIDWORKS commands are active, a symbol or a set of symbols is displayed in the upper right-hand corner of the Graphics window. This area is called the Confirmation Corner.

When a sketch is active, the confirmation corner box displays two symbols. The first symbol is the sketch tool icon. The second symbol is a large red X. These two symbols supply a visual reminder that you are in an active sketch. Click the sketch symbol icon to exit the sketch and to save any changes that you made.

When other commands are active, the confirmation corner box provides a green check mark and a large red X. Use the green check mark to execute the current command. Use the large red X to cancel the command.

Confirm changes you make in sketches and tools by using the D keyboard shortcut to move the OK and Cancel buttons to the pointer location in the Graphics window.

Heads-up View toolbar


SOLIDWORKS provides the user with numerous view options from the Standard Views, View and Heads-up View toolbar.

The Heads-up View toolbar is a transparent toolbar that is displayed in the Graphics window when a document is active.

You can hide, move or modify the Heads-up View toolbar. To modify the Heads-up View toolbar, rightclick on a tool and select or deselect the tools that you want to display.


The following views are available. Note: available views are document dependent.

- Zoom to Fit $\overset{(G)}{\sim}$: Fit the model to the Graphics window.
- *Zoom to Area* \checkmark : Zoom to the areas you select with a bounding box.
- *Previous View* 👾 : Display the previous view.

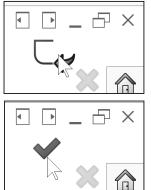





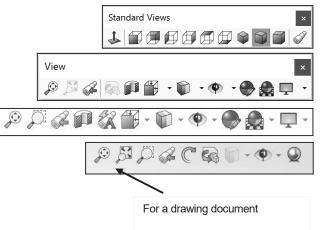

- Section View : Display a cutaway of a part or assembly, using one or more cross section planes.
- Dynamic Annotation Views A: Only available with SOLIDWORKS MBD. Control how annotations are displayed when you rotate a model.

The Orientation dialog has an option to display a view cube (in-context View Selector) with a live model preview. This helps the user to understand how each standard view orientates the model. With the view cube, you can access additional standard views. The views are easy to understand and they can be accessed simply by selecting a face on the cube.


To activate the Orientation dialog box, press (Ctrl + spacebar) or click the View Orientation $\textcircled{}^{\circ}$ icon from the Heads-up View toolbar. The active model is displayed in the View Selector in an Isometric orientation (default view).


Click the View Selector icon in the Orientation dialog box to show or hide the in-context View Selector.


Press **Ctrl + spacebar** to activate the View Selector.


Press the **spacebar** to activate the Orientation dialog box.

- View Orientation box :: Select a view orientation or the number of viewports. The options are: Top, Left, Front, Right, Back, Bottom, Single view, Two view - Horizontal, Two view - Vertical, Four view. Click the dropdown arrow to access Axonometric views: Isometric, Dimetric and Trimetric.
- Display Style \checkmark : Display the style for the active view. The options are: Wireframe, Hidden Lines Visible, Hidden Lines Removed, Shaded, Shaded With Edges.

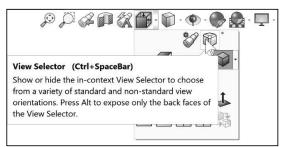

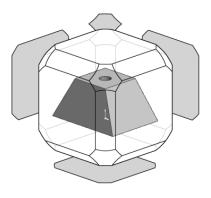

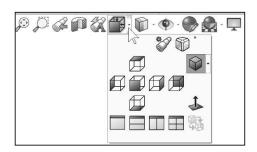

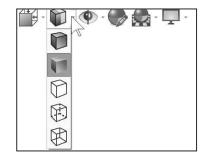

- *Hide/Show Items* ^(P): Select items to hide or show in the Graphics window. The available items are document dependent. Note the View Center of Mass ^(P) icon.
- *Edit Appearance* : Edit the appearance of entities of the model.
- *Apply Scene* : Apply a scene to an active part or assembly document. View the available options.
- View Setting : Select the following settings: RealView Graphics, Shadows In Shaded Mode, Ambient Occlusion, Perspective and Cartoon.
- *Rotate view* C: Rotate a drawing view. Input Drawing view angle and select the ability to update and rotate center marks with view.
- *3D Drawing View* set: Dynamically manipulate the drawing view in 3D to make a selection.


To display a grid for a part, click Options ξ_{OS}^{OS} , Document Properties tab. Click Grid/Snaps, check the Display grid box.

Add a custom view to the Heads-up View toolbar. Press the space key. The Orientation dialog box is displayed. Click the New View tool. The Name View dialog box is displayed. Enter a new named view. Click OK.


Use commands to display information about the triad or to change the position and orientation of the triad. Available commands depend on the triad's context.

Save space in the CommandManager, limit your CommandManager tabs. Right-click on a CommandManager tab. Click Tabs. View your options to display CommandManager tabs.



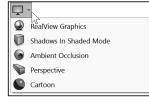



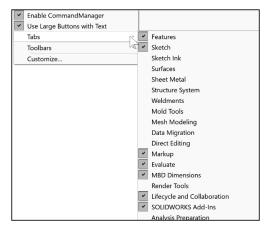


SOLIDWORKS CommandManager

The SOLIDWORKS CommandManager is a Context-sensitive toolbar. By default, it has toolbars embedded in it based on your active document type. When you click a tab below the CommandManager, it updates to display that toolbar. For example, if you click the Sketch tab, the Sketch toolbar is displayed.

The Lifecycle and Collaboration tab is displayed with all active tools if you purchased 3DEXPERIENCE education roles and are logged in.

Below is an illustrated CommandManager for a **Part** document. CommandManager tabs will vary depending on system setup and Add-ins.

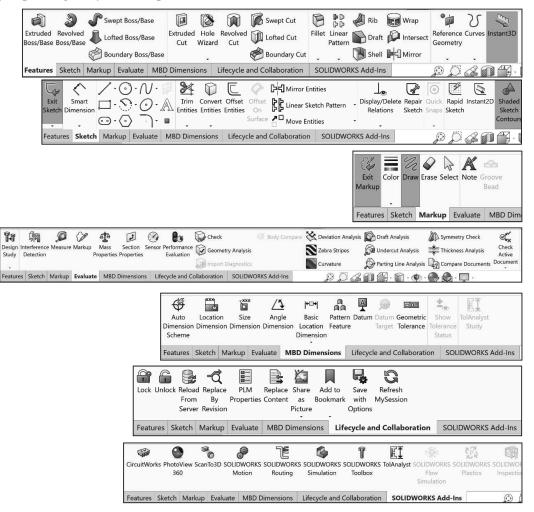


Customize dialog box.

Customize.


The SOLIDWORKS CommandManager is a Context-sensitive toolbar that automatically updates based on the toolbar you want to access. By default, it has toolbars embedded in it based on your active document type. The available tools are feature and document dependent.

Below is an illustrated CommandManager for a Drawing document. CommandManager tabs will vary depending on system setup and Add-ins.

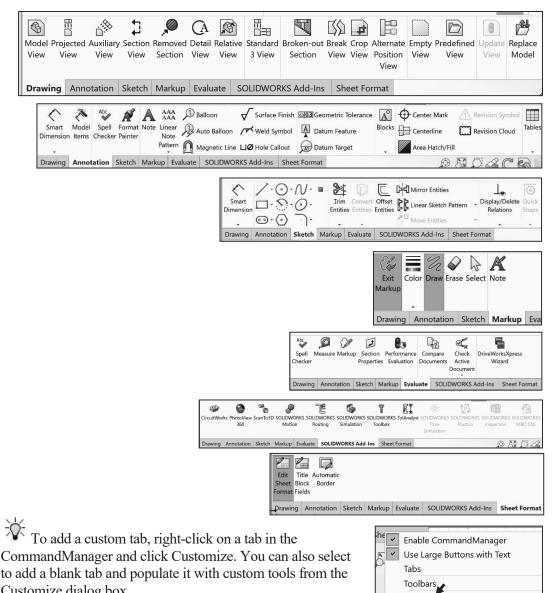

The SOLIDWORKS CommandManager is a Context-sensitive toolbar that automatically updates based on the toolbar you want to access. By default, it has toolbars embedded in it based on your active document type. The available tools are feature and document dependent.

Below is an illustrated CommandManager for an **Assembly** document. CommandManager tabs will vary depending on system setup and Add-ins.

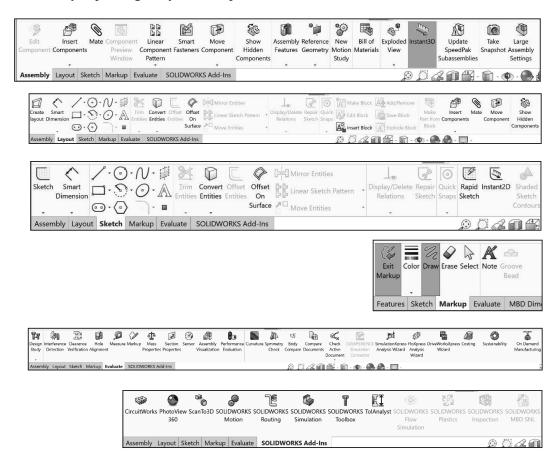

Float the CommandManager. Drag the Features, Sketch or any CommandManager tab. Drag the CommandManager anywhere on or outside the SOLIDWORKS window.

To dock the CommandManager, perform one of the following:

While dragging the CommandManager in the SOLIDWORKS window, move the pointer over a docking icon -

Dock above Dock left Dock right

and click the needed

Q - ()

command.

Double-click the floating CommandManager to revert the CommandManager to the last docking position.


Collapse the CommandManager

Collapse the CommandManager to only display the available tabs. No tools are shown.

Click the Collapsed CommandManager arrow to the right of the active CommandManager tab as illustrated. Only the tabs are displayed.

To display the CommandManager tools back, click on a CommandManager tab. Click the Pin CommandManager as illustrated.

S SOLIDI	VORKS	File E	dit View Ins	ert Tools V	Vindow 🖈			<u>}</u> - [- 4) • (2	- 6
Features	Sketch	Markup	5 Evaluate	MBD Din	nensions	Lifecycl	e and Collab	oration	SOLID\	NORKS A	dd-Ins	
		₹S SOLIDWO	Swa	t View Insert To ept Boss/Base	ools Window 🖈		· P ·		~	C ²¹ · 🔓 Wrap	ا ا ا	ي ن ن ن ن ن ن ن
		Extruded R Boss/Base B	oss/Base 🔶 Lor	ed Boss/Base Indary Boss/Base	Cut Wiza	iu cui	Lofted Cut Boundary Cut nd Collaboration			Intersect	Reference Cur Geometry	ves Instant3D
	ł									? _		X
										Pin C	ommandN	/anager

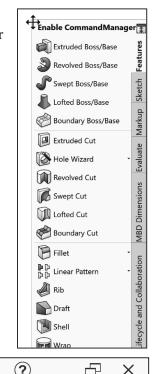

Part FeatureManager Design Tree

The Part FeatureManager consists of various tabs:


- *FeatureManager design tree* [₩] tab.
- PropertyManager 🔳 tab.
- ConfigurationManager 🛱 tab.
- $DimXpertManager \oplus tab.$
- *DisplayManager* tab.
- *CAM FeatureManager tree* tab.
- CAM Operation tree 🖪 tab.
- CAM Tools tree **7** tab.

Click the direction arrows to expand or collapse the FeatureManager design tree.

CommandManager and FeatureManager tabs and folder files will vary depending on your SOLIDWORKS applications and Add-ins.

Select the Hide/Show FeatureManager Area tab

 \square as illustrated to enlarge the Graphics window for modeling.

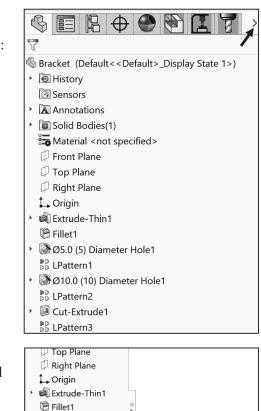


 ★ Ø5.0 (5) Diameter H ↓ LPattern1
 Hide FeatureManager Tree Area
 Ø01.0 (10) Diameter

LPattern2

🕨 间 Cut-Extrude1

₽₽ ₽₽ LPattern3

The Sensors tool implementation in the Feature Manager monitors selected properties in a part or assembly and alerts you when values deviate from the specified limits. There are five sensor types: Simulation Data, Mass properties, Dimensions, Measurement and Costing Data.

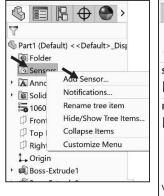



Various commands provide the ability to control what is displayed in the FeatureManager design tree.

1. Show or Hide FeatureManager items.

Click **Options** from the Menu bar. Click **FeatureManager** from the System Options tab. Customize your FeatureManager from the Hide/Show tree Items dialog box.

System Options Document P	roperties			🖓 Search Options	
Gener	▲ Scroll selected item into	/iew			
3DEXPERIENCE Integration	Name feature on creation	1			
MBD	Arrow key navigation				
Drawings					
Display Style Area Hatch/Fill	Dynamic highlight				
- Area Hatch/Hill - Performance	Use transparent flyout Fe	atureManager tree in parts/as	semblies		
- Performance Colors	Enable FeatureManager	ree Elter			
Sketch					
-Relations/Snaps	Allow component files to	be renamed from FeatureMa	nager tree		
Display	Enable preview of hidder	components			
Selection	Edit name with slow dou				
Performance					
Assemblies	Show translated feature i	ames in FeatureManager tree		Chinese-simplified Chinese-traditional	
External References				Chinese-traditional	
Default Templates	Comments			Czerb	
File Locations	Automatically add time	stamp to comments		English	
FeatureManager	Show Comments in Pro	merti-Manacier		French	
Spin Barrements	Contraction Continents in the	deser (A reserve de r		German	
View	Hide/show tree items			Italian	
Backup/Recover	indepshow deelitems			Japanese	
Touch Hole Wizard/Toolbox	iki Blocks	Automatic 🗸 🗸	Ecuations	Korean Polish	
Hole Wizard/ I oolbox File Explorer				Portuguese-Brazilian	
File Explorer Search	Design Binder	Automatic ~	3 Material	Russian	
Search Collaboration			-	Spanish	
Messages/Errors/Warnings	A Annotations	Show ~	Default Planes	Turkish	
Dismissed Messages					
Synchronize Settings	Solid Bodies	Automatic V	1. Origin	Show ~	
Import	THE JOINT DUDIES		Le orgin		
Export	V 194		P		
Reset					
				OK Cancel H	Help

2. Filter the FeatureManager design tree. Enter information in the filter field. You can filter by *Type of features, Feature names, Sketches, Folders, Mates, User-defined tags* and *Custom properties*.


Tags are keywords you can add to a SOLIDWORKS document to make them easier to filter and to search. The Tags @ icon is located in the bottom right corner of the Graphics window.


Collapse all items in the FeatureManager, **right-click** and select **Collapse items**, or press the **Shift** + C keys.

The FeatureManager design tree and the Graphics window are dynamically linked. Select sketches, features, drawing views, and construction geometry in either pane.

Split the FeatureManager design tree and either display two FeatureManager instances, or combine the FeatureManager design tree with the ConfigurationManager or PropertyManager.

Move between the FeatureManager design tree, PropertyManager, ConfigurationManager, DimXpertManager, DisplayManager and others by selecting the tab at the top of the menu.

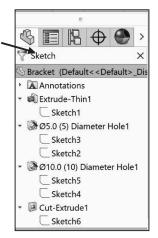

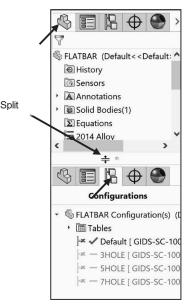

The ConfigurationManager tab is located to the right of the PropertyManager tab. Use the ConfigurationManager to create, select and view multiple configurations of parts and assemblies.

The icons in the ConfigurationManager denote whether the configuration was created manually or with a design table.

The DimXpertManager ⊕ tab provides the ability to insert dimensions and tolerances manually or automatically. The options are: Auto Dimension Scheme ⊕, Auto Pair Tolerance ➡, Basic, Location Dimension [*□*], Basic Size Dimension , General Profile Tolerance ➡, Show Tolerance Status ★, Copy Scheme ⊕, Import Scheme ⊕, TolAnalyst Study ♥ ♥ and Datum Target ∞.


TolAnalyst is available in SOLIDWORKS Premium.

Fly-out FeatureManager


The fly-out FeatureManager design tree provides the ability to view and select items in the PropertyManager and the FeatureManager design tree at the same time.

Throughout the book, you will select commands and command options from the drop-down menu, flyout FeatureManager, Context toolbar, or from a SOLIDWORKS toolbar.

Another method for accessing a command is to use the accelerator key. Accelerator keys are special keystrokes, which activate the drop-down menu options. Some commands in the menu bar and items in the drop-down menus have an underlined character.

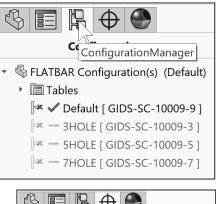



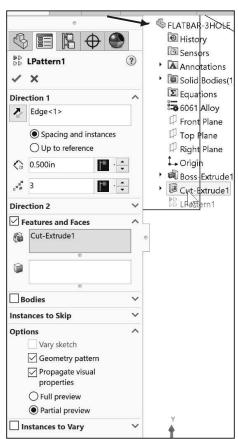

Task Pane

The Task Pane is displayed when a SOLIDWORKS session starts. You can show, hide, and reorder tabs in the Task Pane. You can also set a tab as the default so it appears when you open the Task Pane, pin or unpin to the default location. **Note**: The Task Pane icon order may be different.

The Task Pane contains the following default tabs:

- 3DEXPERIENCE 🖤.
- 3DEXPERIENCE files on This PC
- Design Library 🕮 .
- File Explorer \square .
- View Palette
- Appearances, Scenes and Decals
- Custom Properties 🔳.
- SOLIDWORKS Resources 🛱 .
- 占

Additional tabs are displayed with Add-Ins.

3DEXPERIENCE

The 3DEXPERIENCE

tab provides access to the **3D**EXPERIENCE Platform. The **3D**EXPERIENCE Platform provides downloadable content (DLC) from a secure cloud location within your SOLIDWORKS session. The platform enables you



to collaborate with students and teams on and off campus through a browser.

Think of the **3D**EXPERIENCE Platform simply as a SOLIDWORKS Add-In on your desktop. Experience a single modeling environment. Access the platform within the SOLIDWORKS Task Pane.



Create and register your **3D**EXPERIENCE ID (credentials) to the platform. Go to <u>https://solidworks.com/academic-cloud</u> to create and register a new ID. **Note**: In an academic environment, it is strongly recommended to use your school's assigned email address.

3DEXPERIENCE files on This PC

The 3DEXPERIENCE files on This PC ¹ tab displays the models on your PC which were saved to the **3D**EXPERIENCE platform. There are three filters: **Parts**, **Assemblies**, and **Drawings**.

Design Library


The Design Library including library features.

The Design Library tab contains default selections. Each default selection contains additional sub categories.

The default selections are:

- Design Library.
- Toolbox.
- SOLIDWORKS Content (Internet access required).
- 3D Components PartSupply.

Activate the SOLIDWORKS Toolbox. Click SOLIDWORKS Toolbox from the SOLIDWORKS Add-Ins tab.

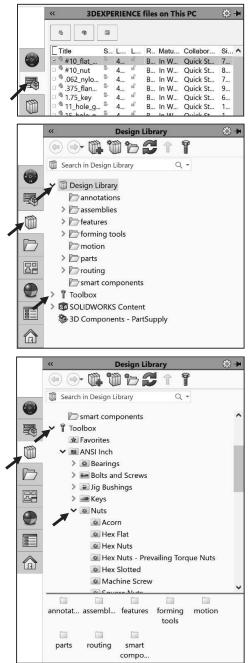

To access the Design Library folders in a nonnetwork environment, click Add File Location

and browse to the needed path. Paths may vary depending on your SOLIDWORKS version and window setup. In a network environment, contact your IT department for system details.



File Explorer D tab duplicates Windows Explorer from your local computer and displays:


- Open in SOLIDWORKS.
- Desktop.


View Palette

The View Palette 🕮 tab provides the ability to insert drawing views of an active document, or click the Browse button to locate the desired document.

Click and drag the view from the View Palette into an active drawing sheet to create a drawing view.

TE	S	1	EI		<u>ارم</u>	Se
SOLIDWORKS	SOLIDWORKS	SOLIDWORKS	TolAnalyst	SOLIDWORKS	SOLIDWORKS	SOLIDWORK
Routing	Simulation	Toolbox		Flow	Plastics	Inspection
				Simulation		
s SOLIDWO	ORKS Add-In		VORKS To	olbox		0

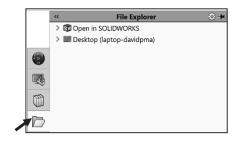

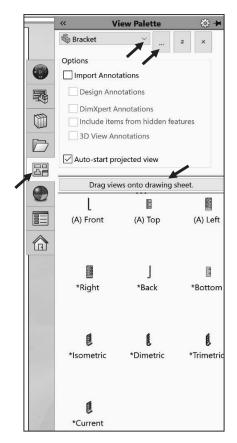

SOLIDWORKS® 2025 Quick Start

Appearances, Scenes, and Decals

Appearances, Scenes, and Decals v tab provides a simplified way to display models in a photo-realistic setting using a library of Appearances, Scenes, and Decals.

An appearance defines the visual properties of a model, including color and texture. Appearances do not affect physical properties, which are defined by materials.

Scenes provide a visual backdrop behind a model. In SOLIDWORKS they provide reflections on the model. PhotoView 360 is an Add-in. Drag and drop a selected appearance, scene or decal on a feature, surface, part or assembly.

Custom Properties


The Custom Properties 🔲 tab provides the ability to enter custom and configuration specific properties directly into SOLIDWORKS files.

SOLIDWORKS Resources

The SOLIDWORKS Resources icon displays the following default selections:

- Welcome to SOLIDWORKS.
- SOLIDWORKS Tools.
- Online Resources.
- Subscription Services.

Other user interfaces are available during the initial software installation selection: *Machine Design, Mold Design, Consumer Products Design, etc.*

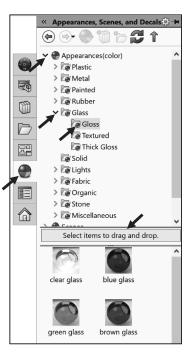

	« Custom P	roperties 🛛 🔅 🕨
	Apply	Reset
0		now' to launch the
5	Property Tab Builde	a template, place it in
		in Tools - Options -
Ð	Press F5 to refresh t	the page.
	Creat	te now



Dynamic Reference Visualization (Parent/Child)

Dynamic Reference Visualization provides the abi to view the parent/child relationships between iten the FeatureManager design tree.

When you hover over a feature with references in FeatureManager design tree, arrows display showing the relationships.

If a reference cannot be shown because a feature is not expanded, the arrow points to the feature that contains the reference and the actual reference appears in a text box to the right of the arrow.

Use Dynamic reference visualization for a part, assembly and mates.

To display the Dynamic Reference Visualization, click View, User Interface, **Dynamic Reference Visualization** Parent/Child) from the Main menu bar.

	7
ability	S FLATBAR (Default < Default > _Display
items in	▶ 🕑 History
	Sensors
s in the	Annotations
owing	 Image: Solid Bodies(1)
	Σ Equations
	2014 Alloy
	🗇 Front Plane 🗲
	🗇 Top Plane
	🗇 Right Plane
	↓ Origin ←
	✓
	Sketch1
	Cut-Extinude1
	₽ [©] LPattern1
View Insert Tools Win	dow * 🏠 🗋 • 🏲 • 🔚 • 🖨 • 🏷 • 🥂 • 😓 •
Redraw Screen Capture	Ctrl+R um Geometric Show TolAnalyst
Display	get Tolerance Study Status
Modify Lights and Camer	as RKS Add-Ins
Hide / Show	
Toolbars	•
Workspace	· · · · · · · · · · · · · · · · · · ·
User Interface	FeatureManager Tree Area F9
Giouch Mode	F11 Dynamic Reference Visualization (Parent)
Customize Menu	✓ Toolbars F10
	MotionManager Status Bar
	Status bai

Mouse Movements

A mouse typically has two buttons: a primary button (usually the left button) and a secondary button (usually the right button). Most mice also include a scroll wheel between the buttons to

help you scroll through documents and to Zoom in, Zoom out and rotate models in SOLIDWORKS. It is highly recommended that you use a mouse with at least a Primary, Scroll and Secondary button.

thy the secondary button (2) Scroll wheel (3) Secondary button

Single-click

To click an item, point to the item on

the screen, and then press and release the primary button (usually the left button). Clicking is most often used to select (mark) an item or open a menu. This is sometimes called single-clicking or left-clicking.

Double-click

To double-click an item, point to the item on the screen, and then click twice quickly. If the two clicks are spaced too far apart, they might be interpreted as two individual clicks rather than one double-click. Double-clicking is most often used to open items on your desktop. For example, you can start a program or open a folder by double-clicking its icon on the desktop.

Right-click

To right-click an item, point to the item on the screen, and then press and release the secondary button (usually the right button). Right-clicking an item usually displays a list of things you can do with the item. Right-click in the open Graphics window or on a command in SOLIDWORKS, and additional pop-up context is displayed.

Scroll wheel

Use the scroll wheel to zoom-in or to zoom-out of the Graphics window in SOLIDWORKS. To zoom-in, roll the wheel backward (toward you). To zoom-out, roll the wheel forward (away from you).

Save a SOLIDWORKS Document as Previous Version

Ø

Ø

NCJ22005Z-MP

pneumatic-cylinder-b

NCJ2Rods

NCJ2Tubes

You can save SOLIDWORKS parts, assemblies, and drawings created or saved in the latest version of SOLIDWORKS as fully functional documents in a previous version of SOLIDWORKS.


You can save documents back to the previous two versions. Note: Pack and Go also supports this functionality.

You can save SOLIDWORKS 2025 files as SOLIDWORKS 2024 or SOLIDWORKS 2023 versions.

You are required to either modify the name or save to a different file folder.

Note: SOLIDWORKS users must have an active subscription license to access this functionality. **3DEXPERIENCE** users are active subscribers by default.

To check the Previous Release. Click Tools > Evaluate from the Main menu. Click Previous Release Check. View the results.

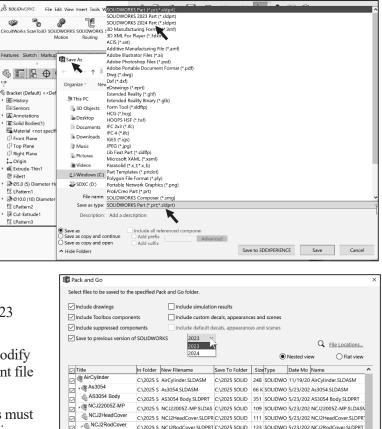

👽 Previous Releas	e Check	
Previous Release:	SOLIDWORKS 2024	~

102 5011040 5/22/202

C:\2025 S NCJ2RodCover.SLDPRT C:\2025 SOLID 123 SOLIDWO 5/23/202 NCJ2RodCover.SLDPRT

C:\2025 S NCJ2Rods.SLDPRT C:\2025 SOLID 110 SOLIDWO 5/23/202 NCJ2Rods.SLDPRT

C:\2025 S NCJ2Tubes.SLDPRT C:\2025 SOLID 106 SOLIDWO 11/19/20 NCJ2Tubes.SLDPRT

CADOR COULD

tic culindar he

C:\2025 S NCJ22005Z-MP.SLDAS C:\2025 SOLID 109 SOLIDWO 5/23/202 NCJ22005Z-MP.SLDASA

Translate Feature Names in the FeatureManager Tree

SOLIDWORKS provides the ability to display the FeatureManager in English and a second language.

Check Options from the Main menu. Click the System Options tab. Click the FeatureManager folder. Check the Show translated feature names in the FeatureManager tree box. Click the drop-down menu to view the available languages. This is a great way to share your work in various languages.

System Options - FeatureManager								
Surter Onting				င်္ခြဲ့ Search Options				
System Options Document Prope								
General A 3DEXPERIENCE Integration	Scroll selected item into view							
MBD	Name feature on creation							
Drawings	Arrow key navigation							
Display Style	Dynamic highlight							
Area Hatch/Fill	Use transparent flyout FeatureManager tree in parts/assemblies							
Performance								
Colors	Enable FeatureManager tree filter							
Sketch Relations/Snaps	Allow component files to be renamed from FeatureManager tree							
Display	Enable preview of hidden components							
Selection	Edit name with slow double clic							
Performance								
Assemblies	Show translated feature names	Chinese-traditional						
External References	Comments			Chinese-simplified				
Default Templates File Locations				Czech				
FeatureManager	Automatically add timestamp	English						
Spin Box acrements	Show Comments in PropertyManager French German							
View				Italian				
Backup/Recover	Hide/show tree items			Japanese				
Touch	R Blocks	Automatic 🗸	Σ Equations	Korean				
Hole Wizard/Toolbox	in procis		Equations	Polish Portuguese-Brazilian				
File Explorer Search	Design Binder	Automatic 🗸	🚡 Material	Russian				
Collaboration				Spanish				
Messages/Errors/Warnings	Annotations	Show ~	🔎 Default Planes	Turkish				
je i i i i i i i i i i i i i i i i i i i								

•	Ŝ≣₿��♪
S ■ B ⊕ ● >	4
7	🚳 Bracket (Default) < <default>_Display State 1</default>
lefault) < <default>_Dis</default>	History {Historie}
 History 	Sensors (Sensoren)
C Sensors	Annotations {Beschriftungen}
Annotations	Solid Bodies(1) {Volumenkörper}
 Solid Bodies(1) 	🚟 Material <not specified=""></not>
Material <not specified=""></not>	🗇 Front Plane
Front Plane	🛱 Top Plane
Top Plane	🛱 Right Plane
Right Plane Origin	L Origin {Ursprung}
 Chighi Extrude-Thin1 	Aligned Australia (Linear-Austragen-Dünn1)
Fillet1	Fillet1 {Verrundung1}
 Ø Ø5.0 (5) Diameter Hole1 	 Ø Ø5.0 (5) Diameter Hole1
DE LPattern1	₽ ₽ ₽ ₽ LPattern1 {Lineares Muster1}
 Ø10.0 (10) Diameter Hole1 	 Ø10.0 (10) Diameter Hole1
₽ ₽ ₽ ₽ ₽ ₽	₽₽ ₽₽ LPattern2 {Lineares Muster2}
 Cut-Extrude1 	Gut-Extrude1 {Schnitt-Linear austragen1}
₽© LPattern3	₽ ₽ ₽ ₽ LPattern3 {Lineares Muster3}

Share and Send To option

The Share option provides the ability to share a part, assembly or drawing directly to a person or team for design review and comments.

The Share option (Share files on 3DDrive) requires access to the **3D**EXPERIENCE Platform. The **3D**EXPERIENCE Platform provides downloadable content (DLC) from a secure cloud location within your SOLIDWORKS session.

The platform enables you to collaborate with students and teams on and off campus through a browser.

Secure links, not files, can be created to share information with your team.

To use the Share option, you need to purchase a 3DEXPERIENCE education offer from your VAR.

Create and register your 3DEXPERIENCE ID (credentials) to the platform. An internet connection is required.

The Send To option provides the ability to email a part, assembly or drawing directly to a person or team.

	File	Edit View Insert Tools Windo			
mbly or d		New Open			
		Open Recent Open Drawing Close			
s to the form 1d		Make Drawing from Part Make Assembly from Part			
	R	Save to This PC Save to 3DEXPERIENCE Save As Save All Save As Template			
		Page Setup Print Preview Print Print3D			
/		Publish to eDrawings Share Pack and Go Send To			
·		Send 10			
\downarrow \neg Untitled - Message (Plain Text) ρ \Box X					
rt Options Format Text Review Help					

■ 日 り ペ

ĥ • ≪

 \geqslant

Send

d P

Message

265 KB AS3054 Body.SLDPRT

382 KB

Ins

То

Cc Subject AirCylinder.SLDASM

~

~

File

Summary

The SOLIDWORKS (UI) is designed to make maximum use of the Graphics window for your model. Displayed toolbars and commands are kept to a minimum.

The SOLIDWORKS User Interface and CommandManager consist of the following main options: Menu bar toolbar, Menu bar menu, Drop-down menus, Context toolbars, Consolidated fly-out menus, System feedback icons, Confirmation Corner and Heads-up View toolbar.

File Edit View Insert Tools Window 🖈

Swept Boss/Base

Lofted Boss/Base

Boundary Boss/Base

Cut Wizard

35 SOLIDWORKS

Extruded Revolved

Boss/Base Boss/Base

2

The Part CommandManager controls the display of tabs: *Features*, *Sketch*, Markup, Evaluate, MBD Dimensions, Lifecycle and Collaboration and various SOLIDWORKS Add-Ins.

The FeatureManager consists of various tabs:

- *FeatureManager design tree* ⁽⁴⁾ tab.
- PropertyManager 🗉 tab.
- ConfigurationManager 🛱 tab.
- $DimXpertManager \oplus tab.$
- DisplavManager tab.
- *CAM FeatureManager tree* tab.
- CAM Operation tree 🛃 tab.
- CAM Tools tree 🚺 tab.

Click the direction arrows to expand or collapse the FeatureManager design tree.

CommandManager, FeatureManager, and file

folders will vary depending on system set-up, Add-ins and **3DEXPERIENCE** Roles.

You learned about creating a new SOLIDWORKS part and opening an existing SOLIDWORKS part along with using the Rollback bar to view the sketches and features.

If you modify a document property from an Overall drafting standard, a modify message is displayed as illustrated.

Overall drafting standard ANSI-MODIFIED

Derived from: ANSI

Features Sketch Markup Evaluate MBD Dimensions Lifecycle and Collaboration G 7 🖑 Bracket (Default<<Default> Display State 1 History Sensors Annotations Solid Bodies(1) 🚡 Material <not specified> Front Plane D Top Plane 🗇 Right Plane Crigin Extrude-Thin1 🖲 Fillet1 Ø5.0 (5) Diameter Hole1 LPattern1 Ø10.0 (10) Diameter Hole1 LPattern2 Cut-Extrude1 LPattern3

Extruded Hole Revolved DL Lofted Cut

Cut

7 - 🏞

Swept Cut

Boundary Cut

Draft

SOLIDWORKS Add-In

In Chapter 2, establish a SOLIDWORKS session. Learn about 2D Sketching and 3D features.

Create a new part. Create the Wheel for the Fly Wheel subassembly.


Utilize the Fly Wheel sub-assembly in the final Stirling Engine assembly.

Apply the following sketch and feature tools: Circle, Line Centerline, Centerpoint Straight Slot, Mirror Entities, Extruded Boss, Extruded Cut, Revolved Boss, Circular Pattern, Hole Wizard and Fillet.

Incorporate design change into a part using proper design intent, along with applying multiple geometric relations: Coincident, Vertical, Horizontal, Tangent and Midpoint and feature and sketch modifications.

Utilize the Material, Mass Properties, Appearance and Measure tool on the Wheel.



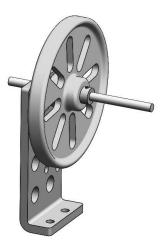

Notes: